

HygroMATIK®

FlexLine

Control Climate



Manual



FL-T.EN
E-8881166

Certain computer programs contained in this product [or device] were developed by HygroMatik GmbH ("the Work(s)").

Copyright © HygroMatik GmbH [19.09.2018]

FlexLine Control

All Rights reserved.

Current version of this manual can be found at: www.airtrend.rs

HygroMatik GmbH grants the legal user of this product [or device] the right to use the Work(s) solely within the scope of the legitimate operation of the product [or device]. No other right is granted under this licence. In particular and without prejudice to the generality of the foregoing, the Work(s) may not be used, sold, licensed, transferred, copied or reproduced in whole or in part or in any manner or form other than as expressly granted here without the prior written consent of HygroMatik GmbH.

Information in this manual is subject to change or alteration without prior notice.

▲WARNING**Risk of electrical shock!**

Hazardous electrical high voltage!

All electrical work to be performed by certified expert staff (electricians or expert personnel with equivalent training) only.

1. Introduction	5
1.1 Typographic Distinctions	5
1.2 Documentation	5
1.3 Symbols in Use	5
1.3.1 Specific Symbols related to Safety Instructions	5
1.3.2 General Symbols	5
2. Safety Instructions	7
2.1 Guidelines for Safe Operation	7
2.1.1 Scope	7
2.1.2 Unit control	7
2.1.3 Unit Operation	7
2.1.4 Mounting, dismantling, maintenance and repair of the unit	8
2.1.5 Electrical	8
2.2 Disposal after dismantling	8
3. Description of control	9
3.1 General description	9
3.2 Layout of control	9
3.3 Mainboard	10
3.3.1 Connections on the mainboard	11
3.4 Expansion board (double cylinder units)	12
3.4.1 Connections on the expansion board	12
3.5 Relay circuit board	13
3.5.1 Connections on the relay board	13
3.6 Electrical connection	14
3.6.1 Connection of control voltage	14
3.6.2 Connection of interlock (safety) system	14
3.6.3 1 step operation	15
3.6.4 Operation with external controller or active humidity sensor	15
3.6.5 Connecting the digital input (DI)	16
3.6.6 Wiring for control signal and safety (interlock) system for multiple units	16
4. Screen	17
5. Operation of control	19
5.1 Operation basics	19
5.2 Screen 1 - Commissioning	21
5.2.1 Setting the language	21
5.2.2 Input of date and time	21
5.2.3 Control settings	22
5.2.4 Line-up of the commissioning parameters	23
5.3 Screen 2 - Main screen	24
5.4 Password entry	26
5.5 Screen 3 - Main menu (user level)	27
5.6 User level submenus	27
5.6.1 Settings submenu	29

5.6.2 Read values submenu	30
5.6.3 History submenu	32
5.7 Screen 3 - Main menu (operator level)	34
5.8 Operator level submenus	34
5.8.1 Settings submenu	35
5.8.2 Read values submenu	35
5.8.3 Control submenu	36
5.8.4 Service submenu	37
5.8.5 History submenu	39
5.8.6 Blow-down submenu	40
5.8.7 Fill parameters submenu	40
5.8.8 Functions submenu	41
5.8.9 Communication interface submenu	43
5.8.10 Weekly timer submenu	44
5.8.11 Recording submenu	45
5.8.12 Cylinder extension submenu	47
5.8.13 Relay extension 1 submenu	48
5.8.14 Relay extension 2 submenu	49
6. Faults and Warnings	53
6.1 Fault Management	53
6.1.1 Table of Fault Messages, possible Causes and Countermeasures	53
6.2 Service messages and warnings	59
6.3 Table of functional disruptions	60
7. Wiring diagrams	64
7.1 FLE Single cylinder units	64
7.2 FLE Double cylinder units	68
7.3 FLH Single cylinder units	72
7.4 FLH Double cylinder units	76
7.5 FLP Single cylinder units	80
7.6 FLP Process	84
8. Glossary	88
9. Technical Data	93

1. Introduction

Dear Customer,

Thank you for choosing a HygroMatik steam humidifier.

HygroMatik steam humidifiers represent the latest in humidification technology.

In order to operate your HygroMatik steam humidifier safely, properly and efficiently, please read these operating instructions.

Employ your steam humidifier only in sound condition and as directed. Consider potential hazards and safety issues and follow all the recommendations in these instructions.

If you have additional questions, please contact your expert dealer.

For all technical questions or spare parts orders, please be prepared to provide unit type and serial number (see name plate on the unit).

1.1 Typographic Distinctions

- Preceded by a bullet: general specifications
- » Preceded by an arrow: procedures for servicing or maintenance which should or must be performed in the indicated order
- ☑ Installation step which must be checked off.
- italics* Terms used with graphics or drawings

1.2 Documentation

Validity:

This documentation is valid for the control built in the FlexLine unit series with the following designations:

FLExx-T

Flexline unit type: Electrode Steam Humidifier (ELDB)

FLHxx-T / FLPxx-T / FLPxx-TPRO

Flexline unit type: Heater Steam Humidifier (HKDB)

Retention

Please retain these operating instructions in a secure, always accessible location. If the product is resold, turn the documentation over to the new operator. If the documentation is lost, please contact HygroMatik.

Versions in Other Languages

These operating instructions are available in several languages. If interested, please contact HygroMatik or your HygroMatik dealer.

1.3 Symbols in Use

1.3.1 Specific Symbols related to Safety Instructions

According to ANSI Z535.6 the following signal words are used within this document:

▲ DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

▲ WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

▲ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

1.3.2 General Symbols

Please note

This symbol is used whenever a situation requires special attention beyond the scope of safety instructions.

Intended Use

The control described is an integral part of a HygroMatik steam humidifier. Use for other applications is not permitted. All instructions on intended use, which are given in connection with the basic device, apply.

Proper usage also comprises the adherence to the conditions specified by HygroMatik for:

- installation
- dismantling
- reassembly
- commissioning
- operation
- maintenance
- disposal

Only qualified and authorised personnel may operate the unit. Persons transporting or working on the unit must have read and understood the corresponding parts of the Operation and Maintenance Instructions and especially the chapter 2. „Safety Notes“. Additionally, operating personnel must be informed of any possible dangers. You should place a copy of the Operation and Maintenance Instructions at the unit's operational location (or near the unit).

By construction, HygroMatik steam humidifiers are not qualified for exterior application.

▲ WARNING

Risk of scalding!

Steam with a temperature of up to 100 °C is produced.

Do not inhale steam directly!

2. Safety Instructions

These safety instructions are required by law. They promote workplace safety and accident prevention.

2.1 Guidelines for Safe Operation

2.1.1 Scope

Comply with the accident prevention regulation „DGUV Regulation 3“ to prevent injury to yourself and others. Beyond that, national regulations apply without restrictions.

2.1.2 Unit control

Do not perform any work which compromises the safety of the unit. Obey all safety instructions and warnings present on the unit.

In case of a malfunction or electrical power disruption, switch off the unit immediately and prevent a restart. Repair malfunctions promptly.

▲ WARNING

Restricted use.

IEC 60335-1 stipulates as follows:

This device may be used by children of eight years of age and above as well as by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge so long as they are supervised or have been instructed regarding the safe use of the device and understand the hazards that may result from it. Cleaning and user maintenance of the unit must not be undertaken by children without supervision.

2.1.3 Unit Operation

▲ WARNING

Risk of scalding!

Uncontrolled hot steam escape in case of leaking or defective components possible. Switch off unit immediately.

NOTICE

Risk of material damage!

The unit may be damaged if switched on repeatedly following a malfunction without prior repair.

Rectify defects immediately!

The unit must not be operated on a DC power supply.

The unit may only be used connected to a steam pipe that safely transports the steam.

Regularly check that all safety and monitoring devices are functioning normally. Do not remove or disable safety devices.

2.1.4 Mounting, dismantling, maintenance and repair of the unit

NOTICE

The HygroMatik steam humidifier is IP20 protected. Make sure that the unit is not object to dripping water in the mounting location.

Installing a humidifier in a room without water discharge requires safety devices to protect against water leakages.

- Use genuine spare parts only
- After any repair work, have qualified personnel check the safe operation of the unit
- Attaching or installing of **additional components** is permitted only with the **written consent** of the manufacturer

2.1.5 Electrical

⚠ WARNING

Risk of electrical shock!

Hazardous electrical voltage!

Any work on the electrical system to be performed by certified expert staff (electricians or expert personnel with comparable training) only.

Disconnect unit components from electrical power supply prior to work.

After electrical installation or repair work, test all safety mechanisms (such as grounding resistance).

NOTICE

Use only original fuses with the appropriate amperage rating.

Regularly check the unit's electrical equipment. Promptly repair any damage such as loose connections or burned wiring.

Responsibility for intrinsically safe installation of the HygroMatik steam humidifiers is incumbent on the installing specialist company.

2.2 Disposal after dismantling

NOTICE

The operator is responsible for the disposal of unit components as required by law.

3. Description of control

3.1 General description

The control is integrated into the steam humidifier and is operated via a 3.5" graphic display on the front of the unit.

The only other operating element, which is also located on the front of the unit, is a control switch whose positions are assigned as follows:

Pos. "0": The unit is switched off

Pos. "I": The unit is switched on and the control is active

Pos. "II": The cylinder water is pumped off manually without the participation of the control. The control is not active, the display remains dark.

Control switch




The relay boards are connected to the mainboard via a plug system.

The DIN rail relays are connected via cables with plug. 2 additional relay modules can be used, with 2 relays each.

For use with double cylinder units, an expansion board is added to the mainboard.

The fuse protection of the control voltage for all boards with 2 x 2.5 A fast (F1, F2) takes place on the mainboard.

The external circuitry for the control voltage and the interlock (safety) system are connected directly to the mainboard on plug ST1. If additional boards are connected, the connection moves from the mainboard to the outermost board (see sketch).

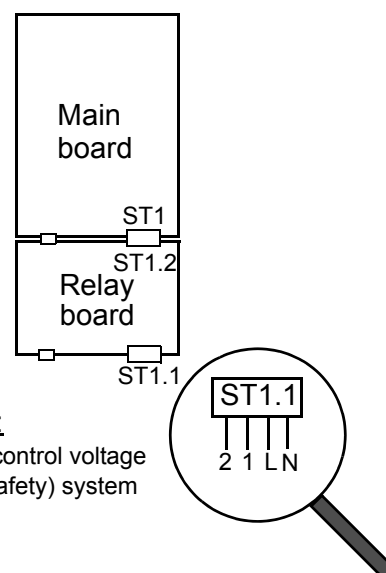

Connections:

L, N: 230 VAC control voltage

1,2: Interlock (safety) system

By changing the parameters, the user/operator can adapt the control to the system specifications and the special characteristics relating to the use of the unit.


Details of the operation of the unit are provided in the Glossary (see Section 6).

3.2 Layout of control

The control consists of the 3.5" screen and the mainboard. The mainboard can be expanded for additional functions with one or 2 relay boards (with 3 relays each) and additional optional relays in DIN rail format.

3.3 Mainboard

The mainboard is "the heart" of the control. All logic functions and control operations for the steam humidifier are provided here. The relays for the control of the main contactor, solenoid valve and blow-down pump are included directly on the mainboard.

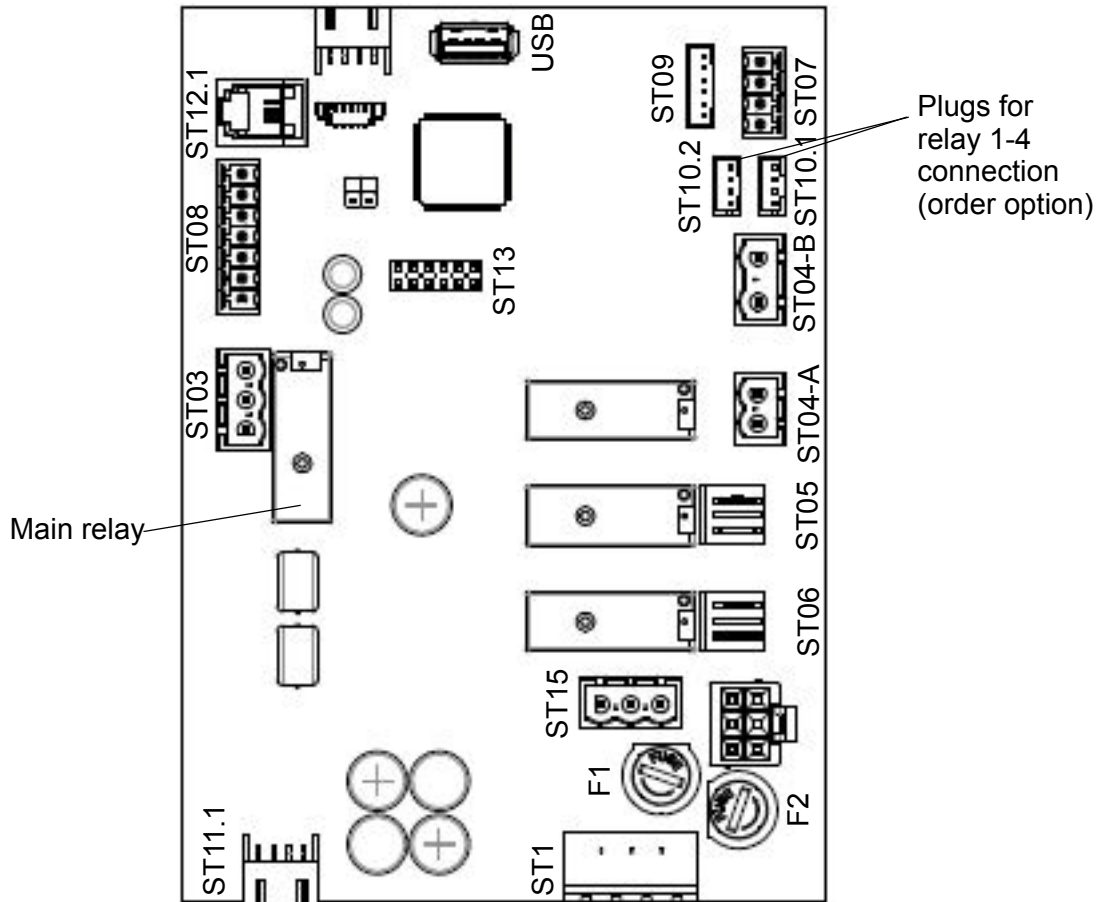

3.3.1 Connections on the mainboard

The use of the connections is illustrated by the wiring diagrams (see chapter 7)

3.3.1.1 Customer-side computer interfaces

Inputs

ST08:

- Control signal input 0...10 VDC
- Control signal input 0...20 mA
- Control signal input 0...140 ohm
- Configurable digital input 12 VDC

Outputs

ST03:

- Potential free break/make contacts NC and NO, programmable, relay assigned to "Collective fault" in factory setting

ST10.1/ST10.2:

- Connection options for an optional relay each in DIN rail version with wiring harness (order option)

ST07:

- Control output 0...10 VDC (max. 8 mA)

ST08:

- +20 VDC supply voltage (max. 20 mA) for humidity sensors

ST15:

- Tap for 1,2 and N (unsecured) for customer use

USB:

Connection for USB stick for use as a data logger and for parameter updates

3.3.1.2 System-side interfaces

ST1:

- 4-pin screw / plug connection for the connection of L1 and N and the interlock (safety) system

ST11.1:

- +12 V, GND, CAN bus

Inputs

ST09:

- Input for current transformer (ELDB) / level control (HKDB) with automatic detection (for explanation of terms see Glossary, Index 7)

ST04-B:

- Galvanically isolated input (optical coupler) for sensor electrode

Outputs

ST04-A:

- Main contactor

ST05:

- Blow-down pump

ST06:

- Inlet solenoid valve

Bi-directional


ST12.1:

- Serial interface for screen connection

ST 13:

- Base for adapter board with RS485 interface

3.4 Expansion board (double cylinder units)

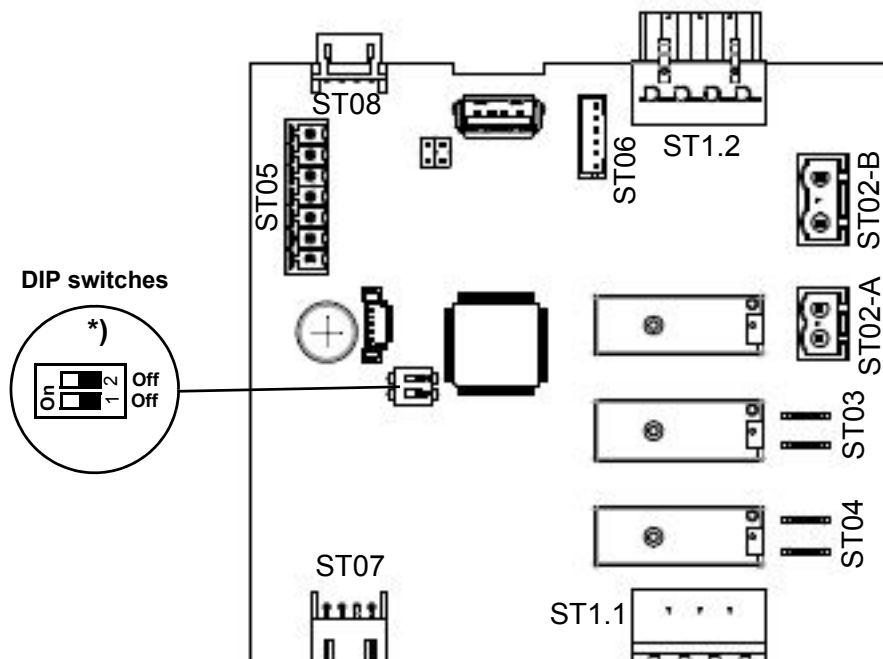

*) The DIP switches serve for CAN bus address setting. They are factory preset according to the unit configuration.

3.4.1 Connections on the expansion board

3.4.1.1 Customer-side computer interfaces

Inputs/outputs

ST05:

Not used

3.4.1.2 System-side interfaces

ST1.1:

- 4-pin screw / plug connection for the connection of L1 and N and the interlock (safety) system

ST1.2:

- Loop-through of ST1.1

ST07:

- +12 V, GND, CAN-Bus

ST08:

- Loop-through of ST07

Inputs

ST02-B

- Electrically isolated input (optical coupler) for sensor electrode (ELDB)
- Thermoswitch connection (HKDB)

ST06:

- Input for current transformer (ELDB) / level control (HKDB) with automatic detection

Outputs

ST02-A:

- Main contactor

ST03:

- Blow-down pump


ST04:

- Inlet solenoid valve

3.5 Relay circuit board

The relay board has three additional relays with potential free break/make contacts (contact load 250 VAC/8 A) for switching or controlling of additional functional units or options. A maximum of 2 relay boards can be

installed. When 2 boards are in use, different CAN bus addresses must be set (see fig. below).

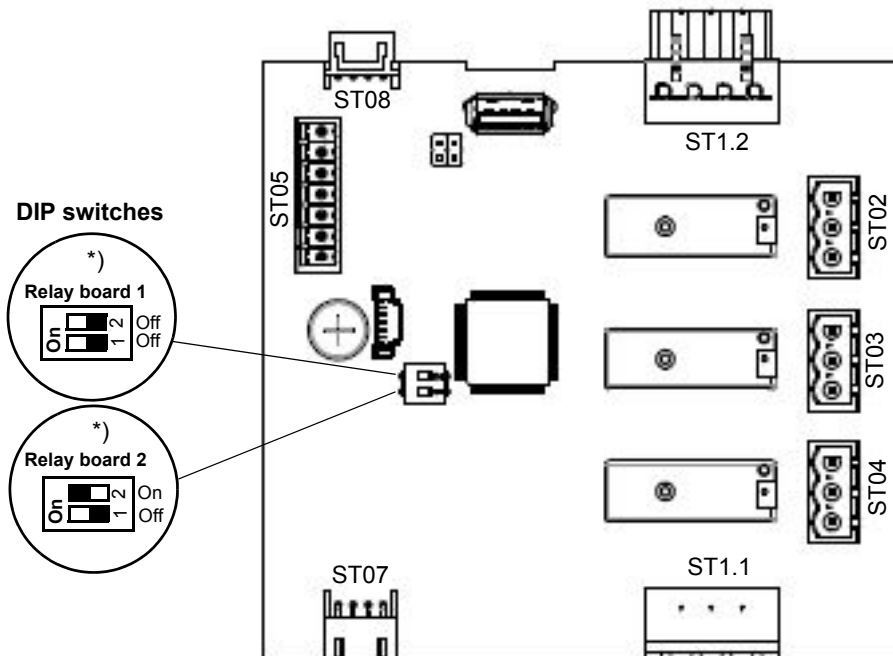

*)The DIP switches serve for CAN bus address setting. They are factory preset according to the unit configuration.

3.5.1 Connections on the relay board

3.5.1.2 System-side interfaces

3.5.1.1 Customer-side computer interfaces

Inputs

ST05:

- Configurable digital input 12 VDC

Outputs

ST02:

- Potential free break/make contacts NC and NO, programmable

ST03:

- Potential free break/make contacts NC and NO, programmable

ST04:

- Potential free break/make contacts NC and NO, programmable

ST1.1:

- 4-pin screw / plug connection for the connection of L1 and N and the interlock (safety) system

ST1.2:

- Loop-through of ST1.1

ST08:

- +12 V, GND, CAN bus

ST07:

- Loop-through of ST08

3.6 Electrical connection

▲WARNING

Danger of electric shock!

Dangerous electric voltage!
All work relating to the electrical installation may only be carried out by designated specialist personnel (electrician or qualified person with equivalent training).

Please note

The customer is responsible for monitoring the qualifications of the specialist personnel.

NOTICE

Potential component damage due to electrostatic discharge!

To protect the sensitive electronic components, measures to prevent damage due to electrostatic discharge must be taken before the start of the installation work.

3.6.1 Connection of control voltage

The control voltage of 230 VAC is to be applied to the board which is closet to the cable gland on the underside of the housing. The plug designation differs depending on the level of expansion:

Type of board	Plug designation
Mainboard	ST1
Expansion board	ST1.1
Relay circuit board	ST1.1

The pin assignment is identical for all plugs. L and N are labelled on the boards. The pins are accessible via a terminal strip adaptor pushed on the corresponding plug.

3.6.2 Connection of interlock (safety) system


The so-called interlock (safety) system is located between terminals 1 and 2. Safety equipment can be wired (also in series) into the interlock (safety) system. If the interlock (safety) system is open, the humidifier does not start or the operation is interrupted.

In air conditioning, it is standard to incorporate a max. hygrostat in the interlock (safety) system. The max. hygrostat is used as a safety feature in case of a malfunction of the humidity sensor.

▲WARNING

Danger of electric shock!

Dangerous electric voltage!
After the initial operation of the unit, a 230VAC voltage is present at terminal 1 when standard wiring is used.

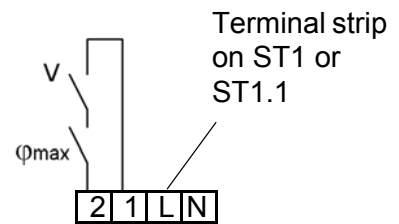

Terminals 1/2 on the mainboard (terminal strip on ST1) or an extension/relay board (terminal strip on ST1.1 provided for connection of the interlock (safety) system

Please note


The interlock (safety) system is not closed when delivered ex-factory!

Please note

The contacts, which are connected to terminals 1 and 2 must be potential free and suitable for switching of 230 VAC.

3.6.3 1 step operation

The operation of the steam humidifier is controlled via terminals 3 and 5 by the contact which is to be provided on-site. The contact only has to be suitable for low voltage.

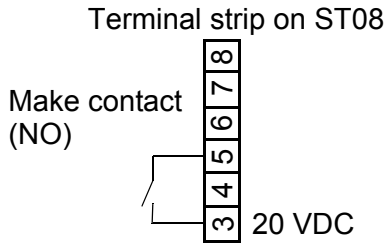


Terminals 3/5 on the mainboard (terminal strip on ST08) provided for 1-step operation


3.6.4 Operation with external controller or active humidity sensor

When the steam humidifier is controlled via an external controller (e.g. a PLC) or an active humidity sensor, physical control signals can be processed in the range 0...10 V, 0...20 mA or 0...140 Ω. A separate terminal is provided on the board for each of these signal types (also see chapter 7, „Wiring diagrams). Terminal 4, "GND" is the reference potential in each case.


Wiring examples:

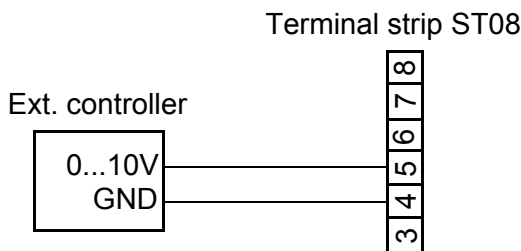

Terminals 4/5 on the mainboard (terminal strip ST08) provided for connection of an ext. control signal 0...10V

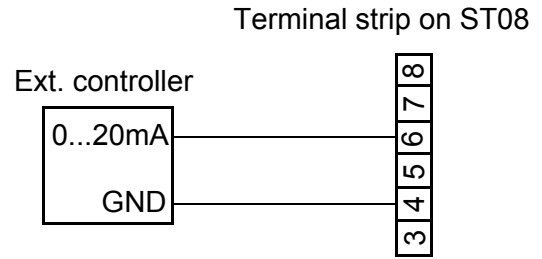

Terminals 4/6 on the mainboard (terminal strip on ST08) provided for connection of an ext. control signal 0...20mA

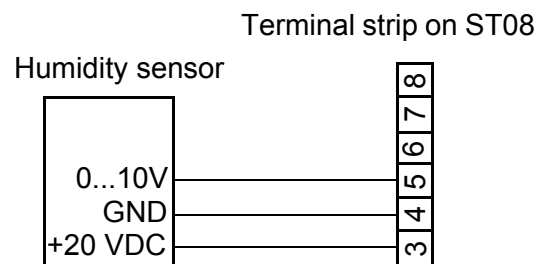

Terminals 3/4/5 on the mainboard (terminal strip on ST08) provided for connection of a humidity sensor 0...10V

Please note


Humidity sensors require an external supply voltage. 20 VDC are available for this purpose at terminal 3.

3.6.5 Connecting the digital input (DI)

The digital input on the mainboard can be used for switching functions.

The digital input must be wired on-site in accordance with its use, e.g. with as push-button or a switch (also see chapter 5.8.8 „Function parameters“).

Digital input (DI) wiring examples

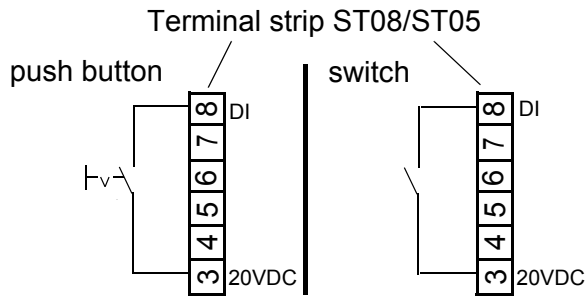


Terminals 3/8 provided for connecting the digital input

- mainboard (terminal strip ST08)
- extension board/relay board (terminal strip ST05)

3.6.6 Wiring for control signal and safety (interlock) system for multiple units

In the case of multiple units, separate humidifiers work together. The control signal and the safety (interlock) system are connected to the master unit as described above. In addition, connecting cables are established between the guiding unit and the succeeding unit(s) (provided on-site). These provide the succeeding unit with a control signal from the guiding unit and the transmitted (potential free) safety (interlock) system.


The wiring for the control signal and the safety (interlock) system must be implemented as follows for multiple units:

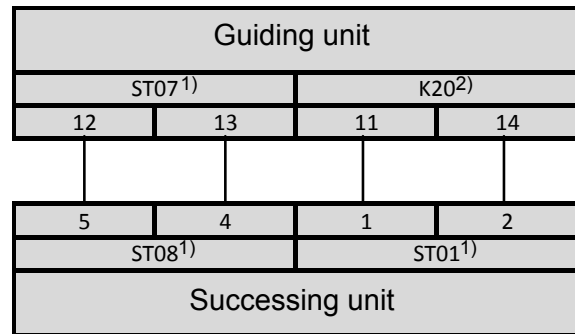
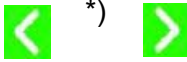





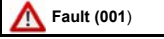


1) „ST0x“ designates connector plugs on the mainboard

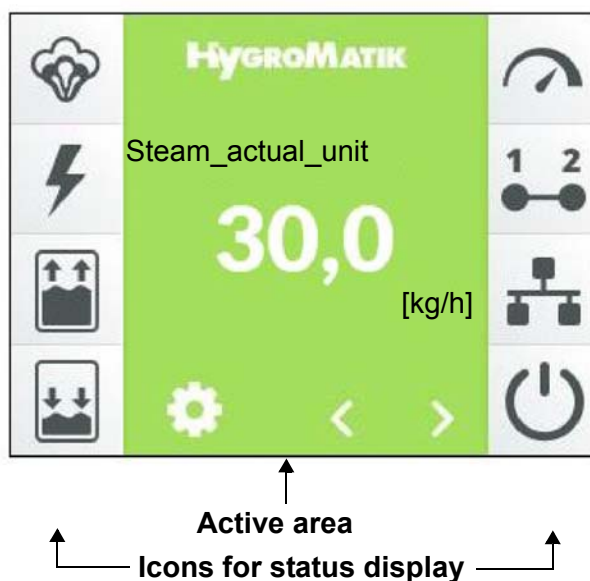







2) „K20“ is the relay used for the connection of the succeeding unit with the installed option (CN-07-10012) or the enclosed option (CN-07-10002)

4. Screen




Active screen area	Use
	Main display for operating values, navigation using the scroll keys ^{*)} .
 ^{*)}	Scroll buttons can be used to display the following operating values: <ul style="list-style-type: none"> • Humidity_actual_value [%] • Humidity_set-value [%] ^{1),2)}; touching it opens a screen keyboard ^{**)} that allows for changing the set value • Steam_actual_unit [kg/h] • Steam_output_max. [%] • Demand [%] • Control_signal_internal [%] • Output_signal • Current_actual_cyl. 1[A] (Electrode steam humidifiers only) • Current_actual_cyl. 2 [A] (Electrode steam humidifier double cyl. units only) • Waterlevel_cyl. 1 [mm] (Heater steam humidifiers only) • Waterlevel_cyl. 2 [mm] (Heater steam humidifier double cylinder units only) <p>¹⁾only when „PI controller“ is set ²⁾ not in „Weekly timer“ mode; exemption: when „ECO“ is selected as the steam production mode, the humidity set-value is output in „Weekly timer“ mode as well.</p>
^{**)} 	Screen keyboard for changing the humidity set value; is displayed when the humidity set value display is touched; allows direct changing of the set value. Saving of the input by touching the confirmation tick in the upper right corner, exit without saving by touching the „X“ in the upper left corner.

Active screen area	Use
	Button to call up set-up mode (via password). Password „000“ -> operating functions of user level (see Section 5.5) Password „010“ -> operating functions of operator level (see Section 5.7)
  	In the event of a fault or a service message, the relevant display field is shown instead of the HygroMatik logo. Touching it opens the unit info screen (see Section 5.9).
	Unit info screen (see Section 5.9) for the display of error and service messages in plain text. Is displayed by touching the error or service message.

Icon	Status	Meaning
	dark bright flashes	Steam generation active No steam generation Cylinder full; when fault display is additionally shown: Fault steam generation
	dark bright flashes	Main contactor switched Main contactor not switched Fault main contactor
	dark bright flashes	Filling active No filling Fault filling
	dark bright flashes	Blow-down active No blow-down Fault blow-down <u>Manual blow-down</u> A manual blow-down can be triggered by touching the icon. Touching the icon again stops the manual blow-down. Max. blow-down time corresponds to the parameter setting for full blow-down
	dark bright flashes	Demand has been made Demand has been made Fault demand
	dark bright	Interlock (safety) system closed Interlock (safety) system open
	dark bright	Virtual interlock (safety) system closed (via communication interface) Virtual interlock (safety) system open
	dark bright flashes	Operating mode display No humidity control enabling due to e.g. open safety interlock (details can be found in Read_values/Status_unit). Unit is in the initialisation phase

5. Operation of control

5.1 Operation basics

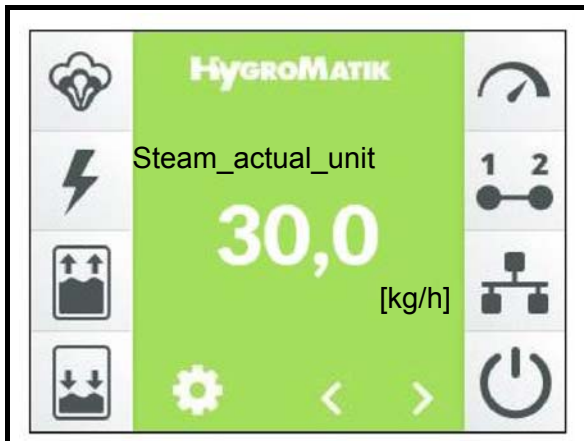

Operation takes place via the built-in touch-sensitive 3.5 inch screen. It is used for all operating steps required for the settings and operation of the unit. In addition to operating the unit directly, it is possible to control it remotely via the building technology control system or a PLC, using the communication interface. Supplementary documentation is available from HygroMatik for this type of application.






Screen views

The operating structure uses several screens, which are schematically displayed in the table below.

User guidance

In the user guidance, a distinction is made between the "user level" and "operator level". While the user level only makes it possible to carry out basic device operations, the operator level also permits operating parameters to be changed. The 2nd table below clarifies this again. The possible operating functions of the two levels are presented in Sections 5.5 and 5.7.

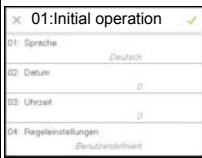Overview of the screens

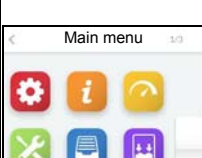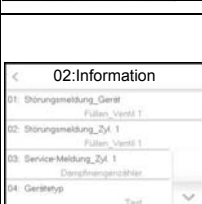	Content of screen page	Presentation	Sec.
Screen 1 Initial operation	Used for the basic unit settings (e.g. user language) after the unit is switched on for the first time. This page is then closed. To do so, use the confirmation tick to exit it.		5.3
Screen 2 Main screen	Displays the current operating values and unit status information (status icons).		5.4
View 3 Main menu (user level)	Allows access to submenus for limited unit settings, read values and history		5.5
View 3 Main menu (operator level)	Allows access to submenus for comprehensive unit settings, read values, parameter settings, service settings and history		5.7
Screen 4 Unit information	Is only displayed after a fault or a service message has occurred; provides information on device data, statistics, faults that have occurred and service requirements.		5.9

Operating ranges at the user/operator level

Level	Permits
User level	<ul style="list-style-type: none"> • Display of the read values of the main screen • Setting the humidity set value in the main screen • Display of the unit information after a fault or status message • After entering the password - call-up and cancellation: Display of the complete list of read values and adjustment options for some service parameters
Operator level	<ul style="list-style-type: none"> • All functions of the user level • Advanced settings options for operation and service parameters

5.2 Screen 1 - Commissioning

After connection to the mains supply and initial actuation of the control switch, the commissioning screen for the basic device settings appears on the display once the self-test of the control has been completed:

X	01: Commissioning	✓
01: Language	English	
02: Date	31/10/2017	
03: Time	11:59	
04: Control	User-defined	

5.2.1 Setting the language

- » Touch the line with parameter "01: Language". The following screen is displayed:

<	Language	✓
German		
English		✓
Français		
Castellano		∨

- x The currently selected language is marked with a tick in the relevant line. With the scroll-down button, the 2nd page of the screen is displayed if required
- » Change the language by touching it, if required

- » Confirm the input and return to the "Initial operation" screen with the green tick in the top right (cancel by touching "X")

5.2.2 Input of date and time

The parameter "02: Date" and "03: Time" require digits to be entered. To do so, a screen with a keyboard and an input field in the date or time format will be displayed after touching the relevant line.

As an example, the date input is described below:

- » Touch line "02: Date". The following screen is displayed:

X	Date	✓
28.10.17		
1	2	3
4	5	6
7	8	9
.	0	⌫


- » Enter the date in the format DD.MM.YY (D = day, M = month, Y= year) as digits only (the dots are added automatically)
- » Confirm the input and return to the "Initial operation" screen with the green tick in the top right (cancel by touching "X")

5.2.3 Control settings

The type of unit control is specified in the next step. The screen offers the most commonly used combinations of the operating mode of the control (1 step, controlled with an external regulator, with the internal PI controller, via the communication interface, slave operation), the type of control signal (voltage, current or resistance signal) and the control signal range (e.g. 0... 10 V). If these values have already been factory-preset according to customer requirements, the selection tick appears in the "User-defined" line.

The parameters are displayed in blocks on a screen page, which include a maximum of 4 entries. Scroll keys are used to switch between the individual screen blocks.

The initial operation is now complete. If the initial operation screen was exited with the confirmation tick, the main screen is automatically shown in the display. The initial operation screen is no longer displayed in future. Future changes with respect to the parameters set during initial operation must be made on operator level in submenus „Settings“ and „Control“.

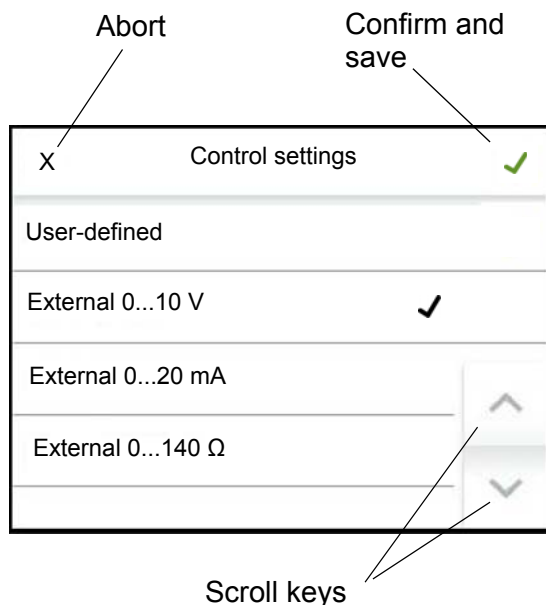

- » Confirm the input and return to the "Initial operation" screen with the green tick in the top right (cancel by touching "X")
- » Pressing the green tick in the top right saves the entries and exits the initial operation screen (cancel by pressing the "X")


5.2.4 Line-up of the commissioning parameters

Table of commissioning parameters


01: Commissioning

No. Parameter	No.	Adjustment/value range Factory setting (FS) Bold min max FS	Meaning/Comment [] explains the term in the glossary ->[] refers to a related explanation of the term	
1 Language	Selection			Selection of language
	0	Deutsch	German	
	1	English	English	
	2	Francais	French	
	3	Castellano	Spanish	
	4	日本語	Japanese	
	5	Italiano	Italian	
	6	Русский	Russian	
2 Date	DD.MM.YY		Set date	
3 Time_of_day	HH:MM		Set time	
4 Control_settings	Selection			Combinations of control type and input signal type/range
	0	User_specified	The selection was carried out separately during initial operation according to control type, signal type and area. This is a read value only	
	1	Extern_0...10 V	External controller [73] with voltage signal 0... 10 V	
	2	Extern_0...20 mA	External control [73] with current signal 0...20 mA	
	3	Extern_0...140 Ω	External controller [73] with ohmic signal 0...140 Ω	
	4	PI-controller_0...10 V	Internal PI controller [96], controls with voltage signal 0...10 V	
	5	PI-controller_4...20 mA	Internal PI controller [96], controls with current signal 4... 20 mA	
	6	PI-controller_0...140 Ω	Internal PI controller [96], controls with ohmic signal 0...140 Ω	
	7	1-step	1 step operation [44]	
	8	Modbus	Control via software control commands [12] through communication interface [13]	
	9	Slave	Unit operates as slave [94] in a master/slave unit network	
	11	Pi-controller_V_max_mA	Selection of current input on the mainboard for the 2nd PI controller when using the floating max. limiter [35]	
	12	Pi-controller_V_max_V	Selection of voltage input on the 1st relay board for the 2nd PI controller when using the floating ma. limiter [35]	

5.3 Screen 2 - Main screen

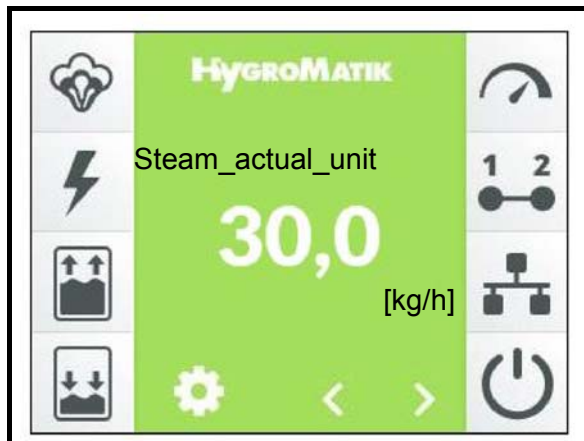



and the dimmed state can be adjusted by the user, as well as the duration after which the main screen is changed to the dimmed state.

The main menu of the user level and the operator level (screen 3) is accessed by touching the  icon. List of read values and target humidity of the main screen

The main screen is shown in the display after the unit is switched on, unless the unit is being switched on for initial operation (see Section "Initial operation"). In the main screen, current operating values are represented as numerical information, as well as status information in the form of icons. The display elements were described in Section 4 "The screen". A flashing icon always indicates a fault.

The left row of icons refers to the operational conditions of the unit. The right row of icons indicates the status of releases. For steam production to take place, all icons on the right side of the screen must be active.

The scroll keys  and  allow the user to move through the list of display values on the main screen (see Section 4, "The screen"). With the exception of the target humidity, these are read values only. The displayed values are shown and explained in the table in the following section.

If an error has occurred or a service message is issued, a display field with the relevant message is displayed instead of the HygroMatik logo. The user can access the unit info screen by touching this field.

The brightness of the main screen is reduced after a certain time (screen brightness is dimmed). The two scroll keys and the settings icon are also hidden at this point. The original state is restored by touching the screen.

The values for the normal display brightness

Table of the read values available in the main screen and the humidity set value

Main screen


No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
			min	max	FS	
1	Humidity_actual_value			Read value	Actual value [1] of rel. humidity [2] in %	
2	Humidity_set_value		0	99.0	50.0	Set value [3] of RH [2] in %
7	Steam_actual_unit			Read value	Current steam output of the unit [4] in kg/h	
9	Steam_output_max.			Read value	Set value of maximum output power [43]	
10	Demand			Read value	The demand [5] is the control signal from which the internal actuator signal [42] is created	
11	Control_sig_internal			Read value	Internal actuator signal [42] as a percentage of the actuator signal for the nominal output	
12	Output_signal			Read value	Output signal [69] on terminals 12, 13 proportional to input signal	
13	Current_actual_cyl. 1			Read value	The current power consumption of cylinder 1 (only for ELDB [77])	
14	Current_actual_cyl. 2			Read value	The current power consumption of cylinder 2 (only for ELDB [77] double cylinder units)	
15	Water_level_cyl. 1			Read value	Water level in cylinder 1 in mm (only for HKDB [78])	
16	Water_level_cyl. 2			Read value	Water level in cylinder 2 in mm (only for HKDB [78] double cylinder units)	
20	Humidity_actual_max			Read value	Actual value [1] of rel. humidity [2] in % when floating max. limiter [35] is activated	
21	Humidity_set_max		5.0	99.0	80.0	Specification of max. humidity for the switch-off point when using the floating max. limiter [35]

5.4 Password entry

The password determines if the main menu of the user level or the operator level is displayed. The password codes in use are:

Code 000: The main menu of the user level becomes accessible. However, it is sufficient to leave the password prompt with the green tick, without explicitly entering the code.

Code 010: The main menu of the operator level becomes accessible.


The password entry is called up in the main screen by touching the  button. A virtual keyboard is shown on the screen for entering the password:






To open the user level, it is sufficient to select the X symbol (top left). The operator level is accessed through the sequential input of the code digits "0", "1" and "0" and confirming them with the green tick (top right).

5.5 Screen 3 - Main menu (user level)

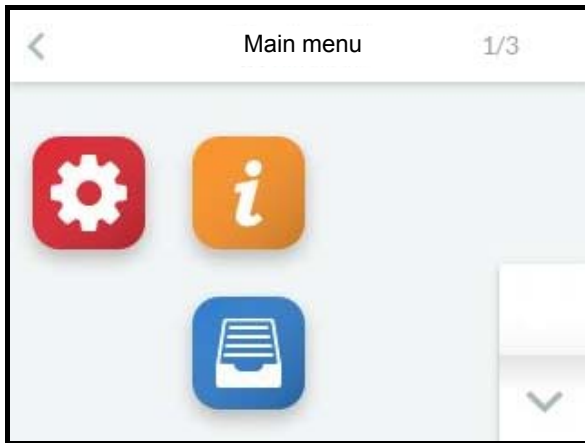After selecting the user level, the icons of the submenus which are available to the user are displayed:



5.6 User level submenus

Icon	Selection of submenu
	Settings
	Read values
	History

By tapping on the respective icon, the user accesses the screen page where the parameters of the respective group are displayed for selection, viewing or for making changes.

Layout of screen page

The input fields in which changes can be made are shown in *italics*. Depending on the parameter, the input has to be made by:

- selection from predefined offers (multiple choice, see example 1)
- entry of numeric values using an on-screen keyboard (see example 2).

Example 1: Selection of user language:

Call up the language selection on the screen by touching "Language":




By tapping on the required language, the black tick moves to the corresponding row. By touching the green tick (top right), the selection is saved and the display returns to the parent screen.

If the settings are to remain unchanged, it is possible to return straight away using the < key.

Example 2: Setting the screen brightness

Touch "Screen_brightness normal" on the screen to call up the input mask:

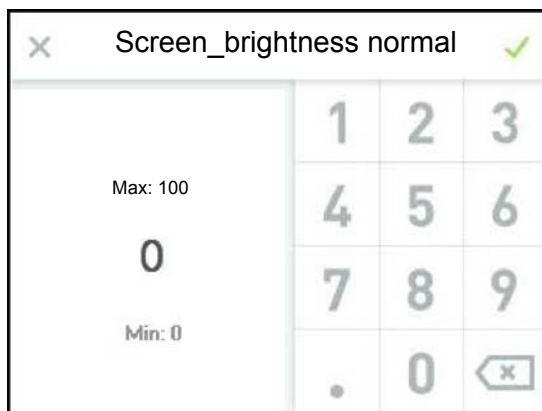

The screen brightness which is set is displayed and can be changed by using the keyboard. Save and return by touching the green tick, leave the input mask without changes by touching the "X".

The screens are hidden after a certain period of time. The main screen is then displayed. The time until the return to the main screen can be set by the user.

If a submenu is to be called up again after a screen has been closed automatically by a time-out, this can only be done through the settings icon in the main screen. This also means that the password has to be re-entered. As long as the user continues their work in the area of the main screen, the existing access remains, i.e. no renewed password entry is required.

5.6.1 Settings submenu



Table of settings parameters

03: Settings

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
			min	max	FS	
1	Language		Selection see: 01-1 Language			Selection of language
2	Date		DD.MM.YY			Set date
3	Time_of_day		HH:MM			Set time
4	Display_lighting_normal		5	100	100	Screen backlight in undimmed state
5	Delay_present_page		0	3600	300	Display duration for a certain screen page before return to the main screen in min
6	Display_lighting_dimmed		0	100	50	Screen brightness for dimmed state
7	Display_dim_after		0	3600	120	Switching of screen brightness of main screen to dimmed value after ... seconds. If an error has occurred or a status message is displayed, the main screen is not dimmed

5.6.2 Read values submenu



Read values

04: Read values

No. Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
		Factory setting (FS)	min	max FS	
1 Status_unit		Read value			Operating condition of unit
	0	Initialization			Control performs initialisation [10]
	1	Safety_interlock_open			Unit is ready for steam production, but the interlock (safety) system [11] is open
	2	No_Demand			Unit is ready for steam production, but there is no demand [5]
	3	Humidification			Humidifying [47]
	4	Runtime_limitation			Unit has switched off after limitation of operating time was reached [32]
	5	Remote_off			Unit was switched off via a software command [12] for opening the interlock (safety) system [83] via the communication interface [13]
	6	No_bus-signal			Steam production was switched off manually via the on/off button [14]
	7	Standby_heating_heating			The standby heating [16] is in the heating phase
	8	Standby_heating_interval			The standby heating [16] is in the resting phase
	9	No_demand_ECO			There is no demand [5] in ECO mode [61]
	10	Humidification_ECO			Humidifying in ECO mode [61]
	11	Timer_steam_off			Steam is not produced after the timer [18] has expired
	13	Weeckly_timer_steam_off			No steam is produced after the weekly timer has run out
	14	Digital_input_steam_off			Steam production was cut via the digital input [97]
	270	Service_message			A service message has appeared. For detailed specification, see read value 8 for cyl. 1 and read value 9 for cyl. 2 (double cylinder units only)
	900	Diagnosis			Unit is performing diagnostics [15]
	901	Not_programmed			The control electronics is not yet programmed for the unit type
	902	Update_in_progress			A USB stick was plugged in and a parameter upgrade is run by the unit
	903	Restart			A parameter upgrade was successfully carried out. Restart of the unit is required
	999	Fault			There is a fault
2 Status_cyl. 1		Read value			Status of cylinder 1
	0	Initialization			Unit is in initialization phase →[10]
	1	Safety_interlock_open			Cyl. 1 is ready for steam production, but the interlock (safety) system [11] is open
	2	No_Demand			Cyl. 1 is ready for steam production, but there is no demand [5]
	3	Humidification			Humidifying [47]
	30	Filling_valve 1			Filling via solenoid valve 1 [19]
	32	Filling_valve 1 a. 2			Filling via solenoid valve 1 and solenoid valve 2 [19]
	60	Start_blow-down			At the start of operation, the unit performs a start blow-down [20]
	61	Part_blow-down			A partial blow-down [21] is performed
	62	Full_blow-down			A full blow-down [22] is performed
	63	Dilution			The unit performs a dilution [23] of the cylinder water (only ELDB [77])
	64	Max_current_blow-down			The unit performs an overcurrent blow-down [24] because the measured current is too high (only for ELDB [77])
	65	Max_level_blow-down			The unit performs a max. level blow-down [25] because the water level is too high (only for HKDB [78])
	66	Standby_blow-down			The unit performs a Standby blow-down [26], because the maximum duration without demand [5] has been reached
	67	Dead_leg_flushing			A dead-end line flushing is performed [27]
	68	Manual_blow-down			A manual blow-down [28] was triggered
	81	Part_blow-down_pending			A partial blow-down [21] is performed before the next filling process
	82	Full_blow-down_pending			A full blow-down [22] is performed before the next filling process
	90	Cylinder_full			The sensor electrode reports when the maximum water level in the cylinder has been reached (only for ELDB [77])
	270	Service_message			A service message has appeared. For detailed specification, see read value 8 for cyl. 1 and read value 9 for cyl. 2 (double cylinder units only)
	900	Diagnosis			The unit is in diagnostic mode [15]
	999	Fault			There is a fault
3 Status_cyl. 2		Read value			Status of cylinder 2 (as cylinder 1)
		see: 04-2 Status_cyl. 1			
4 Fault_message_unit		Read value			List of possible unit fault messages
		see: 02-1 Fault_message_unit			
5 Fault_message_cyl. 1		Read value			List of possible fault messages for cylinder 1 (see Fault_message_unit)
		see: 02-2 Fault_message_cyl. 1			
6 Fault_message_cyl. 2		Read value			List of possible fault messages for cylinder 2 (see Fault_message_unit)
		see: 02-2 Fault_message_cyl. 1			
8 Service_message_cyl. 1		Read value			List of service messages for cylinder 1
		see: 02-5 Service_message_cyl. 1			
9 Service_message_cyl. 2		Read value			List of service messages for cylinder 2
		see: 02-5 Service_message_cyl. 1			

Read value table (ctd.)

04: Read_values

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
			Factory setting (FS)	Bold	FS	
10	Steam_actual_unit			Read value	Current steam output of the unit [4] in kg/h	
11	Steam_actual_cyl. 1			Read value	Current steam output [4] of cylinder 1 in kg/h (for double cylinder units)	
12	Steam_actual_cyl. 2			Read value	Current steam output [4] of cylinder 2 in kg/h (for double cylinder units)	
16	Steam_output_max.			Read value	Set value of maximum output power [43]	
17	Demand			Read value	The demand [5] is the control signal from which the internal actuator signal [42] is created	
18	Control_sig_internal			Read value	Internal actuator signal [42] as a percentage of the actuator signal for the nominal output	
19	Output_signal			Read value	Output signal [69] on terminals 12, 13 proportional to input signal	
20	Safety_interlock			Read value	Status of the interlock (Safety) system [11] The interlock (safety) system is open The interlock (safety) system is closed	
21	Safety_interlock_virtual			Read value	Status of the virtual interlock (safety) system [86] The interlock (safety) system is open The interlock (safety) system is closed	
22	Current_actual_cyl. 1			Read value	The current power consumption of cylinder 1 (only for ELDB [77])	
23	Current_actual_cyl. 2			Read value	The current power consumption of cylinder 2 (only for ELDB [77] double cylinder units)	
24	Water_level_cyl. 1			Read value	Water level in cylinder 1 in mm (only for HKDB [78])	
25	Water_level_cyl. 2			Read value	Water level in cylinder 2 in mm (only for HKDB [78] double cylinder units)	
28	Model			Read value	Type designation of unit	
29	Unit_name			Read value	Unit name [90], can be selected by the customer, if required	
30	Serial_number			Read value	Serial_number	
31	Date_of_manufacturing			Read value	Date_of_manufacturing	
32	Controller_series			Read value	Type of control	
33	Software_version			Read value	Software version of control	
34	Humidity_set_value			Read value	Set value [3] of rel. humidity [2] in %	
35	Humidity_actual_value			Read value	Actual value [1] of rel. humidity [2] in %	
36	Humidity_set_max			Read value	Set value [3] of rel. humidity [2] in % when floating max. limiter [35] is activated	
37	Humidity_actual_max			Read value	Actual value [1] of rel. humidity [2] in % when floating max. limiter [35] is activated	
46	Steam_amount_total_cyl. 1			Read value	Entire steam volume of cylinder 1 [kg] produced since initial operation	
47	Steam_amount_total_cyl. 2			Read value	Entire steam volume of cylinder 2 [kg] produced since initial operation (double cylinder units only)	
50	V_Signal			Read value	Voltage signal measured on terminal ST0805 (mainboard)	
51	mA_Signal			Read value	Current signal measured on terminal ST0806 (mainboard)	
52	Ω_Signal			Read value	Resistance signal measured on terminal ST0807 (mainboard)	
53	Digital_input			Read value	Current state of digital input [97] on terminal ST0808 (mainboard) No switching signal Switching signal present	
		0	Off			
		1	On			

5.6.3 History submenu



This submenu is identical on the user and the operator level.

5.6.3.1 Explanation of history management

The control stores 10 sets of error messages on a rolling basis. Once there are 10 records, the oldest record is overwritten by a current entry. An error message set consists of the following entries:

1. Date of error message
2. Contents of error message
3. Frequency of error message

If an identical error occurs several times in a row, the first entry relating to this error is updated with the date of the most recent occurrence and the frequency is incremented. A new error message set is not recorded.

The situation is different if a particular error occurs multiple times, but not in direct succession. In this case, a new error message set is written for each instance.

The table below shows the layout of the history management.

Table of history layout

07: History

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary ->[] refers to a related explanation of the term
			Factory setting (FS)	Bold	FS	
1	1st fault_entry_date			Read value		1. Memory entry: Date/time
2	1st fault_entry_message			Read value		1. Memory entry: Fault message (for explanation see Read values 4 / Fault_message_unit)
3	1st fault_entry_rate		see: 02-1	Fault_message_unit Read value		1. Memory entry: Frequency of occurrence (since initial operation)
4	2nd fault_entry_date			Read value		2. Memory entry: Date/time
5	2nd fault_entry_message			Read value		2. Memory entry: Error message, see above
6	2nd fault_entry_rate		see: 02-1	Fault_message_unit Read value		2. Memory entry: Frequency of occurrence (since initial operation)
7	3rd fault_entry_date			Read value		3. Memory entry: Date/time
8	3rd fault_entry_message			Read value		3. Memory entry: Error message see above
9	3rd fault_entry_rate		see: 02-1	Fault_message_unit Read value		3. Memory entry: Frequency of occurrence (since initial operation)
10	4th fault_entry_date			Read value		4. Memory entry: Date/time
11	4th fault_entry_message			Read value		4. Memory entry: Error message see above
12	4th fault_entry_rate		see: 02-1	Fault_message_unit Read value		4. Memory entry: Frequency of occurrence (since initial operation)
13	5th fault_entry_date			Read value		5. Memory entry: Date/time
14	5th fault_entry_message			Read value		5. Memory entry: Error message see above
15	5th fault_entry_rate		see: 02-1	Fault_message_unit Read value		5. Memory entry: Frequency of occurrence (since initial operation)
16	6th fault_entry_date			Read value		6. Memory entry: Date/time
17	6th fault_entry_message			Read value		6. Memory entry: Error message see above
18	6th fault_entry_rate		see: 02-1	Fault_message_unit Read value		6. Memory entry: Frequency of occurrence (since initial operation)
19	7th fault_entry_date			Read value		7. Memory entry: Date/time
20	7th fault_entry_message			Read value		7. Memory entry: Error message see above
21	7th fault_entry_rate		see: 02-1	Fault_message_unit Read value		7. Memory entry: Frequency of occurrence (since initial operation)
22	8th fault_entry_date			Read value		8. Memory entry: Date/time
23	8th fault_entry_message			Read value		8. Memory entry: Error message see above
24	8th fault_entry_rate		see: 02-1	Fault_message_unit Read value		8. Memory entry: Frequency of occurrence (since initial operation)
25	9th fault_entry_date			Read value		9. Memory entry: Date/time
26	9th fault_entry_message			Read value		9. Memory entry: Error message see above
27	9th fault_entry_rate		see: 02-1	Fault_message_unit Read value		9. Memory entry: Frequency of occurrence (since initial operation)
28	10th fault_entry_date			Read value		10. Memory entry: Date/time
29	10th fault_entry_message			Read value		10. Memory entry: Error message see above
30	10th fault_entry_rate		see: 02-1	Fault_message_unit Read value		10. Memory entry: Frequency of occurrence (since initial operation)

5.7 Screen 3 - Main menu (operator level)

After the operator level has been selected by entering the corresponding password (code 010), the main menu is displayed. It spans multiple screen pages and scroll keys are used to navigate between them.


Screen page 1 (of 3)



Screen page 2



Screen page 3

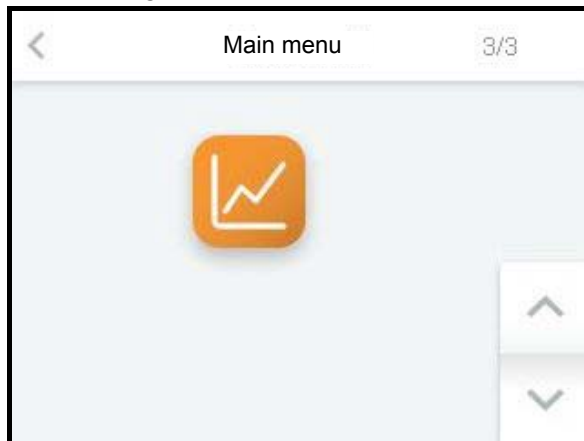

5.8 Operator level submenus

By touching the respective icon, the operator accesses the screen page where the parameters of the respective group are available for selection, viewing or for making changes. The layout of the screen pages corresponds to the pages of the submenus of the user level (see Section 5.6).

Icon	Selection of submenu
	Settings
	Read values
	Control
	Service
	History
	Blow-down
	Filling
	Functions
	Communication interface
	Weekly timer
	Recording
	Cylinder extension (visible only if an extension board is present)
	Relay extension 1 (visible only if a relay board is present)
	Relay extension 2 (visible only if 2nd relay board is present)

The parameters available in the submenus are described in table form below (for explanations on the individual parameters see Glossary in Section 8).

5.8.1 Settings submenu



Table of settings parameters (operator level)

03: Settings

No.	Parameter	No.	Adjustment/value range Factory setting (FS) Bold min max FS			Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
1	Language		Selection see: 01-1 Language			Selection of language
2	Date		DD.MM.YY			Set date
3	Time_of_day		HH:MM			Set time
4	Display_lighting_normal		5	100	100	Screen backlight in undimmed state
5	Delay_present_page		0	3600	300	Display duration for a certain screen page before return to the main screen in min
6	Display_lighting_dimmed		0	100	50	Screen brightness for dimmed state
7	Display_dim_after		0	3600	120	Switching of screen brightness of main screen to dimmed value after ... seconds. If an error has occurred or a status message is displayed, the main screen is not dimmed
8	Units		Selection			Selection of system of units
		0	SI			Units are displayed in the format of the SI system of units [8]
		1	Imperial			Units are displayed in the format of the imperial system of units [9]

5.8.2 Read values submenu



The read value submenu is no different to that of the user level. The read values listed in table format in Section 5.6. are also available at the operator level.

5.8.3 Control submenu



Table of control parameters

05: Control

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
			Factory setting (FS)	Bold min	max FS	
1	Control_settings		Selection see: 01-4 Control_settings			Combinations of control type and input signal type/range
2	Steam_output_max.		25.0	100.0	100.0	The maximum output power [43] can be limited to between 25 and 100%
3	Δ Power_limitation		0,0	50.0	0.0	Reduction of the maximum steam output for the purpose of load shedding [101]
4	Output_signal		Selection			Mapping of the output signal [69] to an internal value
		0	Off			No mapping
		1	Control_sig_external			Output signal is proportional to the demand [5] from the external controller [73]
		2	Control_sig_internal			Output signal is proportional to the internal actuator signal [42]
		3	Humidity_actual_value			Output signal is proportional to the actual humidity value [1]
		4	Control_signal_slave			Output is used to control a slave [94]
17	Humidity_set_value		0.0	99.0	50.0	Set value [3] of RH [2] in %
18	Δ Set_value_dehumidification		1.0	20.0	10.0	Downstream dehumidifier is actuated if humidity set value has been exceeded by the respective difference value [%], (PI controller only), → [50]
19	Δ Humidity_ECO		0.0	50.0	10.0	Target humidity is lowered by this percentage when ECO is switched on
20	PI-controller_gain		0.5	100.0	5.0	Proportional part of PI controller
21	PI-controller_integral		0.0	100.0	10.0	Integral part of PI controller
22	Humidity_notification		5.0	99.0	50.0	When the set humidity [%] has been reached, one of the relays is energised, which must have been assigned code 211 (humidity reached) for this purpose
23	Humidity_set_max		5.0	99.0	80.0	Specification of max. humidity for the switch-off point when using the floating max. limiter [35]
24	Pi-controller_max_gain		.5	100.0	5.0	Amplification of 2nd PI controller when using the floating max. limiter [35]

5.8.4 Service submenu



5.8.4.1 Monitoring and service messages

The wear components of the unit and the status of the steam cylinder(s) are monitored continuously when the unit is in operation. When a limit value is reached, the corresponding service message is displayed with reference to the cylinder. The service messages need to be reset after component replacement or cylinder maintenance.

The following service messages are implemented:

Steam volume

A steam volume in kg is specified in the "Steam_volume_service" parameter and after this is reached, the message "Steam volume counter" is issued. In case of double cylinder units, the parameter entry applies to both cylinders. The service message differentiates between cylinder 1 and cylinder 2.

After the service has been carried out, the message has to be reset with "Reset_cyl. 1" or "Reset_cyl. 2" (or both).

For the assessment of the remaining steam volume until the next service is required, the read values "Steam_volume_to_service_cyl. 1" and "Steam_volume_to_service_cyl. 2" (only for double cylinder units) are used.

Main contactors

For main contactors, the maximum number of operating cycles is specified by the manufacturer. When a limit value is reached, the corresponding service message is displayed. The main contactor must then be changed and the message has to be reset by setting the "Main_contactor Kx_Reset" (x = 1...5) parameter.

Please note

When the service message was triggered for one of the main contactors, it is advisable to check the meter reading for the remaining main contactors.

Monitoring

The FlexLine control permanently monitors the performance capabilities of the electrodes (ELDB only), of the blow-down pump(s), and of the solenoid valve(s). When preset functionality warning thresholds are exceeded, messages are generated with respect to the current state of:

- Electrodes (ELDB only), („Warning_cyl._full“)
- Blow-down pump(s) („Warning_pump“)
- Solenoid valve(s) („Warning_valve“)

Three sensitivity values can be selected for each of the alarm thresholds, where "Sensitivity 3" triggers the warning messages at the earliest time.

After the condition for triggering the warning has been resolved (e.g. by cleaning the solenoid valve intake strainer), no further warning is issued. The warning messages can also be turned off (s. parameters 22, 23 and 24 in the table following hereunder).

Table of service parameters

06: Service

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
			Factory setting (FS)	min	max	
1	Steam_amount_service		0	65535	4500	Preset steam volume (see [33]) in kg until service message is triggered. For double cylinder units, this setting applies to both cylinders
4	Service-reset_cyl. 1		Selection			Reset steam volume counter for cylinder 1 →[33]
		0	Off			No
		1	On			Yes
5	Steam_until_msg_cyl. 1		Read value			Remaining steam volume for cyl. 1 in kg until service message →[33] is triggered
7	Service-reset_cyl. 2		Selection			Reset steam volume counter for cylinder 2 →[33], double cylinder units only
		0	Off			No
		1	On			Yes
8	Steam_until_msg_cyl. 2		Read value			Remaining steam volume for cyl. 2 in kg until service message →[33] is triggered
12	Main_contactor 1_reset		Selection			Reset K1 counter for main contactor operating cycles →[34]
		0	Off			No
		1	On			Yes
13	K1_switching_cycles_until_msg.		Read value			Remaining operating cycles for K1 until service message →[34] is triggered
14	Main_contactor 2_reset		Selection			Reset K2 counter for main contactor operating cycles →[34]
		0	Off			No
		1	On			Yes
15	K2_switching_cycles_until_msg.		Read value			Remaining operating cycles for K2 until service message →[34] is triggered
16	Main_contactor 3_reset		Selection			Reset K3 counter for. main contactor operating cycles →[34] (double cyl. units only)
		0	Off			No
		1	On			Yes
17	K3_switching_cycles_until_msg.		Read value			Remaining operating cycles for K3 until service message →[34] is triggered
18	Main_contactor 4_reset		Selection			Reset K4 counter for main contactor operating cycles →[34] (double cyl. units only)
		0	Off			No
		1	On			Yes
19	K4_switching_cycles_until_msg.		Read value			Remaining operating cycles for K4 until service message →[34] is triggered
20	Main_contactor 5_reset		Selection			Reset K5 counter for main contactor operating cycles →[34] (double cyl. units only)
		0	Off			No
		1	On			Yes
21	K5_switching_cycles_until_msg.		Read value			Remaining operating cycles for K5 until service message →[34] is triggered
22	Warning_cyl_full		Selection			Warning message about electrode burn-off (only for ELDB [77]) →[95]
		0	Off			No message
		1	Sensitivity 1			Threshold value 1 for message (lowest sensitivity)
		2	Sensitivity 2			Threshold value 2 for message (medium sensitivity)
		3	Sensitivity 3			Threshold value 3 for message (highest sensitivity)
23	Warning_pump		Selection			Warning message about functional performance of blow-down pump →[95]
		see: 06-22 Warning_cyl_full				
24	Warning_valve		Selection			Warning message about functional performance of solenoid valves →[95]
		see: 06-22 Warning_cyl_full				
26	Update_function		Read value			Status of update function [7]
		0	USB-stick_insert			USB stick is not inserted
		1	Loading			The parameter set which is saved on the stick is loaded
		2	Checking			The loaded parameter set is checked
		3	Update			The parameter set is updated
		4	Successful			The update was successful
		5	Data_not_valid			USB stick does not contain a parameter set or parameter set is not compatible

5.8.4.2 Procedure for parameter update

The information below explains how to work with the "Update_function" parameter (see parameter row 26 in the table above).

The update function makes it possible to overwrite parameter settings with a parameter set which is saved on an external USB flash drive. As a result, the operator can make a change without having to change the parameters by themselves. The modified parameter set can be provided by HygroMatik.

The procedure is as follows:


- » With the unit switched on, insert the USB stick into the socket on the mainboard.
- » Call up the "Update function" in the services submenu.

The status of the update process is displayed (see table). Its successful completion is displayed by the "Update successful" status message.

- » Switch the unit off and on again. The loaded parameter set is activated.
- » To reload the parameter set at a later date if required (e.g. after a factory reset), the "ImportDone.txt" file on your USB stick must be deleted beforehand. To do so, the stick must be inserted in an external device (e.g. PC).

If the status "Invalid data" is output after the update operation, a compatible parameter set is not available on the USB stick.

USB connector on mainboard

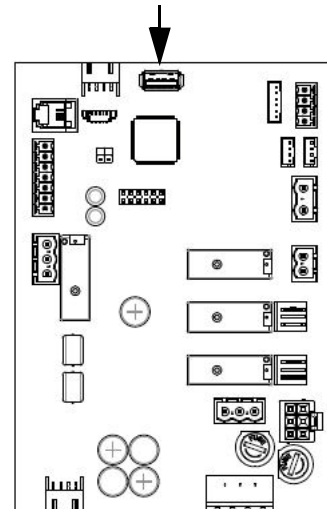

5.8.5 History submenu



The error message history was already described for the user level in Section 5.6.3. There are no differences at the operator level.

5.8.6 Blow-down submenu



Table of blow-down parameters

08: Blow-down

No. Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary ->[] refers to a related explanation of the term
		Factory setting (FS)	Bold	FS	
		min	max		
1 Full_blow-down_correction		-5	5	0	Correction value for frequency of full blow-down (+ = more frequently, - = less frequently) ->[55]
2 Part_blow-down_correction		-5	5	0	Correction value for frequency of partial blow-down (+ = more frequently, - = less frequently) ->[55]
3 Standby_blow-down		Selection			Full blow-down [58] for hygiene reasons, if there was no steam production for an extended period ->[26]
	0	Deactivated			No stand-by blow-down
	1	Activated			Blow-down after waiting period
4 Standby_blow-down_interval		1	2880	1440	After the waiting period specified, the remaining water is pumped off if the interlock (safety) system [11] was opened during this period of time, i.e. no steam production took place ->[26]
5 Blow-down_without_K1		Selection			Pumps without main contactor [75] in order to avoid triggering of residual current detector ->[56]
	0	Deactivated			Main contactor [75] switched on during pumping
	1	Activated			Main contactor [75] switched off during pumping

5.8.7 Fill parameters submenu



Table of fill parameters

09: Filling

No. Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary ->[] refers to a related explanation of the term
		Factory setting (FS)	Bold	FS	
		min	max		
1 Filling_pulsed		Selection			The filling process is not continuous, but intermittent ->[54]
	0	Deactivated			Activated
	1	Activated			Not activated
2 Filling_pulsed_interval		1	10	2	Time interval in s, during which filling does not take place (filling pause)
3 Filling_pulsed_active		1	600	10	Duration of filling time in s until filling pause

5.8.8 Functions submenu



Table of functions parameters

10: Functions

No. Parameter	No.	Adjustment/value range Factory setting (FS) Bold min max FS	Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
1 Standby-heating		Selection	The standby heating [16] keeps the water in the cylinder warm if no demand [5] is present
	0	Deactivated	Standby heating [16] switched off
	1	Activated	Standby heating [16] switched on
2 Standby-heating_interval		1 999 1	Pause time of standby heating in [min]
3 Standby-heating_active		1 999 1	Heating time of standby heating [16] in [s]
4 Dead_leg_flushing		Selection	The solenoid valves of the water input and blow-down pump are switched on and off simultaneously with the flushing of the dead-end line [27]
	0	Deactivated	Flushing of dead-end line [27] is not carried out
	1	Activated	Facilitate flushing of dead-end line [27]
5 Dead_leg_flushing_interval		1 5760 1440	Waiting period until start of flushing of dead-end line [27] in [min]
6 Dead_leg_flushing_active		1 600 90	Duration of flushing of dead-end line [27] in [s]
7 Runtime_limitation		0 1440 0	Steam production is stopped after the time interval specified [min]; for resumption →[32]
8 Weekly_timer		Selection	Activation of weekly timer
	0	Off	Steam production runs continuously with the parameters preset
	1	On	Steam is generated in accordance with the settings made in the Timer submenu. Times →[91]
9 Timer_mode		Selection	The timer function [18] is triggered with an external button
	0	Off	The timer function [18] is not available
	1	Steam_off	Steam production stops after the timer has elapsed
	2	ECO	The unit reverts to ECO mode [61] after the timer has elapsed
10 Timer_running_time		0 65535 0	The runtime of the timer is given in seconds
11 Password_remote		0 9999 0	Storage of a password with a maximum of 4 digits for remote access via the communication interface, input using the keyboard screen
12 Function_digital_input		Selection	Mapping of digital input function [98] to mainboard
	0	Off	Not used
	10	ECO	Activated digital input [97] by a pushbutton [106] switches ECO mode on
	30	Timer_start	Activated digital input [97] by a pushbutton [106] starts timer function [18]
	40	Power_limitation	Activated digital input [97] by a switch (NO) switches power limitation on for load shedding [101]
14 Control_curve		Selection	Behaviour during cold start or specification for special applications (only ELDB [77]), see [68]
	0	Energie-optimized	Current during cold start is 128% of rated current for fast heating
	1	Load-optimized	Current during cold start is 113% of the nominal current, to avoid overloading the supply network despite fast heating
	2	Process-optimized	Particularly fine control for critical applications
15 Delay_humidificat_notif.		0 3600 60	Delay of Humidifying message in secs (see [74])
16 Assignment_main_relay		Selection	The relay is energised for a message (M) or a switching function (S), if ...
	0	Collective_fault	There is any kind of error (M)
	1	Safety_interlock_open	The interlock (safety) system [11] is open (M)
	2	No_Demand	No demand [5] is present (M)
	3	Humidification	Steam production is in progress (M)
	4	Runtime_limitation	The unit has switched off steam production after the limitation of operating time was reached [32] (M)
	5	Remote_off	A remote shutdown was carried out via software command [12] (M)
	6	Safety_interlock_ELV	The interlock (safety) system [11] is switched via an additional relay (M)
	7	Safety_interlock_closed	The interlock (safety) system [11] is switched as standard (M)
	8	Humidification_off_delay	A dropout delay [74] is to be generated following humidification (S)
	9	Timer_steam_off	the timer function has stopped the steam production (M)
	10	Weekly_timer_steam_off	the weekly timer has stopped the steam production (M)
	30	Soleniod_valves_off	None of the solenoid valves are actuated (M)
	31	Soleniod_valves_on	One of the solenoid valves is actuated (M)
32	Soleniod_valve 1	Solenoid valve 1 is actuated (M)	
33	Soleniod_valve 2	Solenoid valve 2 is actuated (M)	
36	HyFlush	The superflush SV is switched via the contacts of this relay	

Function parameters (ctd.)

No. Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
		Factory setting (FS)	Bold	FS	
Assignment_main_relay	60	Pump_off			The blow-down pump is not actuated (M)
	61	Pump_on			The blow-down pump is actuated (M)
	62	Part_blow-down			A partial blow-down [21] is taking place (M)
	63	Full_blow-down			A full blow-down [22] is taking place (M)
	64	Dilution			A dilution [23] is taking place (only for ELDB [77]) (M)
	65	Max_current_blow-down			An overcurrent blow-down [24] is taking place (only for ELDB [77]) (M)
	66	Max_level_blow-down			A max. level blow-down [25] is taking place (only for HKDB [78]) (M)
	67	Standby_blow-down			A standby blow-down [26] is taking place (M)
	68	Dead_leg_flushing			An additionally installed relay is to be actuated, which switches the input solenoid valve for flushing the dead-leg line if the interlock (safety) system is not closed (S)
	69	Start_blow-down			A start blow-down [20] is taking place (M)
	120	Cylinder_1_step_1			Power level [63] 1 of cylinder 1 is active (only for HKDB [78]) (S). If this assignment was chosen ex-factory, no other assignment is possible.
	121	Cylinder_1_step_2			Power level [63] 2 of cylinder 1 is active (only for HKDB [78]) (S). If this assignment was chosen ex-factory, no other assignment is possible.
	122	Cylinder_2_step_1			Power level [63] 1 of cylinder 2 is active (only for HKDB double cylinder units) (S). If this assignment was chosen ex-factory, no other assignment is possible.
	123	Cylinder_2_step_2			Power level [63] 2 of cylinder 2 is active (only for HKDB double cylinder units) (S). If this assignment was chosen ex-factory, no other assignment is possible.
	210	Dehumidification			A downstream dehumidifier is to be actuated →[50] (S)
	211	Humidity_reached			The value set in the Control 21 parameter (Humidity_notification) has been reached (M)
	270	Collective_service			A general service message is generated (M)
	271	Service_solenoid_valve			A service for one of the solenoid valves or the water supply line is required
	272	Service_blow-down_pump			A service for the blow-down pump is required (M)
	273	Service_steam_amount_cnt.			A service is required after the steam volume counter which is relevant for the service was reached (M)
274	Service_main_contactor K1			A service is required after the max. operating cycles for K1 have been reached (M)	
275	Service_main_contactor K2			A service is required after the max. operating cycles for K2 have been reached (only for double cylinder units) (M)	
276	Service_main_contactor K3			A service is required after the max. operating cycles for K3 have been reached (only for double cylinder units) (M)	
277	Service_main_contactor K4			A service is required after the max. operating cycles for K4 have been reached (only for double cylinder units) (M)	
278	Service_main_contactor K5			A service is required after the max. operating cycles for K5 have been reached (only for double cylinder units) (M)	
17	Assignment_relay K20	Selection			Relay K20 is one of the top-hat rail relays connected to the ST10.1 connector on the mainboard; assignment is same as for base relay
		see: 10-16	Assignment_main_relay		
18	Assignment_relay K21	Selection			Relay K21 is the second of the top-hat rail relays connected to the ST10.2 connector on the mainboard; assignment is same as for base relay
		see: 10-16	Assignment_main_relay		
19	Assignment_relay K22	Selection			Relay K22 is one of the top-hat rail relays connected to the ST10.2 connector on the mainboard; assignment is same as for base relay
		see: 10-16	Assignment_main_relay		
20	Assignment_relay K24	Selection			Relay K23 is the second of the top-hat rail relays connected to the ST10.2 connector on the mainboard; assignment is same as for base relay
		see: 10-16	Assignment_main_relay		

5.8.9 Communication interface sub-menu



The communication interface is a serial RS285 computer interface for the remote control of the steam humidifier. With this computer interface, all control operations which can be carried out on the screen can also be carried out by the building technology control system, for example.

The MODBUS-RTU Protocol is used to transmit the control commands (separate documentation on this is available from HygroMatik).

Table of communication interface parameters

11: Communication

No. Parameter	No.	Adjustment/value range Factory setting (FS) Bold min max FS	Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
1 Address		0 255 1	Address of the communication interface [13]
2 Baud_rate		Selection	Setting the baud rate
	0	1200	1200
	1	2400	2400
	2	4800	4800
	3	9600	9600
	4	19200	19200
	5	28800	28800
	6	38400	38400
	7	57600	57600
3 Parity		Selection	Parity setting
	0	None	Without parity bit
	1	Odd	Odd parity bit
	2	Even	Even parity bit
4 Stop_bits		Selection	Number of stop bits
	0	1	1 stop bit
	1	2	2 stop bits
5 Modbus_timeout		0 60 20	Timeout in s for software control commands [12] through communication interface [13]

5.8.10 Weekly timer submenu



The weekly timer is used to program two switching time ranges per day of the week, each defined by "Start time" and "End time". A humidity target value can be assign to each switching time range.

Table of "Weekly timer" parameters

12: Weekly_timer

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary →[] refers to a related explanation of the term
			min	max	Factory setting (FS) Bold FS	
1	Mon_start_time 1		00:00	23:59	08:00	Start time 1 for Monday (1st period) →[91]
2	Mon_stop_time 1		00:00	23:59	12:00	End time 1 for Monday
5	Mon_humidity_set_value 1		5.0	99.0	50.0	Humidity set value [% RH] for the 1st period on Monday
6	Mon_start_time 2		00:00	23:59	13:00	Start time 2 for Monday (2nd period) →[91]
7	Mon_stop_time 2		00:00	23:59	20:00	End time 2 for Monday
10	Mon_humidity_set_value 2		5.0	99.0	50.0	Humidity set value for the 2nd period on Monday

The table only shows the possible parameter settings for Monday. The paramters for the rest of the weekdays (Tuesday to Sunday) can be programmed in the same way.

5.8.11 Recording submenu




The control can record 10 data sets internally on a rolling basis (Recording submenu, parameter 1 set to „On“). Snapshots of the unit status are carried out at intervals of 10 s, which can be helpful for troubleshooting. When all memory slots are filled, a new set of data overrides the oldest entry. A recorded set of data is conserved for a period of max. 7 days.

The complete record [93] can be saved to a USB stick with NTFS formatting.

For saving, pls. proceed as follows:

- » Call up recording submenu.
- » Set parameter „Saving_start“ (2) to „On“.
- » Insert USB stick in connector on mainboard (s. drawing below). Saving starts automatically. Then, parameter „Saving_start“ returns to the „Off“-state.

USB connector on mainboard

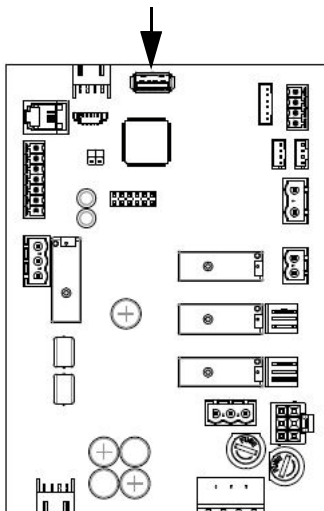

By looking at parameter „Saving_status“ (4) the status of the saving procedure can be checked. „Activated“ means that writing to the memory stick is underway.

Erasing of the complete memory is achieved by setting the „Recording_delete“ parameter (5) to „On“.

A data set consists of the following values:

No.	Value	only
1	Steam_actual_unit	
2	Steam_actual_Cyl. 1	DZG
3	Steam_actual_Cyl. 2	DZG
4	Status_unit	
5	Status_cyl. 1	
6	Status_cyl. 2	DZG
7	Fault message_unit	
8	Fault message_cyl. 1	
9	Fault message_cyl. 2	DZG
10	Safety interlock_open	
11	Demand	
12	Steam_output_max.	
13	Current_actual_Cyl. 1	ELDB
14	Current_actual_Cyl. 2	ELDB DZG
15	Water_level_cyl. 1	HKDB
16	Water_level_cyl. 2	HKDB DZG
17	Humidity_actual value	
18	Humidity_set value	
19	Humidity_actual_value_max	MB
20	Humidity_set_value_max	MB

Legend:

- ELDB = Electrode Steam Humidifier
- HKDB = Heater Element Steam Humidifier
- DZG = Double Cylinder Unit
- MB= Variable Max. Limitation

Table of recording functions

16: Recording

No. Parameter	No.	Adjustment/value range Factory setting (FS) Bold min max FS	Meaning/Comment [] explains the term in the glossary → [] refers to a related explanation of the term
1 Recording	0	Deactivated	Recording [93] of parameter sets No recording
	1	Activated	Start recording
2 Saving_start	0	Off	Saving of the existing recording on a USB stick No action
	1	On	Start saving process
3 Saving_abort	0	Off	Cancel saving No action
	1	On	Cancel saving process
4 Saving_status		Read value	Status of saving process
	0	Deactivated	Saving not possible
5 Recording_delete	1	Activated	Saving is enabled
	0	Off	Delete recording No action
	1	On	Delete recording

5.8.12 Cylinder extension submenu



The icon is only visible in the main menu if a cylinder extension board is present.

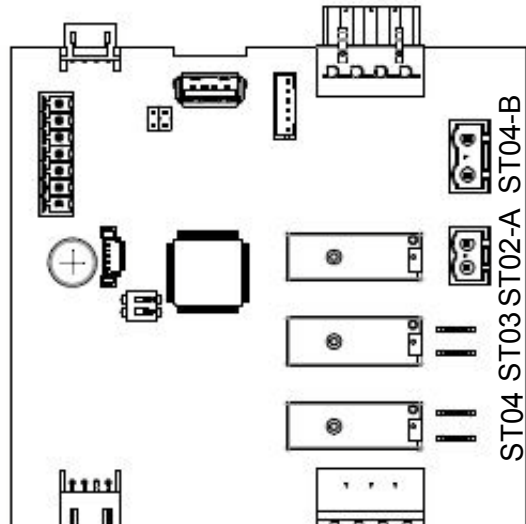


Table of control input parameters


17: Cylinder_extension

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary -> [] refers to a related explanation of the term
			Factory setting (FS)	Bold	FS	
1	Digital_input_function		Selection			Assignment of the digital input function [98] of the digital input [97] on the cylinder extension board
			see: 10-12 Function_digital_input			
8	V_Signal		Read value			Voltage signal measured on terminal ST0505
9	V_Signal_%		Read value			Processed input signal corresponding to measured voltage signal on terminal ST0505 [%]
10	mA_Signal		Read value			Current signal measured on terminal ST0506
11	mA_Signal_%		Read value			Processed input signal corresponding to measured current signal on terminal ST0506 [%]
12	Ω_Signal		Read value			Resistance signal measured on terminal ST0507
13	Ω_Signal_%		Read value			Processed input signal corresponding to measured resistance signal on terminal ST0507 [%]
14	°C-Signal		Read value			Temperature signal measured on terminal ST0507
15	Digital_input		Read value			Current state of digital input [97] on terminal ST0508
		0	Off			No switching signal
		1	On			Switching signal present

5.8.13 Relay extension 1 submenu



The icon is only visible in the main menu if relay extension 1 has been activated in the functions submenu. The assignment of the respective relays and the function definition of the digital input present on the relay card can be made here.

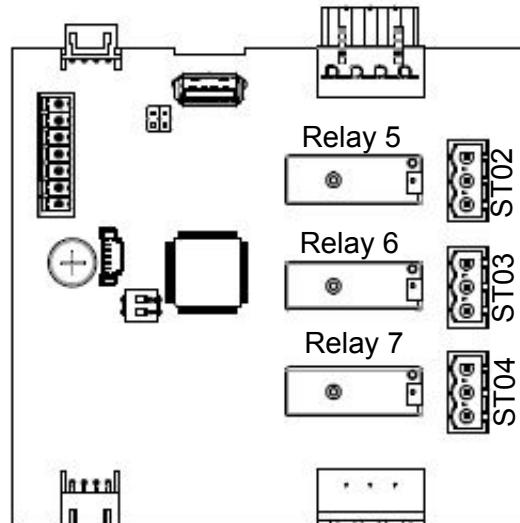

Relay designations on relay extension 1 p.c.b.

Table of control input parameters and possible relay assignments


18: Relay_extension 1

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary ->[] refers to a related explanation of the term
			Factory setting (FS)	Bold min	max FS	
1	Assignment_relay ST02		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
2	Assignment_relay ST03		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
3	Assignment_relay ST04		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
4	Digital_input_function		Selection			Mapping of the digital input function [98] to relay board 1
11	V_Signal		Read value			Voltage signal measured on terminal ST0505
12	V_Signal_%		Read value			Processed input signal corresponding to measured voltage signal on terminal ST0505 [%]
13	mA_Signal		Read value			Current signal measured on terminal ST0506
14	mA_Signal_%		Read value			Processed input signal corresponding to measured current signal on terminal ST0506 [%]
15	Ω_Signal		Read value			Resistance signal measured on terminal ST0507
16	Ω_Signal_%		Read value			Processed input signal corresponding to measured resistance signal on terminal ST0507 [%]
17	°C-Signal		Read value			Temperature signal measured on terminal ST0507
18	Digital_input		Read value			Current state of digital input [97] on terminal ST0508
		0	Off			No switching signal
		1	On			Switching signal present

5.8.14 Relay extension 2 submenu



The icon is only visible in the main menu if relay extension 2 has been activated in the functions submenu. The assignment of the respective relays and the function definition of the digital input present on the relay card can be made here.

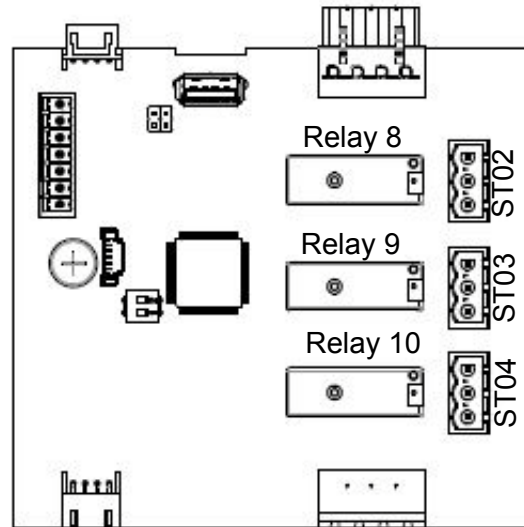

Relay designations on relay extension 2 p.c.b.


Table of control input parameters and possible relay assignments

19: Relay_extension 2

No.	Parameter	No.	Adjustment/value range			Meaning/Comment [] explains the term in the glossary -> [] refers to a related explanation of the term
			Factory setting (FS)	Bold min	max FS	
1	Assignment_relay ST02		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
2	Assignment_relay ST03		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
3	Assignment_relay ST04		Selection			Occupancy selection as for basic relay (see submenu Functions, 16)
4	Digital_input_function		Selection			Mapping of the digital input function [98] to relay board 1
11	V_Signal				Read value	Voltage signal measured on terminal ST0505
12	V_Signal_%				Read value	Processed input signal corresponding to measured voltage signal on terminal ST0505 [%]
13	mA_Signal				Read value	Current signal measured on terminal ST0506
14	mA_Signal_%				Read value	Processed input signal corresponding to measured current signal on terminal ST0506 [%]
15	Ω_Signal				Read value	Resistance signal measured on terminal ST0507
16	Ω_Signal_%				Read value	Processed input signal corresponding to measured resistance signal on terminal ST0507 [%]
17	°C-Signal				Read value	Temperature signal measured on terminal ST0507
18	Digital_input				Read value	Current state of digital input [97] on terminal ST0508
		0	Off			No switching signal
		1	On			Switching signal present

5.9 Screen 4 - Unit information

After an error or a status message has occurred, a display which provides information about the type of message appears in the main screen instead of the HygroMatik logo. The content of the message is described in Section 6.

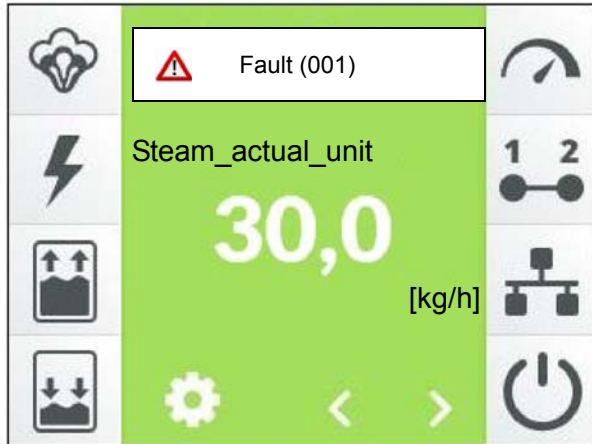

Touching this display field calls up the unit info screen which extends over several screen pages and contains comprehensive device data. As an example, one possible first screen page is shown here:

02: Information	
01: Error message_unit	
Plug_ST09	
02: Error_message_cyl. 1	
Plug_ST09	
04: Service_message_cyl. 1	
No_service_message	
06: Unit type	
FLE20-AA10	

The content of the screen pages is provided in the table in the next section.

Entries on the unit info screen

No.	Parameter	No.	Adjustment/value range			Meaning/comment [] explains the term in the glossary →[] refers to a related term explanation
			Factory presets (FP) bold		FP	
			min	max		
1	Fault_message_unit				Fault messages	
		0	No_fault		No error	
		1	Plug_ST09		The plug for the current transformer (ELDB [77]) or the level control (HKDB [78]) is not attached	
		2	Cylinder_extension 1		There is a problem with the expansion board (double cylinder units only)	
		6	Relay_extension 1		There is a problem with relay board 1	
		7	Relay_extension 2		There is a problem with relay board 2	
		24	Input_resistance_OC		Minimum value of resistance input not plausible	
		25	Input_resistance_SC		Maximum value of resistance input not plausible	
		29	Internal		System error	
		30	Filling_valve 1		Fault solenoid valve 1 [19]	
		32	Filling_valve 1 a. 2		Fault solenoid valve 1 and solenoid valve 2 [19]	
		61	Part_blow-down		Partial blow-down [21] not successful	
		62	Full_blow-down		Full blow-down [22] not successful	
		63	Blow-down_dilution		Dilution [23] was not successful (only for ELDB [77])	
		64	Max_current_blow-down		Overcurrent blow-down [24] was not successful (only for ELDB [77])	
		65	Max_level_blow-down		Max. level blow-down [25] was not successful (only for HKDB [78])	
		66	Standby_blow-down		Stand-by blow-down [26] not successful	
		67	Start_blow-down		Start blow-down [20] not successful	
		90	Cylinder_full		Sensor electrode reports cylinder full status [38] for 60 min (only for ELDB [77])	
		91	Current_measurement		Value provided by current measurement not plausible (only for ELDB [77])	
		92	Main_contactor_current		A current is measured for at least 15 s, even though the main contactor [72] is not actuated (only for ELDB [77])	
		93	Main_contactor_cyl_full		A cylinder full status [38] was detected for at least 15 s, even though the main contactor [75] is not actuated (only for ELDB [77])	
		120	Thermoswitch		A thermo sensor [31] has been triggered (only for HKDB [78])	
		121	Water_level_sensor		Value provided by level control [39] not plausible (only for HKDB [78])	
		122	Max.-level		Max. level [40] was reached 5 times in a row during filling (HKDB [78] only)	
		123	Steam_down_time		Despite a current feed to the radiators, the water level has not changed in the period specified →[53] (only for HKDB [78])	
		124	Relay_main_contactor		The relay for the control of the main contactor is not functioning correctly	
		210	Humidity_sensor		Humidity sensor, cable or input level defective	
2	Fault_message_cyl. 1				see above	
3	Fault_message_cyl. 2				see above	
5	Service_message_cyl. 1				Cylinder 1 service message	
		0	No_service_msg.		A service is not required	
		1	Steam_amount_counter		A unit service is required due to the steam volume counter	
		2	Cycles_main_contactor 1		The maximum number of operating cycles for K1 has been reached and a Service_main_contactor [34] is required	
		3	Cycles_main_contactor 2		The maximum number of operating cycles for K2 has been reached and a Service_main_contactor [34] is required (only double cylinder units)	
		12	Warning_electrodes		The electrode wear is very advanced (only for ELDB [77])	
		13	Warning_pump		A loss of functional performance has occurred in the area of the blow-down pump(s)	
		14	Warning_solenoid_valve		A loss of functional performance has occurred in the area of the solenoid valve(s)	
6	Service_message_cyl. 2				Cylinder 2 service message (double cylinder units only)	
		0	No_service_msg.		A service is not required	
		1	Steam_amount_counter		A unit service is required due to the steam volume counter	
		4	Cycles_main_contactor 3		The maximum number of operating cycles for K3 has been reached and a Service_main_contactor [34] is required	
		5	Cycles_main_contactor 4		The maximum number of operating cycles for K4 has been reached and a Service_main_contactor [34] is required	
		6	Cycles_main_contactor 5		The maximum number of operating cycles for K5 has been reached and a Service_main_contactor [34] is required	
		12	Warning_electrodes		The electrode wear is very advanced (only for ELDB [77])	
		13	Warning_pump		A loss of functional performance has occurred in the area of the blow-down pump(s)	
		14	Warning_solenoid_valve		A loss of functional performance has occurred in the area of the solenoid valve(s)	

Entries on the unit info screen (ctd.)

No.	Parameter	No.	Adjustment/value range Factory presets (FP) bold min max FP	Meaning/comment [] explains the term in the glossary ->[] refers to a related term explanation
7	Model		Reading value	Type designation of unit
8	Unit_name		Unit 1	Freely selectable text ex-factory. "System 1" is entered if this is not specified in the order. Entry can be overwritten in the field using the service tool.
9	Serial_number		Reading value	Serial number
10	Date_of_manufacturing		Reading value	Total operating time of unit since initial operation (specified in s)
11	Software_version		Reading value	Software version
12	Production_total_time		Reading value	Total duration of steam production since initial operation (specified in s)
13	Unit_total_runtime		Reading value	The total runtime of the unit since its first connection to the power supply
14	Steam_amount_total_cyl. 1		Reading value	Steam volume of cylinder 1 in kg produced since initial operation
16	Steam_amount_total_cyl. 1		Reading value	Steam volume of cylinder 2 in kg produced since initial operation (only for double cylinder units)

6. Faults and Warnings

6.1 Fault Management

In the event of a fault, the steam production is halted. The relevant display field is then shown instead of the HygroMatik logo. The display field shows a warning symbol, the „Fault“ message and - in paranthesis - the fault code:

e.g.:









When touching the fault message display field, the unit info screen opens with the fault message in plain text and information concerning the unit and its current state.






The majority of fault messages is additionally accompanied by the flashing of one or more icons, allowing for a first limitation of the cause of fault.


6.1.1 Table of Fault Messages, possible Causes and Countermeasures





These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
	001	Plug_(ST09) The plug for the current transducer or the water sensor is not connected.	<ul style="list-style-type: none"> • Plug sits not firmly or is not in place 	<ul style="list-style-type: none"> • Check plug and connect, if required
	002	Cylinder_extension Extension board not detected by the software.	<ul style="list-style-type: none"> • P.c.b. connection not o.k. • P.c.b. not present or defective • CAN bus addressing not correct 	<ul style="list-style-type: none"> • Check firm connection of boards • Connect board, replace board if defective • Check DIP switch settings on extension board (see fig. in section 3.4).
	006 007	Relay_extension 1 Relay_extension 2 Relay board (s) not detected by the software.	<ul style="list-style-type: none"> • P.c.b. connection(s) not o.k. • P.c.b.(s) not present or defective • CAN bus addressing not correct 	<ul style="list-style-type: none"> • Check firm connection of boards • Connect board(s), replace board(s) if defective • Check DIP switch settings on relay boards (see fig. in section 3.5).
	024 025)	Input_resistance_OC Input_resistance_SC *) The resistance measured is not correct („infinite“ or „zero“, resp.)	<ul style="list-style-type: none"> • Sensor, wiring or signal source defective • Input stage defective 	<ul style="list-style-type: none"> • Check sensor, wiring and signal source, if relevant • Replace main board
*) When the PI controller is in use, faults 024 and 025 relate to the sensor. In case of an external controller, the signal source is referred to.				

These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
	029	Internal	<ul style="list-style-type: none"> • Main board is defective 	<ul style="list-style-type: none"> • Replace mainboard
	030 032	<p>Filling_valve 1 Filling_valve 1 a. 2 Filling was not successful, i.e. the expected filling level was not achieved after 30 mins of filling.</p>	<ul style="list-style-type: none"> • Solenoid valve or water supply line contaminated or defective • Solenoid valve defective • Water supply not opened • Solenoid valve electrically not driven <ul style="list-style-type: none"> - electrical cabling not o.k. - Mainboard relay not energised • Steam hose not laid with sufficient incline/decline resulting in a water bag obstructing steam flow. Steam builds up pressure in steam cylinder and pushes water towards drain • Blockage in steam pipe impedes the steam flow. The steam builds up pressure in the cylinder and presses the water into the drain. • L3 phase break-down • Main contactor does not switch L3 phase 	<ul style="list-style-type: none"> • Clean water supply line and/or solenoid valve; replace solenoid valve, if defective • Make measurement on solenoid; replace solenoid valve, if defective • Open water supply - Check electrical cable and replace, if required - Measure voltage on mainboard terminal 11 against N; replace mainboard, if required • Check steam hose layout. Eliminate water bag. • Remove blockage in steam pipe • Reestablish L3 phase feeding • Replace main contactor

These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
	061 062 063 064 065 066 067	<p>Part_blow-down Full_blow-down Blow-down_dilution(only ELDB) Max._current_blow-down (only ELDB) (Max._level_blow-down (only HKDB) Standby_blow-down Start_blow-down (only HKDB)</p> <p>The respective blow-down was not successful.</p>	<ul style="list-style-type: none"> • Blow-down pump is not driven <ul style="list-style-type: none"> - electrical wiring is not o.k. - Mainboard relay is not energised • Blow-down pump defective • Blow-down pump is working but water is not drained (i.e. cylinder drain is blocked) • Blow-down pump blocked by scale deposits • Water sensor defective (only HKDB) 	<ul style="list-style-type: none"> - Check wiring and replace, if required - Measure voltage on mainboard terminal 10 against N; replace mainboard, if required • Replace blow-down pump • Check blow-down pump, drainage system and steam cylinder for hardeners and clean • Check blow-down pump, drain system and cylinder for scale deposits and clean • Replace water sensor
	090	<p>Cylinder_full (only ELDB) The sensor electrode consistently reports cylinder full status for 60 min</p>	<ul style="list-style-type: none"> • Low or widely fluctuating water conductivity • Electrodes worn out • No electrode cable run through current transducer • Salt bridges in steam-cylinder upper part • Foaming (when softened water is used) 	<ul style="list-style-type: none"> • Check feed water quality; consult your expert dealer, if required • Replace electrodes • Run one phase through current transducer • Clean • Increase blending rate (bigger raw water proportion)
 	091	<p>Current_measurement (only ELDB) The current transducer reading is not correct</p>	<ul style="list-style-type: none"> • Plug is not seated properly on mainboard • Current transducer defective 	<ul style="list-style-type: none"> • Check plug seating • Replace current transducer

These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
	092	Main_contactor_current (only ELDB) A current is measured though the main contactor is not driven.	<ul style="list-style-type: none"> • Main contactor contact sticks 	<ul style="list-style-type: none"> • Replace main contactor
	093	Main_contactor_cyl._full (only ELDB) „Cylinder full“ is detected though the main contactor is not driven.	<ul style="list-style-type: none"> • Main contactor contact sticks 	<ul style="list-style-type: none"> • Replace main contactor
	120	Thermoswitch (only HKDB) Minimum one of the thermoswitches has tripped.	<ul style="list-style-type: none"> • Thermoswitch on steam cylinder cover has tripped due to lime coating on heating element • Capillary tube defective • Thermo switch on solid state relay has triggered due to blocked ventilation 	<ul style="list-style-type: none"> • Switch off power supply. Remove lime coating. Allow cool-down of steam cylinder. Push-back unblocking pin on thermoswitch with needle-nose pliers or a screwdriver • Replace thermoswitch • Switch off unit. Allow cool-down of heat sink. Remove blockage. Ensure unobstructed ventilation. Restart humidifier operation.
 	121	Water_level_sensor (only HKDB) The water sensor reading is not plausible.	<ul style="list-style-type: none"> • Water sensor is defective • Connecting hoses blocked 	<ul style="list-style-type: none"> • Replace water sensor • Clean hoses

These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
	<p>122</p>	<p>Max.-level (only HKDB)</p> <p>Water level has reached its maximum 5x in one single steam production phase.</p>	<ul style="list-style-type: none"> • Excessive air pressure in duct has impact on water in steam cylinder via steam hose. Water is pressed into drainage • Solenoid valve closing action imperfect. Cylinder water level rises though solenoid valve is not energised • Solenoid valve is permanently energised (water intake stops when unit is switched off) • Large amounts of residues influence or restrict cyclic blow-down. The additional water introduction caused by the optional HyFlush rinse device may cause the max. level fault 	<ul style="list-style-type: none"> • Reduce air pressure, check steam hose for blockages • Check solenoid valve • Relay contacts on mainboard stick. Measure voltage across terminal 11 and N; replace mainboard, if required • Clean steam cylinder, cylinder base, water sensor tubing and drainage system

These icons flash	Fault Code	Fault message	Possible cause	Countermeasure
 	123	<p>Steam_down_time (only HKDB) The heaters are supplied with current, but water level doesnot change.</p>	<ul style="list-style-type: none"> • Heater element is defective • Phase failure (external circuit breaker has tripped or is defective) • Heater elements not supplied with voltage • Main contactor swiching not o.k. • Main contactor not driven by mainboard relay 	<ul style="list-style-type: none"> • Measure heater element resistance; replace heater element, if required. Nominal resistance values are: FLH03 - 2.25 kW / 230 V - 21.3 - 26.1 Ω FLH06 – 4.5 kW / 400 V – 32.3 - 39.5 Ω FLH09 – 6.75 kW / 400 V - 21.5 - 26.3 Ω FLH15 – 3.8 kW / 400 V – 38.2 - 46.8 Ω (3x) FLH25 – 6.3 kW / 400 V – 23.1 - 28.2 Ω (3x) FLH30 – 3.8k W / 400 V - 38.2-46.8 Ω (6x) FLH40 – 6.3 kW / 400 V – 23.1 - 28.2 Ω (3x) + 3.8 kW / 400 V – 38.2 - 46.8 Ω (3x) FLH50 – 6.3 kW / 400 V – 23.1 - 28.2 Ω (6x) • Replace external circuit breaker, eliminate cause for tripping • Check wiring and voltage supply • Check main contactor; replace, if required • Measure voltage on mainboard terminal 9 against N; replace mainboard, if required
	124	<p>Relay_main_contactor (only HKDB) The main contactor is not driven by the electronics on the mainboard, but a voltage is measured</p>	<ul style="list-style-type: none"> • Mainboard relay contacts stick 	<ul style="list-style-type: none"> • Replace mainboard
	210 211	<p>Humidity_sensor Humidity_sensor 2 The respective humidity sensor reading is implausible.</p>	<ul style="list-style-type: none"> • Sensor cable defective • Sensor defective 	<ul style="list-style-type: none"> • Check sensor cable • Replace sensor

6.2 Service messages and warnings

Service messages and warnings are shown on the main screen in place of the HygroMatik logo, when the cause has occurred. When tipping the display field, the unit info screen is shown with the messages in plain text.

Mainscreen presentation	Message	Possible cause	Countermeasure
	Steam_amount counter	The maintenance interval has expired.	Service or check steam humidifier. Reset the steam amount counter (also see chapter 5.8.4.1 Monitoring and service messages“).
	Cycles_main_contactor x	The maximum number of operating cycles for the main contactor „X“ has been reached (the device can contain several main contactors. „x“ represents the designation number of the main contactor concerned).	The main contactor should be changed. After replacement, the respective counter must be reset with the parameter „Main_contactor_Kx_Reset“ (x=number of main contactor, 1...5) (also see chapter 5.8.4.1 Monitoring and service messages“).
	Warning_cyl._full (only ELDB)	Electrode wear is very advanced.	Replace Electrodes.
	Warning_pump	A performance capability decrease is detected in the area of the blow-down pump and its hosing.	Check area and clean. If warning persists, replace blow-down pump.
	Warning_valve	A performance capability decrease is detected in the area of the solenoid valve, cylinder base and its hosing.	Check area and clean. If warning persists check cylinder base for lime deposit.

The sensitivity threshold of the last three warning messages is set to the highest level ex-factory. Should the on-site conditions (e.g. the water conductivity) lead to an unwanted frequent occurrence of the messages, the sensitivity can be reduced in the „Service“ submenu (s. section 5.8.4).

6.3 Table of functional disruptions

Problem	Possible cause for faulty situation	Countermeasure
Set humidity level not reached	<ul style="list-style-type: none"> • Output limitation parameter setting impedes full power output • Nominal unit output insufficient • Phase failure • Lengthy steam hose layout crossing cold and drafty rooms may lead to increased condensate formation • Improper steam manifold installation may cause condensate formation within air duct • Control signal not properly selected or software setting mismatch • Water quality requires water concentration for full steam output • Excessive pressure in duct system caused by e.g. water bags or partly blocked steam pipes (max. overpressure is 1200 Pa) 	<ul style="list-style-type: none"> • Check „Steam_output_max.“ parameter setting („Control“ submenu, line 2) • Check unit technical data, airflow and secondary airflow • Check circuit breakers • Change unit installation location allowing for shorter steam hose. Insulate steam hose • Check steam manifold position within total system and installation correctness • Check control signal and „Control_settings“ parameter („Control“ submenu, line 1) • Wait • Eliminate particular cause(s)
Excessive humidity	<ul style="list-style-type: none"> • If steam output is too high, poor control performance may result and even condensate formation in ducts • Control signal not properly selected or software setting mismatch 	<ul style="list-style-type: none"> • Check „Steam_output_max.“ parameter setting („Control“ submenu, line 2) • Check control signal and „Control_settings“ parameter („Control“ submenu, line 1)


Problem	Possible cause for faulty situation	Countermeasure
Water collects on bottom plate	<ul style="list-style-type: none"> • Cylinder improperly reassembled following maintenance: <ul style="list-style-type: none"> - O-ring not replaced, defective or not in place - Flange (tongue and groove) damaged - Flange improperly composed - Mineral deposits in flange area • Cylinder improperly inserted in cylinder base • Water cannot drain freely when pumped from cylinder 	<ul style="list-style-type: none"> • Clean cylinder and assemble / install properly • Using moistened new O-ring, insert steam cylinder properly into cylinder base • Make sure drain is unobstructed
Water leaks from steam cylinder upper part	<ul style="list-style-type: none"> • Hose clamps on steam and/or condensate hose not tightened <p>Steam hose adapter not properly fit or O-ring not replaced</p>	<ul style="list-style-type: none"> • Tighten clamps <p>Replace O-ring (if required) and ensure proper adapter installation</p>
No steam production despite the steam humidifier being switched on. Display not illuminated	<ul style="list-style-type: none"> • Defective F1 and/or F2 fuses on main-board • External control voltage failure (ext. circuit breaker has tripped or is defective) • device load circuit breaker has tripped (only ELDB) 	<ul style="list-style-type: none"> • Check micro fuses and replace, if required • Replace breaker and investigate possible causes • Switch on breaker. If problem persists, check for reason
No steam production despite the steam generator being switched on and an illuminated display	<ul style="list-style-type: none"> • The interlock (safety) system is open • The humidity set value has been reached. The control receives no demand for steam production. • A fault has occurred 	<ul style="list-style-type: none"> • Close interlock (safety) system • Check humidity set value and plausibility of actual humidity value • Check unit status
No steam production. Voltage across electrodes exist, but no water is fed into the cylinder (only ELDB)	<ul style="list-style-type: none"> • Water supply not opened or solenoid valve electrically not driven 	<ul style="list-style-type: none"> • Open water supply (s. also Filling fault messages 030 and 032)


Problem	Possible cause for faulty situation	Countermeasure
Blow-down pump works but not water is drained	<ul style="list-style-type: none"> • Steam cylinder and/or drainage system blocked 	<ul style="list-style-type: none"> • Clean cylinder base and/or drainage system, respectively
Cylinder is fully drained after partial blow-down despite pump being switched off	<ul style="list-style-type: none"> • Vent pipe is blocked 	<ul style="list-style-type: none"> • Clean venting bore; replace vent pipe, if required
No steam exit from steam manifold	<ul style="list-style-type: none"> • Steam pipe improperly laid (water bag) or blockage 	<ul style="list-style-type: none"> • Rerun steam hose according to guide lines, remove blockage
Water exits periodically from drain hose without pump switched on	<ul style="list-style-type: none"> • Excess pressure in duct system (max. overpressure is 1200 Pa) 	<ul style="list-style-type: none"> • Lengthen drain hose system; consult your expert dealer if problem persists
Uneven electrode wear	<ul style="list-style-type: none"> • One or more electrodes not supplied with power • Circuit breaker tripped • Main contactor contact not functional • Phase loading not symmetric • Electrode immersion depth differs. Unit not mounted plumb 	<ul style="list-style-type: none"> • Check power supply and wiring • Check circuit breaker. Replace, if required • Check main contactor. Replace, if required • Ensure power supply phase balance by measurement • Check installation and correct positioning, if required

Problem	Possible cause for faulty situation	Countermeasure
Flashover/sparks in cylinder(only ELDB)	<ul style="list-style-type: none"> • Very high water conductivity resulting in massive electrode burn-off as indicated by brown-black deposits • Blow-down pump not working properly or defective 	<ul style="list-style-type: none"> • Deactivate unit immediately to prevent material damage Perform maintenance: <ul style="list-style-type: none"> - replace electrodes with high conductivity type - clean steam cylinder - check water quality and conductivity (also s. „Intended use“ section) - optimise blow-down parameters Consult your expert dealer, if required • Check blow-down pump functioning and replace pump, if required. See also fault messages 061 to 067 related to blow-down

7. Wiring diagrams

7.1 FLE Single cylinder units

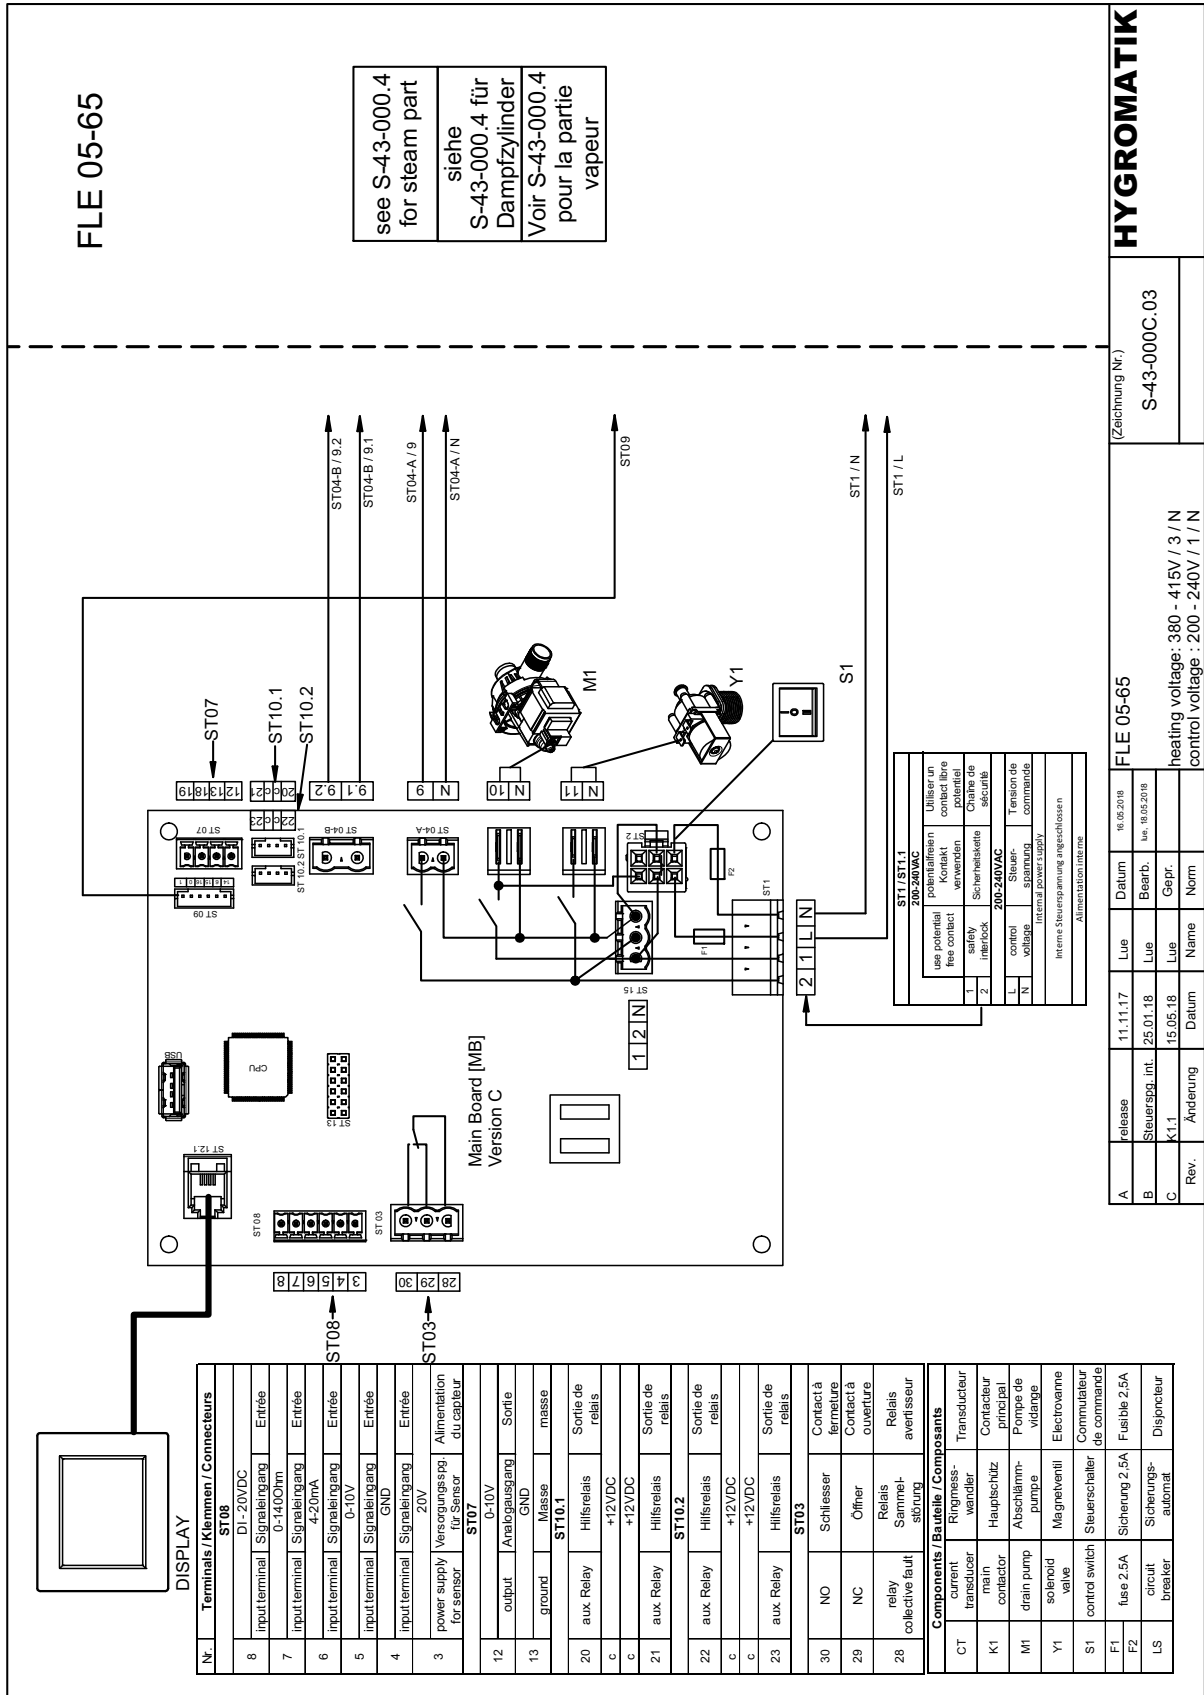

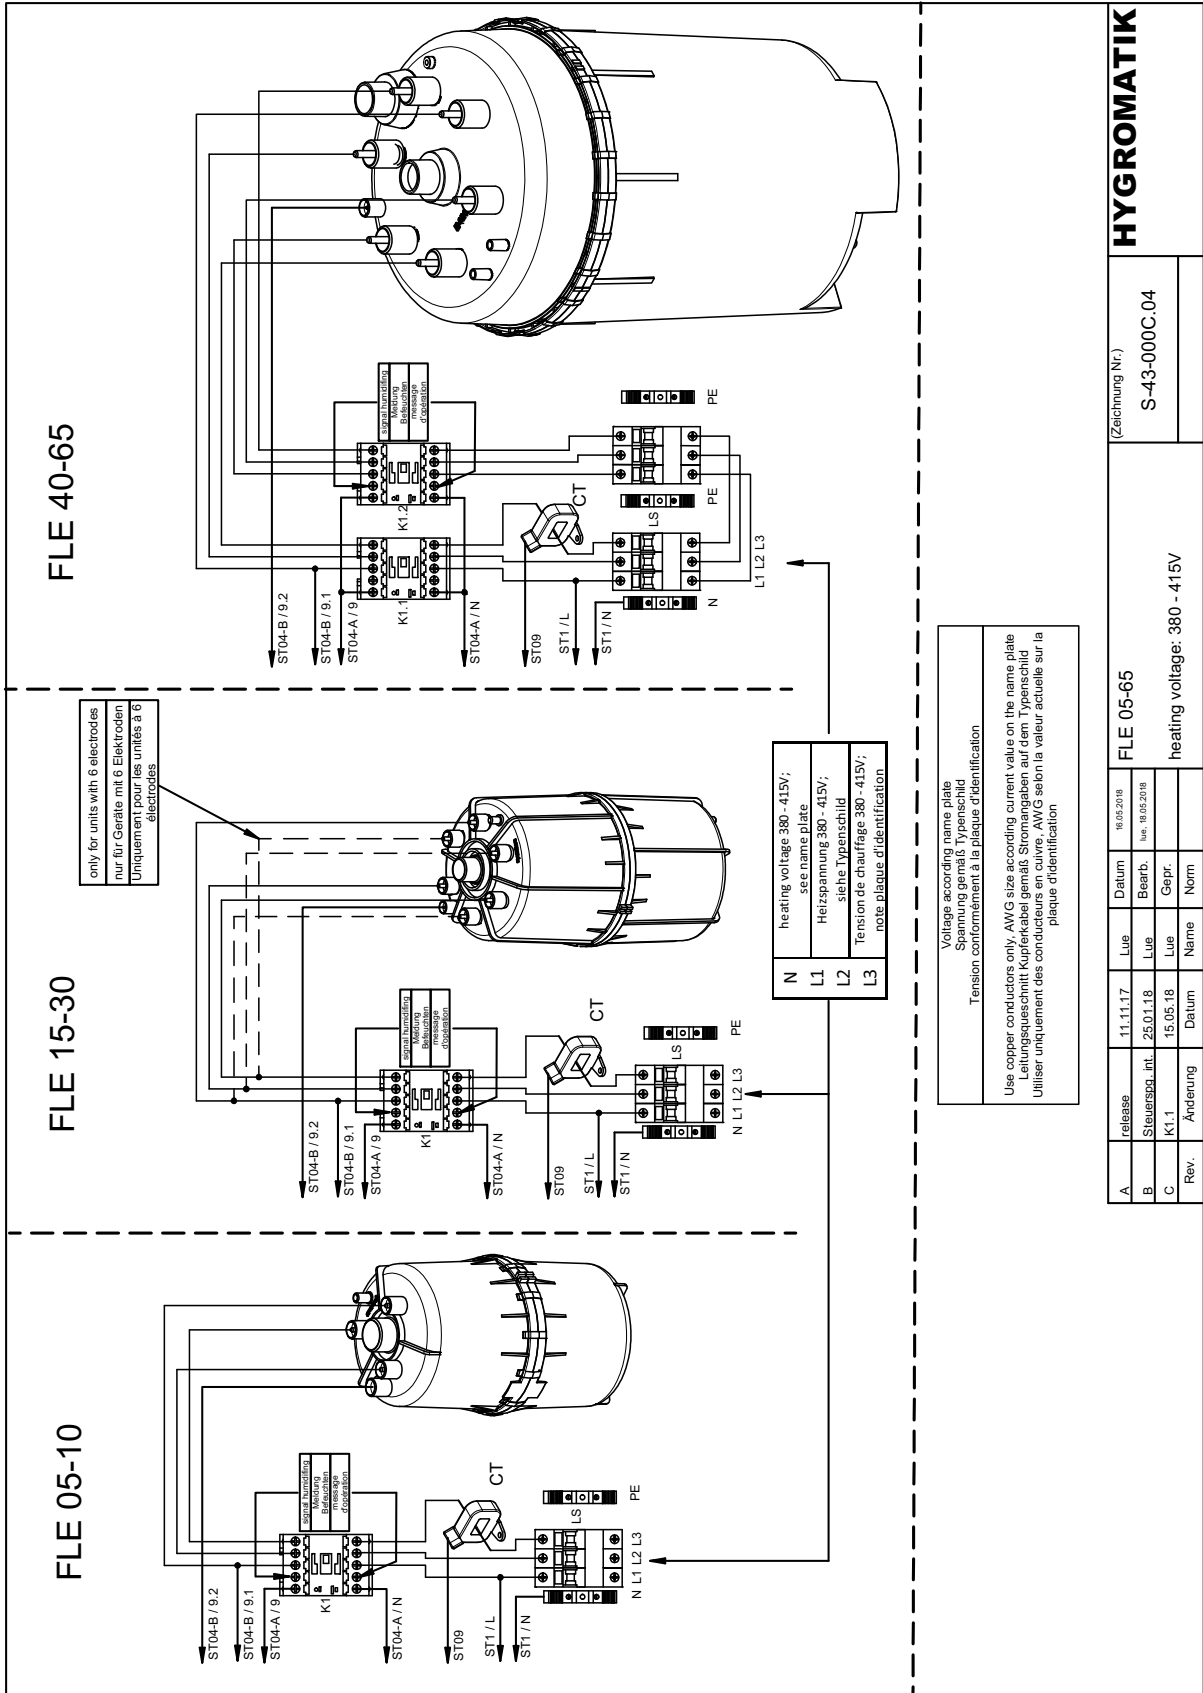

Voltage according name plate
Spannung gemäß Typenschild
Tension conformément à la plaque d'identification

Use copper conductors only, AWG size according current value on the name plate
Leitungsschnitt Kupferkabel gemäß Stromangaben auf dem Typenschild
Utiliser uniquement des conducteurs en cuivre, AWG selon la valeur actuelle sur la plaque d'identification

HYGROMATIK


(Zeichnung Nr.)
S-43-000C.04

FLE 05-65
heating voltage: 380 - 415V

A	release	11.11.17	Lue	Datum	16.05.2018
B	Steuerstg. i.Hl.	25.01.18	Lue	Bearb.	16.05.2018
C	K1.1	15.05.18	Lue	Gepr.	
Rev.	Änderung	Datum	Name	Norm	

FLE 05-65

see S-43-000.2
for steam part
siehe
S-43-000.2 für
Dampfzylinder
Voir S-43-000.2
pour la partie
vapeur

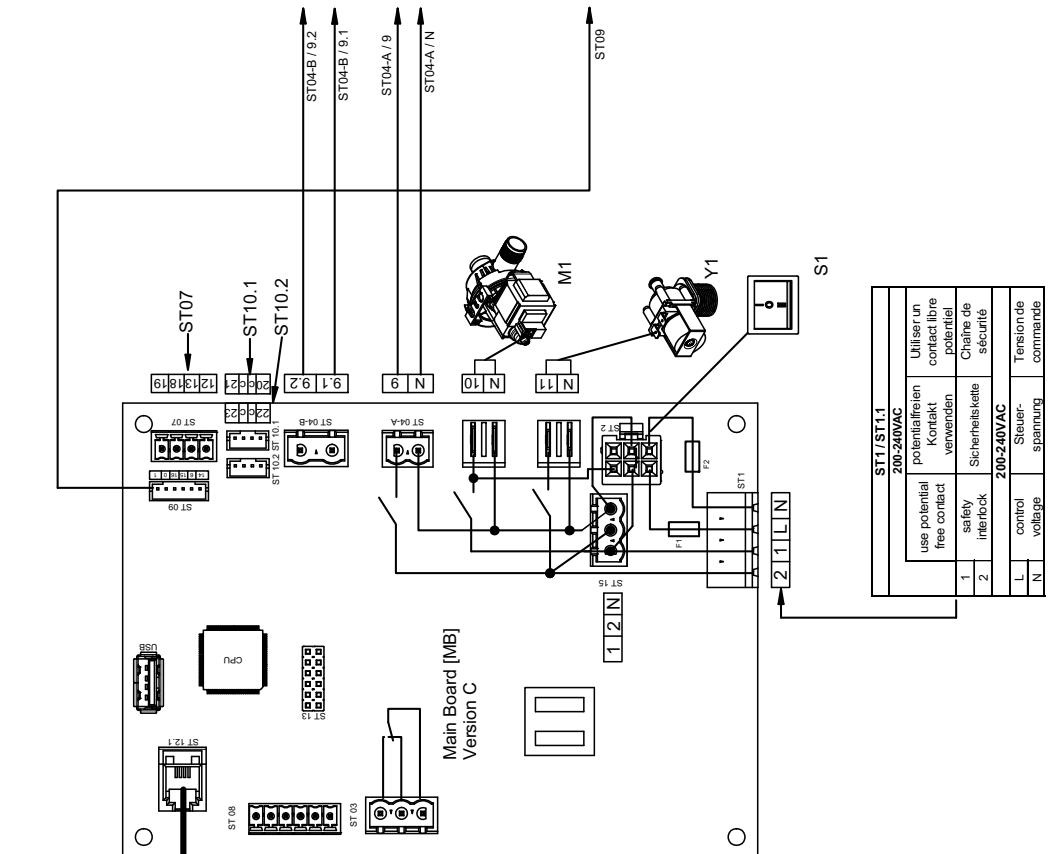

Terminale / Klemmen / Connecteurs	
ST08	
8	DI-20VDC
8	Input terminal Signaleingang Entrée
7	0-140Ohm
7	Input terminal Signaleingang Entrée
6	4-20mA
6	Input terminal Signaleingang Entrée
5	0-10V
5	Input terminal Signaleingang Entrée
4	GND
4	Input terminal Signaleingang Entrée
3	20V
3	Input terminal Signaleingang Entrée
3	power supply Versorgungsspg. für Sensor
3	Alimentation du capteur
ST07	
12	0-10V
12	output Analogausgang Sortie
13	GND
13	ground Masse masse
ST10.1	
20	aux.Relay
20	Hilfsrelais
20	Sortie de relais
c	+12VDC
c	Sortie de relais
ST10.2	
21	aux.Relay
21	Hilfsrelais
21	Sortie de relais
22	aux.Relay
22	Hilfsrelais
22	Sortie de relais
c	+12VDC
c	Sortie de relais
ST03	
30	NO
30	Schliesser
30	Contact à fermeture
29	NC
29	Offner
29	Contact à ouverture
28	Relais
28	Relais
28	Relais
28	Sammel-schaltung
28	avertisseur

ST1 / ST1.1	
200-240VAC	potentialfreien Kontakt verwenden
200-240VAC	utiliser un contact libre potentiel
1	safety interlock
1	Sicherheitskette
1	chaîne de sécurité
L	control voltage
L	Steuer-spannung
N	commande


HYGROMATIK

(Zeichnung Nr.)
S-43-000C.01

FLE 05-65
heating voltage : 200 - 480V / 3
control voltage : 200 - 240V / 1

Rev.	Änderung	Datum	Name	Norm
A	release	11.11.17	Lue	
B	Steuerspg. int.	25.01.18	Lue	
C	K1.1	15.05.18	Lue	


Components / Bauteile / Composants			
CT	current transducer	Ringstrom-wandler	Transducteur
K1	contact	Hauptschutz	Contacteur principal
M1	drain pump	Abschlämp-pumpe	Pompe de dégrillage
Y1	solenoid valve	Magnetventil	Electrovanne
S1	control switch	Steuerschalter	Commutateur de commande
F1	fuse 2.5A	Sicherung 2,5A	Fusible 2,5A
F2	fuse 2.5A	Sicherung 2,5A	Fusible 2,5A
LS	circuit breaker	Sicherungs-automat	Disjoncteur

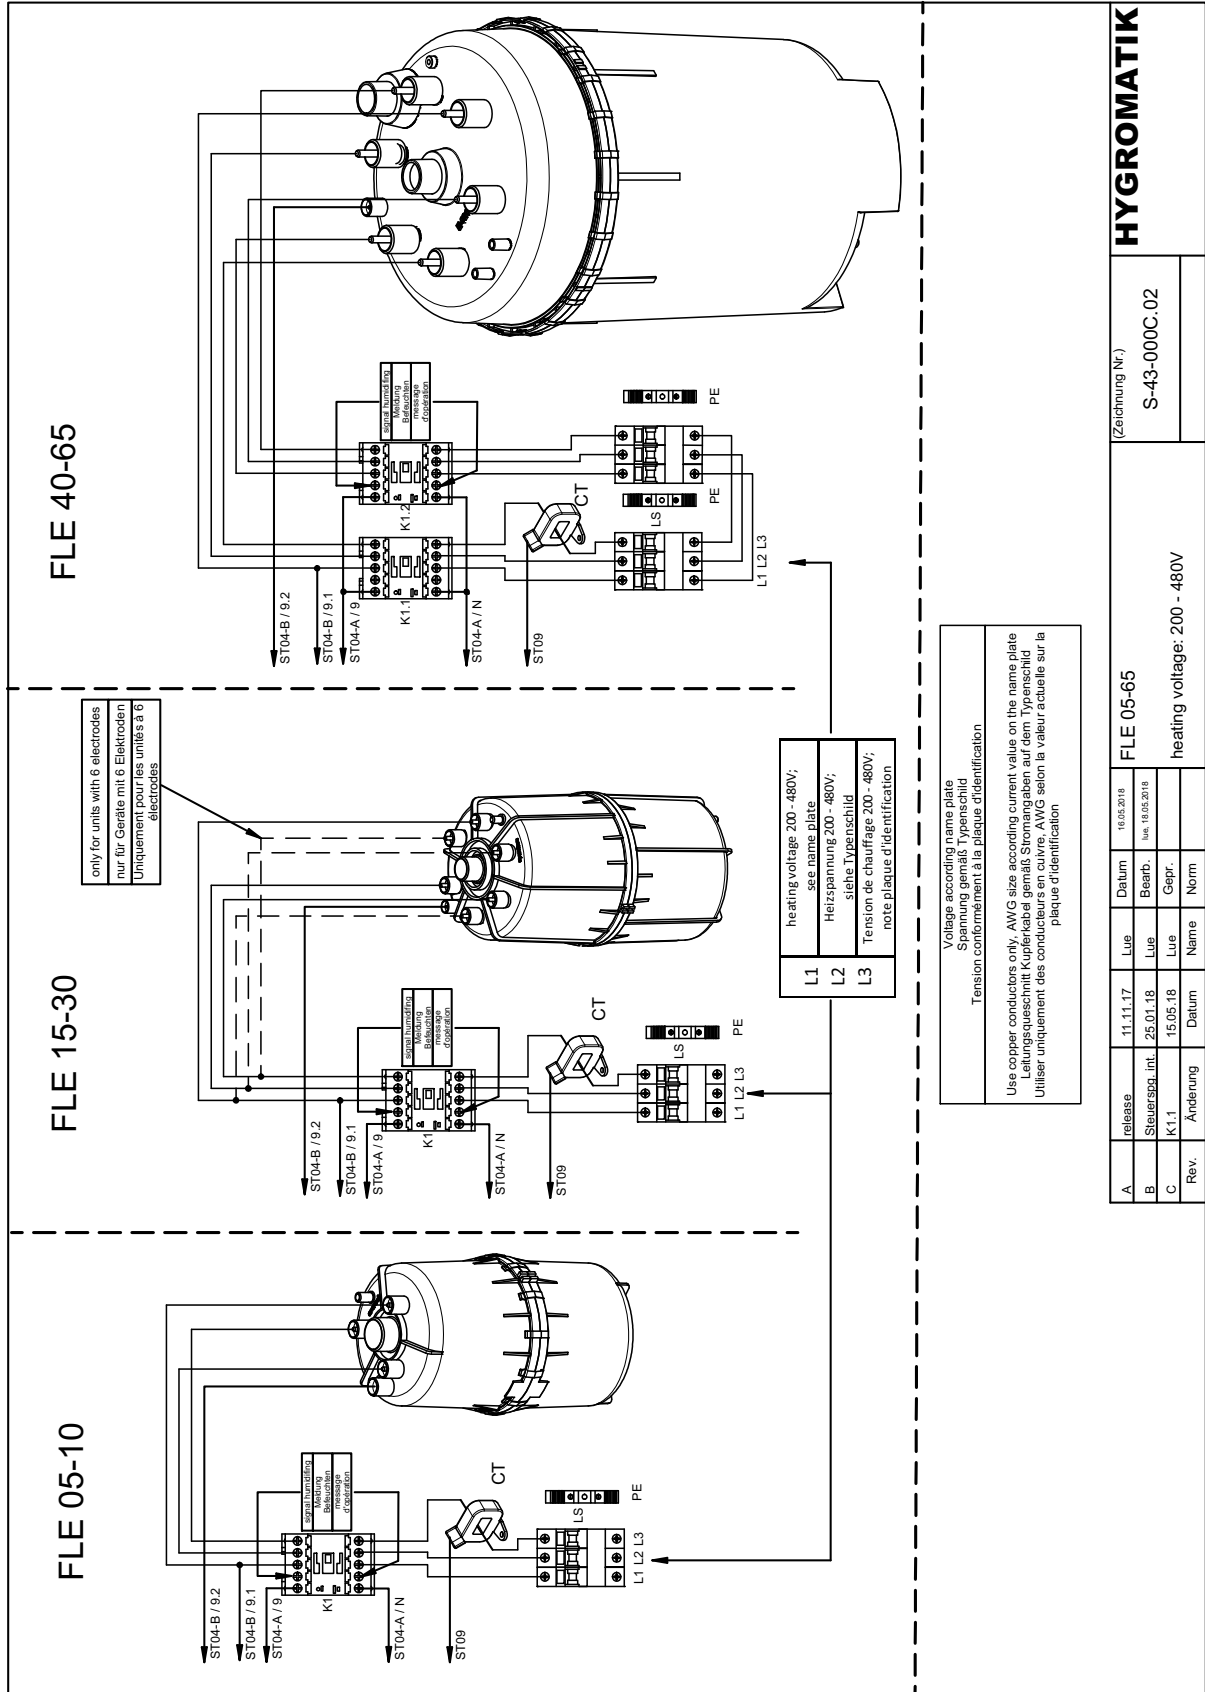

A		release	11.11.17	Lue	16.03.2018	Datum	
B		Steuerspp.int.	25.01.18	Lue	16.03.2018	Beerb. lue, 16.03.2018	
C		K1.1	15.05.18	Lue		Gepr.	
Rev.	Änderung	Datum	Name				Norm

HYGROMATIK		(Zeichnung Nr.)	
		S-43-000C.02	
		heating voltage: 200 - 480V	

7.2 FLE Double cylinder units

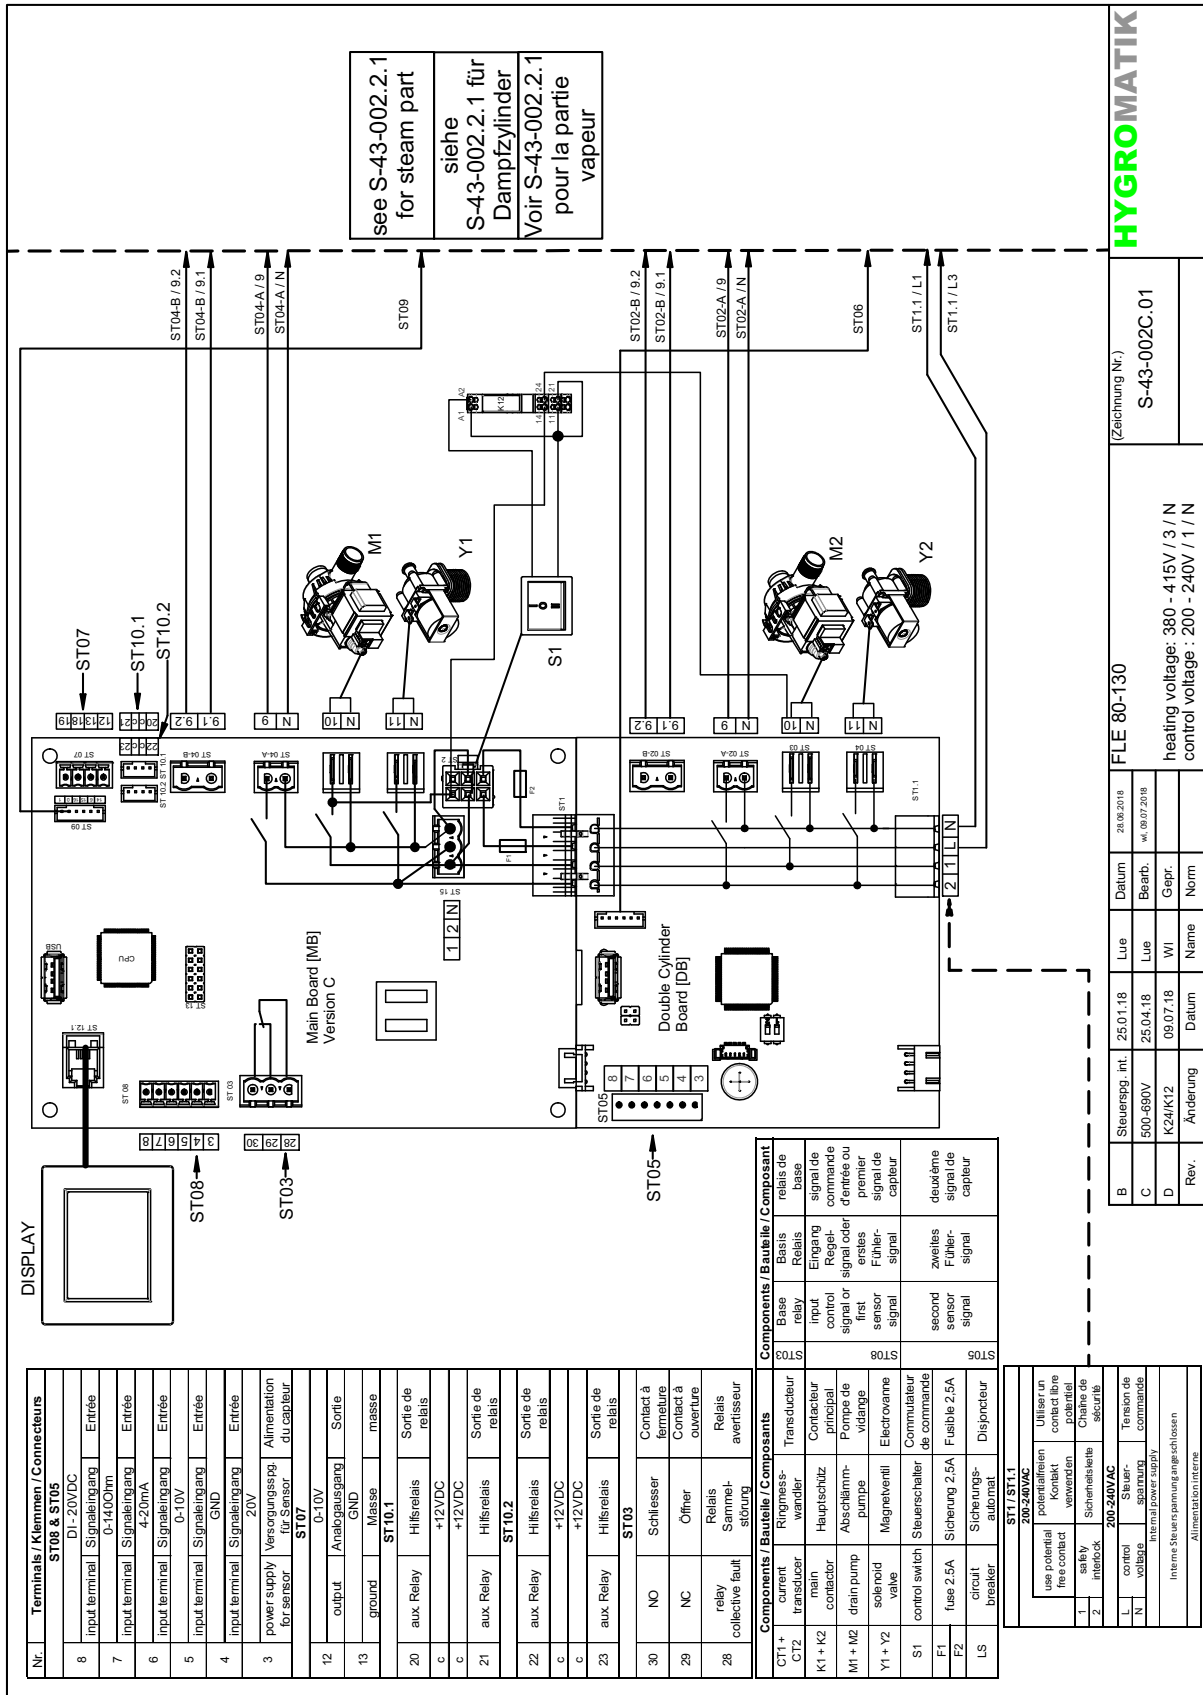

see S-43-002.2.1
for steam part
siehe
S-43-002.2.1 für
Dampfzylinder
Voir S-43-002.2.1
pour la partie
vapeur

Terminals / Klemmen / Connecteurs	
ST08 & ST05	
8	input terminal DI-20VDC Signaleringang Entrée
7	input terminal 0-1400Ohm Signaleringang Entrée
6	input terminal 4-20mA Signaleringang Entrée
5	input terminal 0-10V Signaleringang Entrée
4	input terminal GND Signaleringang Entrée
3	power supply 20V Vorsorgungsspg. für Sensor du capteur du capteur
ST07	
12	output 0-10V Analogausgang Sortie
13	ground GND Masse masse
ST10.1	
20	aux. Relay Hilfrelais Sortie de relais
c	+12VDC
21	aux. Relay Hilfrelais Sortie de relais
c	+12VDC
22	aux. Relay Hilfrelais Sortie de relais
c	+12VDC
23	aux. Relay Hilfrelais Sortie de relais
ST03	
30	NO Schlosser Contact à fermeture
29	NC Öffner Contact à ouverture
28	relay collective fault Relais Sammel- störung avertisseur

Componants / Bauteile / Composants	
CT1 + CT2	current transducer Ringsens- wandler Transducteur relais de base
K1 + K2	main contactor Hauptschütz principal contacteur Relais signal de commande
M1 + M2	drain pump Abschlamm- pumpe Pompe de vidange
Y1 + Y2	solenoid valve Magneventil Electrovanne de commande
S1	control switch Steuerschalter Commutateur de commande
F1	fuse 2.5A Sicherung 2,5A Fusible 2,5A
F2	circuit breaker Sicherungs- automat Disjoncteur
LS	
ST03	Base relay Relais Input control signal or first sensor signal
ST08	second sensor signal zweites Fühler- signal
ST05	second sensor signal deuxième signal de capteur

200-230VAC	
1	use potential free contact Sicherungs- kontakt
2	use potential free contact Sicherungs- kontakt
200-240VAC	
L	control voltage
N	control voltage
Intrinsèque Steuerspannung ange-schlossen Alimentation interne	

HYGROMATIK


(Zeichnung Nr.)
S-43-002C.01

FLE 80-130
heating voltage: 380 - 415V / 3 / N
control voltage: 200 - 240V / 1 / N


Steuerspp. int.	Lue	Datum
B	25.01.18	28.08.2018
C	500-690V	25.04.18
D	K24/K12	09.07.18
Rev.	Änderung	Datum
	Name	Norm
	WI	Gepr.
	WI	Bearb.
	WI	Datum

FLE 80-130

Left cylinder
Linker Zylinder
Cylindre gauche

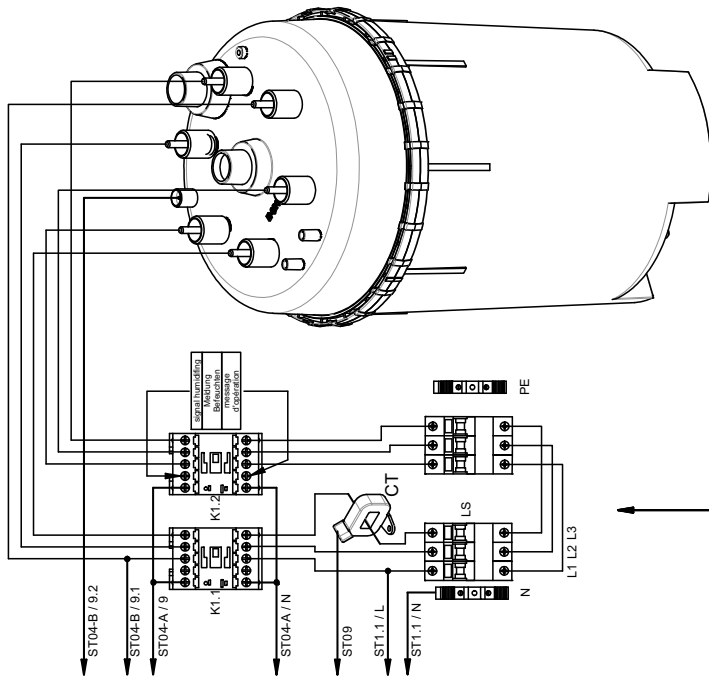

Right cylinder
Rechter Zylinder
Cylindre droit

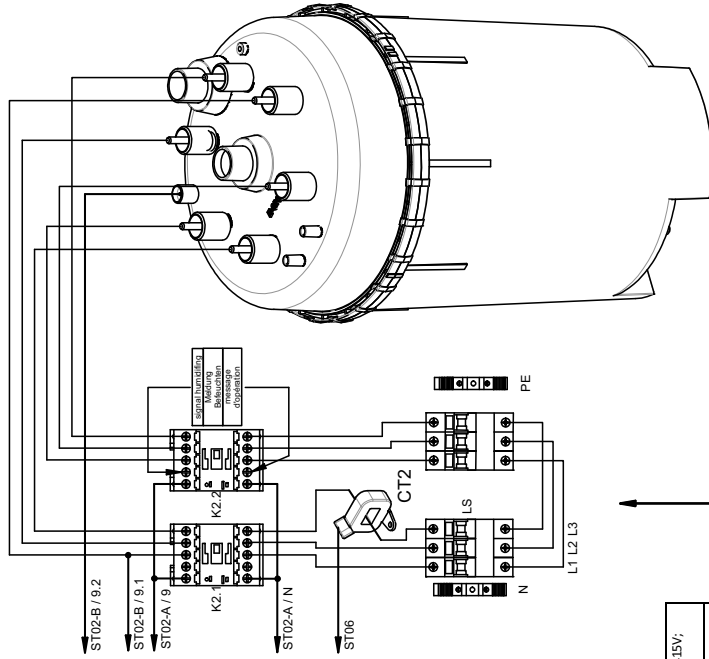


N	heating voltage 380 - 415V; see name plate.
L1	Heizspannung 380 - 415V; siehe Typenschild
L2	Tension de chauffe 380 - 415V; note plaque d'identification
L3	

Voltage according name plate
Spannung gemäß Typenschild
Tension conformément à la plaque d'identification

Use copper conductors only, AWG size according current value on the name plate
Leitungsquerschnitt Kupferkabel gemäß Stromangaben auf dem Typenschild
Utiliser uniquement des conducteurs en cuivre, AWG selon la valeur actuelle sur la plaque d'identification

A		release	11.11.17	Lue	Datum	FLE 80-130		(Zeichnung Nr.)	
B		Steuerung int.	25.01.18	Lue	Bearb.	heating voltage: 380 - 415V / 3 / N		S-43-002C.02.1	
C		div. Updates	09.07.18	WI	Gepr.				
Rev.		Änderung	Datum	Name	Norm				

HYGROMATIK

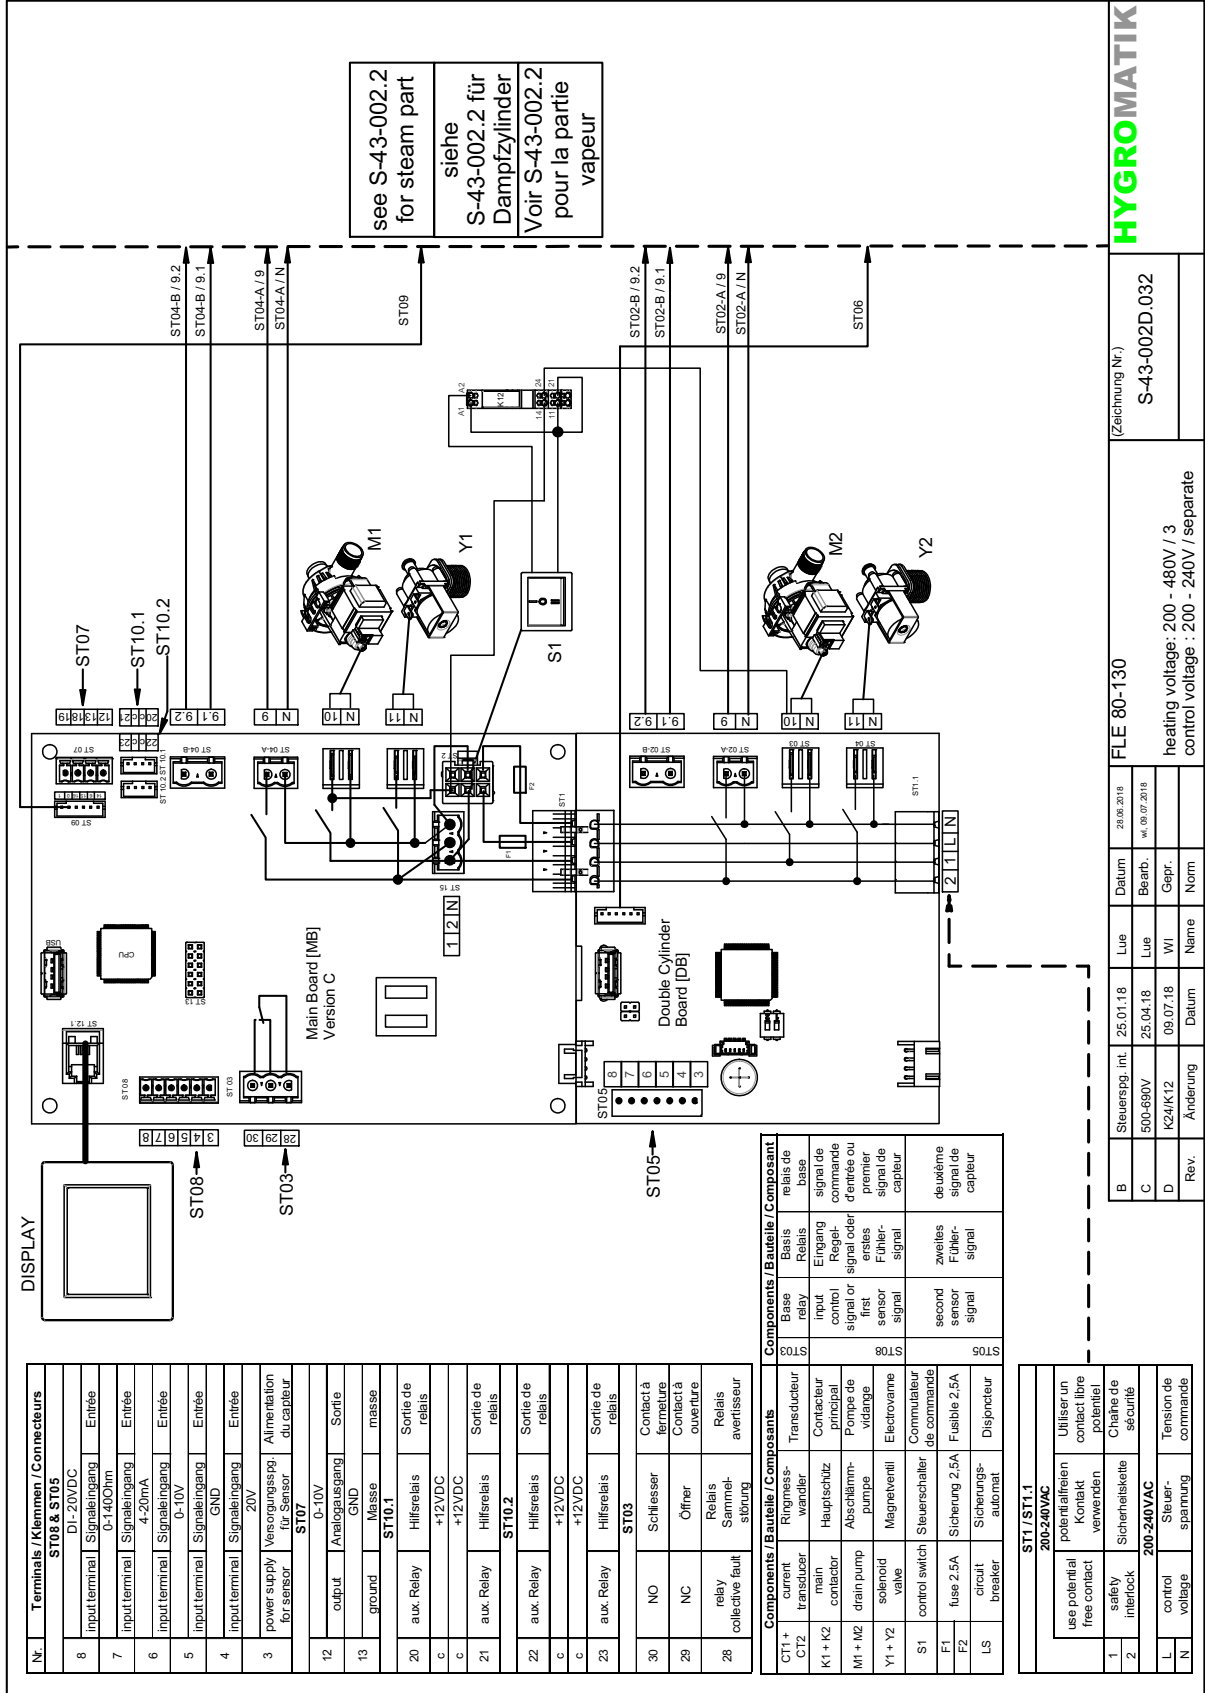

Nr. Terminals / Klemmen / Connecteurs	
ST08 & ST05	
8	DI-20VDC
7	Input terminal Signaleingang
6	Input terminal Signaleingang
5	Input terminal Signaleingang
4	Input terminal Signaleingang
3	power supply Versorgungsspannung für Sensor
12	output Avaloausgang
13	ground Masse
20	aux. Relay Hilfsrelais
c	+12VDC
21	aux. Relay Hilfsrelais
22	aux. Relay Hilfsrelais
c	+12VDC
23	aux. Relay Hilfsrelais
30	NO Schliessler
29	NC Öffner
28	relay collector fault Relais Sammelstörung

Components / Bauteile / Composants	
CT1+	current transducer Stromwandler
K1 + K2	main contactor Hauptschütz
M1 + M2	drain pump Abschlämp- und Abwässerpumpe
Y1 + Y2	solenoid valve Magnetventil
S1	control switch Steuerschalter
F1	fuse 2.5A Sicherung 2,5A
F2	fuse 2.5A Sicherung 2,5A
LS	circuit breaker Sicherungsautomat

Components / Bauteile / Composants	
ST03	Base relays Basisrelais
ST08	Input relays Eingangsrelais
ST09	Control relays Regelrelais
ST10.1	First sensor signal first sensor signal
ST10.2	Second sensor signal second sensor signal
ST11	Relay relays Relais
ST12	Control relays Regelrelais
ST13	Control relays Regelrelais
ST14	Control relays Regelrelais
ST15	Control relays Regelrelais
ST16	Control relays Regelrelais
ST17	Control relays Regelrelais
ST18	Control relays Regelrelais
ST19	Control relays Regelrelais
ST20	Control relays Regelrelais
ST21	Control relays Regelrelais
ST22	Control relays Regelrelais
ST23	Control relays Regelrelais
ST24	Control relays Regelrelais
ST25	Control relays Regelrelais
ST26	Control relays Regelrelais
ST27	Control relays Regelrelais
ST28	Control relays Regelrelais

ST1 / ST1.1	
1	use potential free contact
2	safety interlock
L	control voltage
N	neutral

200-240VAC	
1	potential free contact
2	safety interlock
L	control voltage
N	neutral

200-240VAC	
1	potential free contact
2	safety interlock
L	control voltage
N	neutral

HYGROMATIK


(Zeichnung Nr.)
S-43-002D.032

FLE 80-130					
B	Steuerapp.int.	25.01.18	Lue	Datum	20.06.2018
C	500-690V	25.04.18	Lue	Datum	09.07.2018
D	K24K12	09.07.18	WI	Gepr.	
Rev.	Änderung	Datum	Name	Norm	


heating voltage: 200 - 480V / 3
control voltage: 200 - 240V / separate

FLE 80-130

Left cylinder
Linker Zylinder
Cylindre gauche

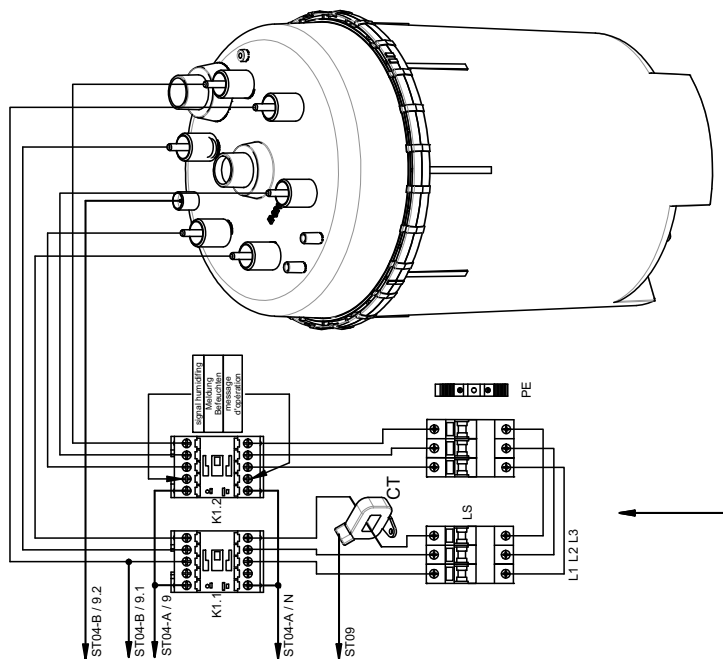

Right cylinder
Rechter Zylinder
Cylindre droit

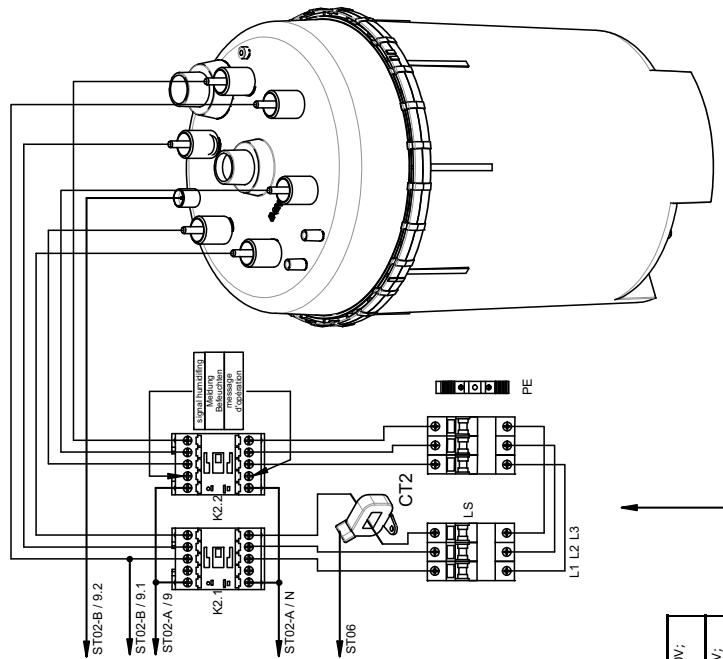

L1	heating voltage 200 - 480V; see name plate
L2	Heizspannung 200 - 480V; siehe Typenschild
L3	Tension de chauffage 200 - 480V; note plaque d'identification


Voltage according name plate
Spannung gemäß Typenschild
Tension conformément à la plaque d'identification

Use copper conductors only, AWG size according current value on the name plate
Leitungsquerschnitt Kupferkabel gemäß Stromangaben auf dem Typenschild
Utiliser uniquement des conducteurs en cuivre, AWG selon la valeur actuelle sur la plaque d'identification

A		release	11.11.17	Lue	Datum	29.09.2018		FLE 80-130		(Zählung Nnr.)	S-43-002C.02.2
B		Steuerspg. int.	25.01.18	Lue	Bearb.	w. 09.07.2018		heating voltage: 200 - 480V			
C		div. Updates	09.07.18	WI	Gepr.						
Rev.		Aenderung	Datum	Name	Norm						

HYGROMATIK

7.3 FLH Single cylinder units

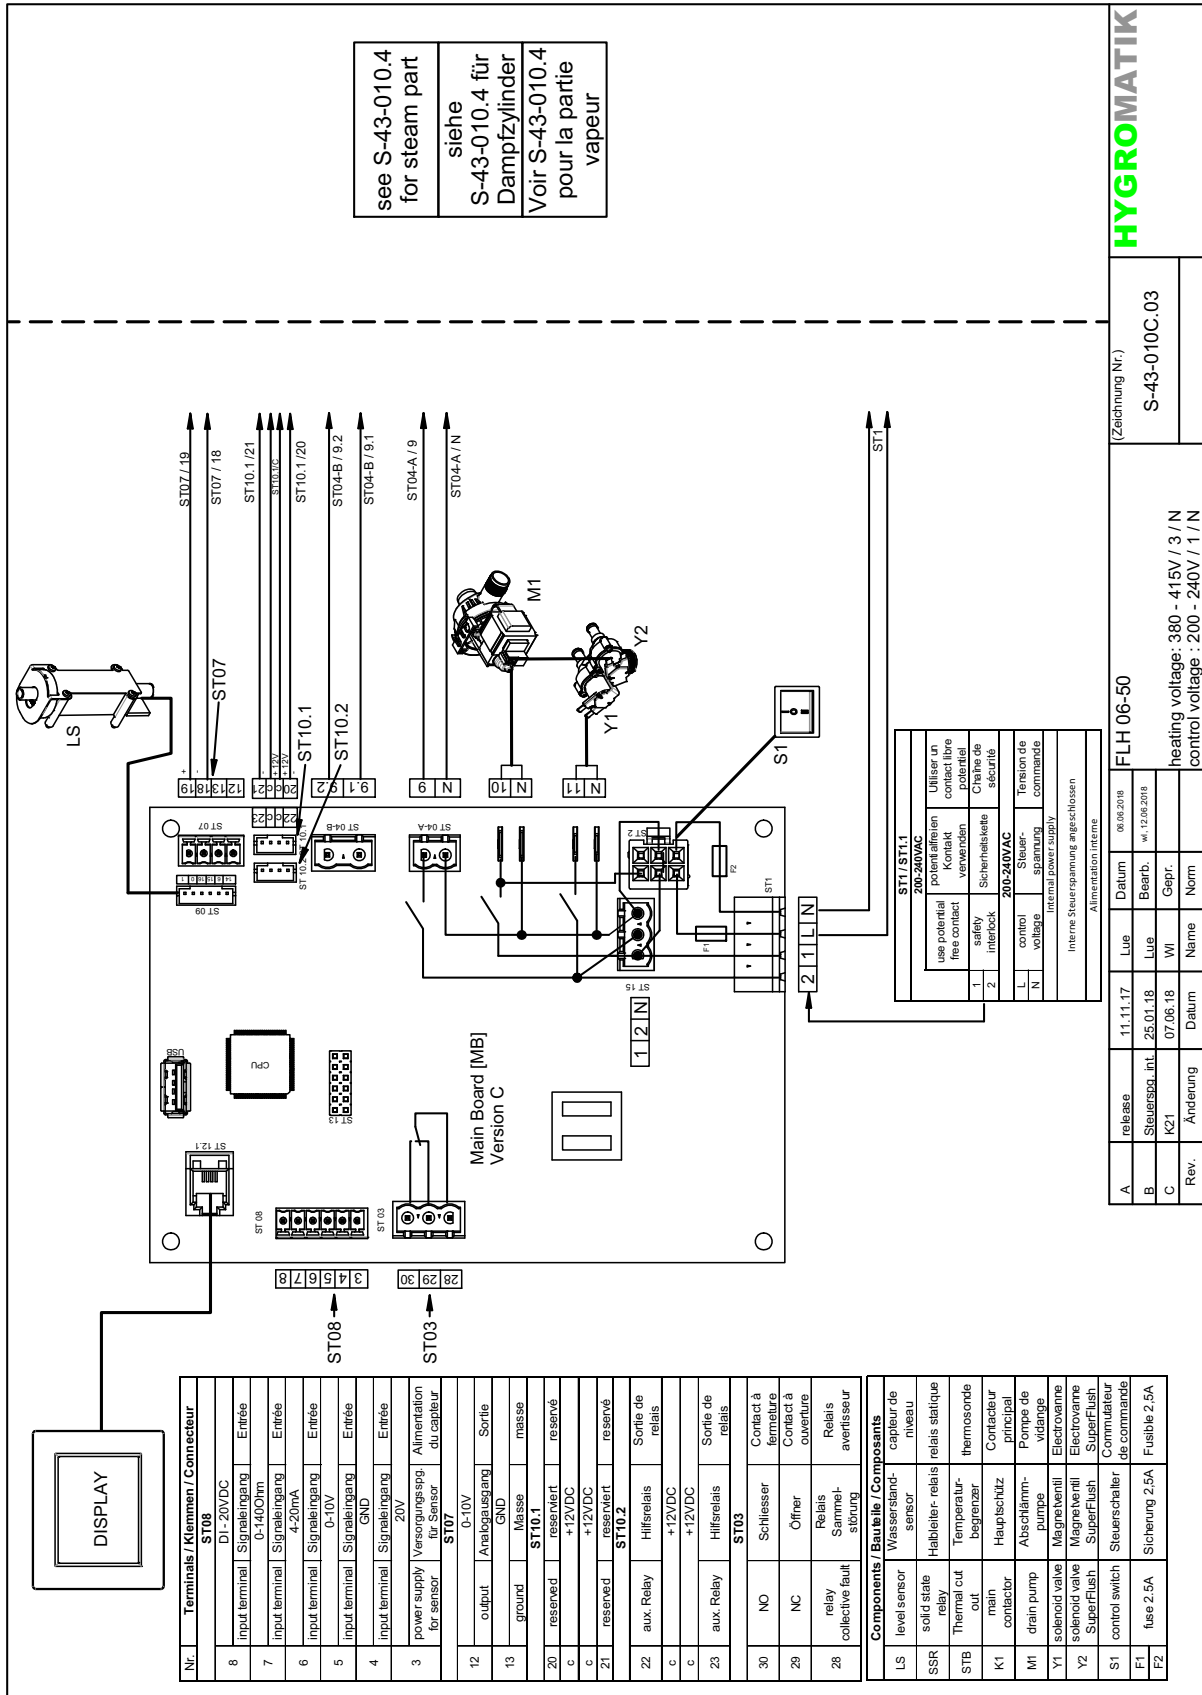


HYGROMATIK

(Zeichnung Nr.)
S-43-010C.03

FLH 06-50
heating voltage: 380 - 415V / 3 / N
control voltage: 200 - 240V / 1 / N

A	release	11.11.17	Lue	Datum	06.03.2018
B	Steuerspd. int.	25.01.18	Lue <td>Bearb.</td> <td>01.12.08.2018</td>	Bearb.	01.12.08.2018
C	KZ1	07.06.18	Wi <td>Gepr.</td> <td></td>	Gepr.	
Rev.	Änderung	Datum	Name	Norm	

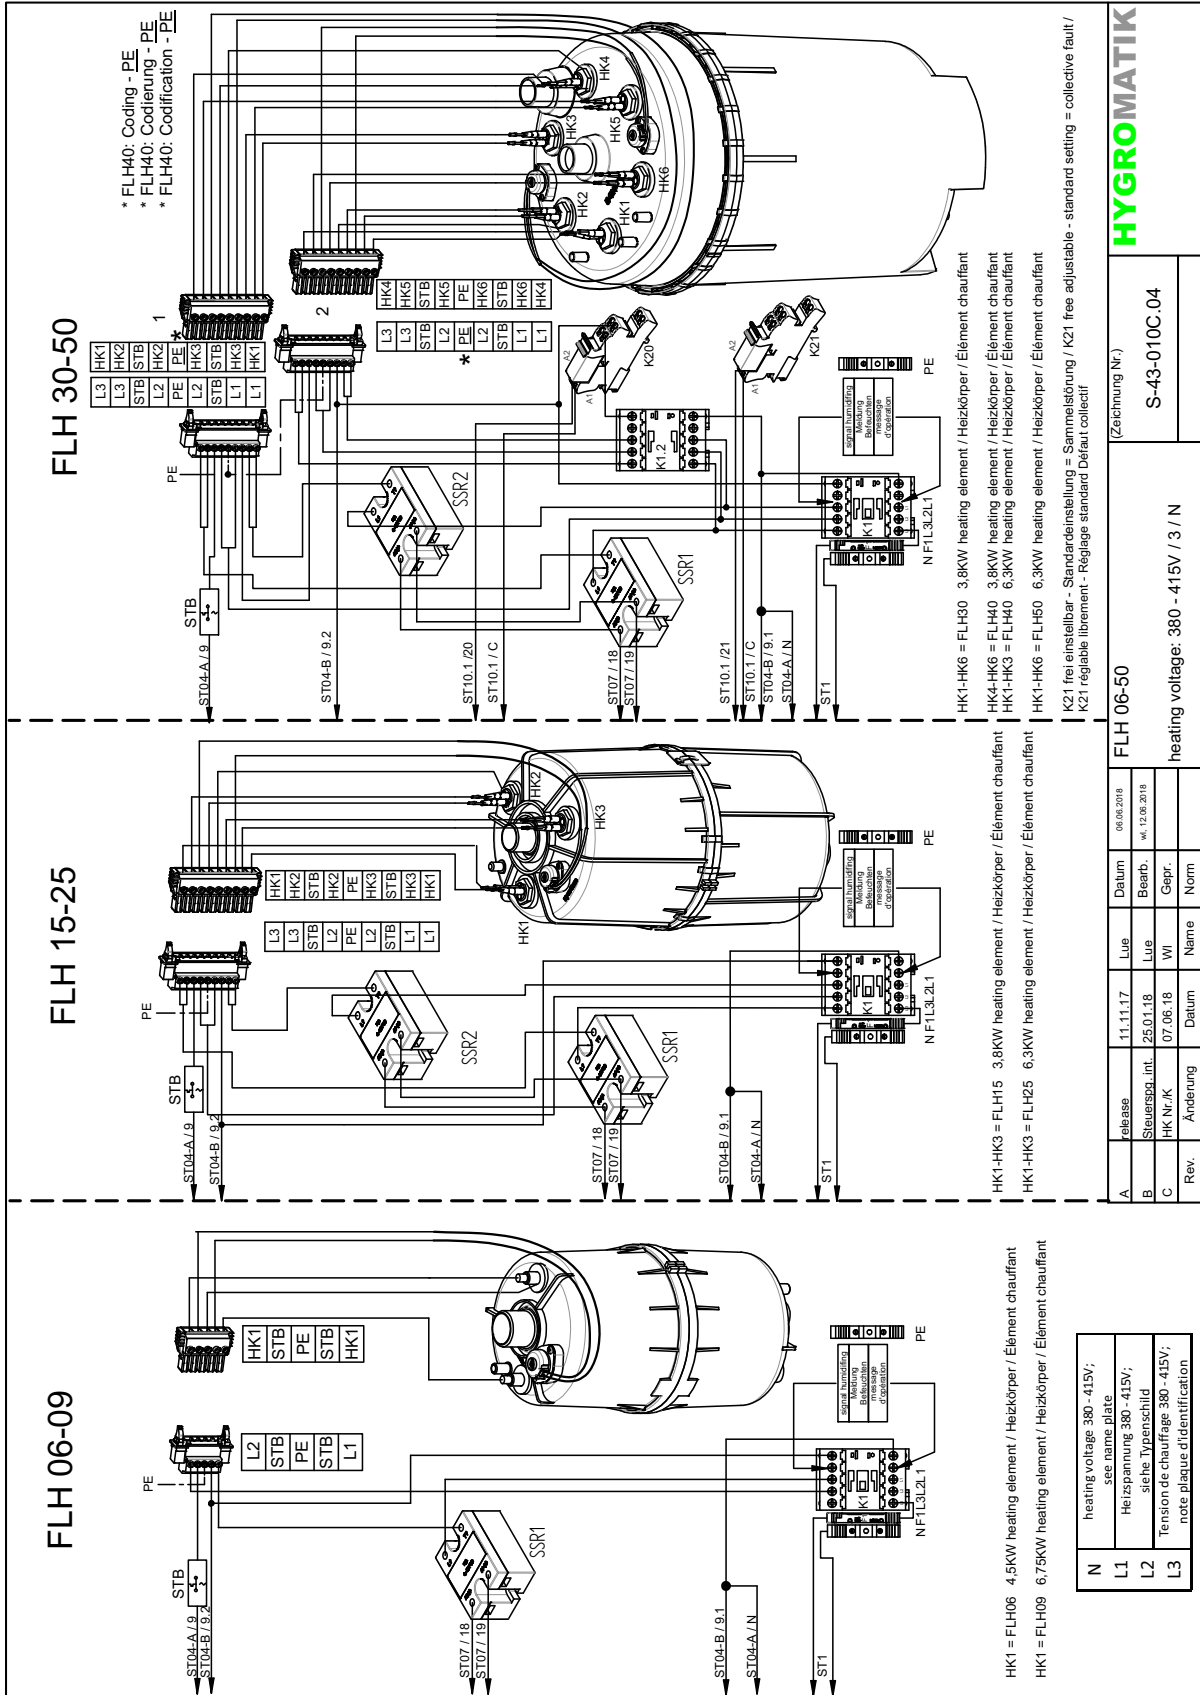


N	heating voltage 380 - 415V; see name plate
L1	Heizspannung 380 - 415V; siehe Typenschild
L2	Tension de chauffage 380 - 415V; note plaque d'identification
L3	

A	release	11.11.17	Lue	Datum	06.05.2018
B	Steuerspp.int.	25.01.18	Lue	Bearb.	W. 12.08.2018
C	HK Nr.K	07.08.18	Wl	Gepr.	
Rev.	Änderung	Datum	Name	Norm	


FLH 06-50	
(Zeichnung Nr.)	
S-43-010C.04	
heating voltage: 380 - 415V / 3 / N	

HYGROMATIK

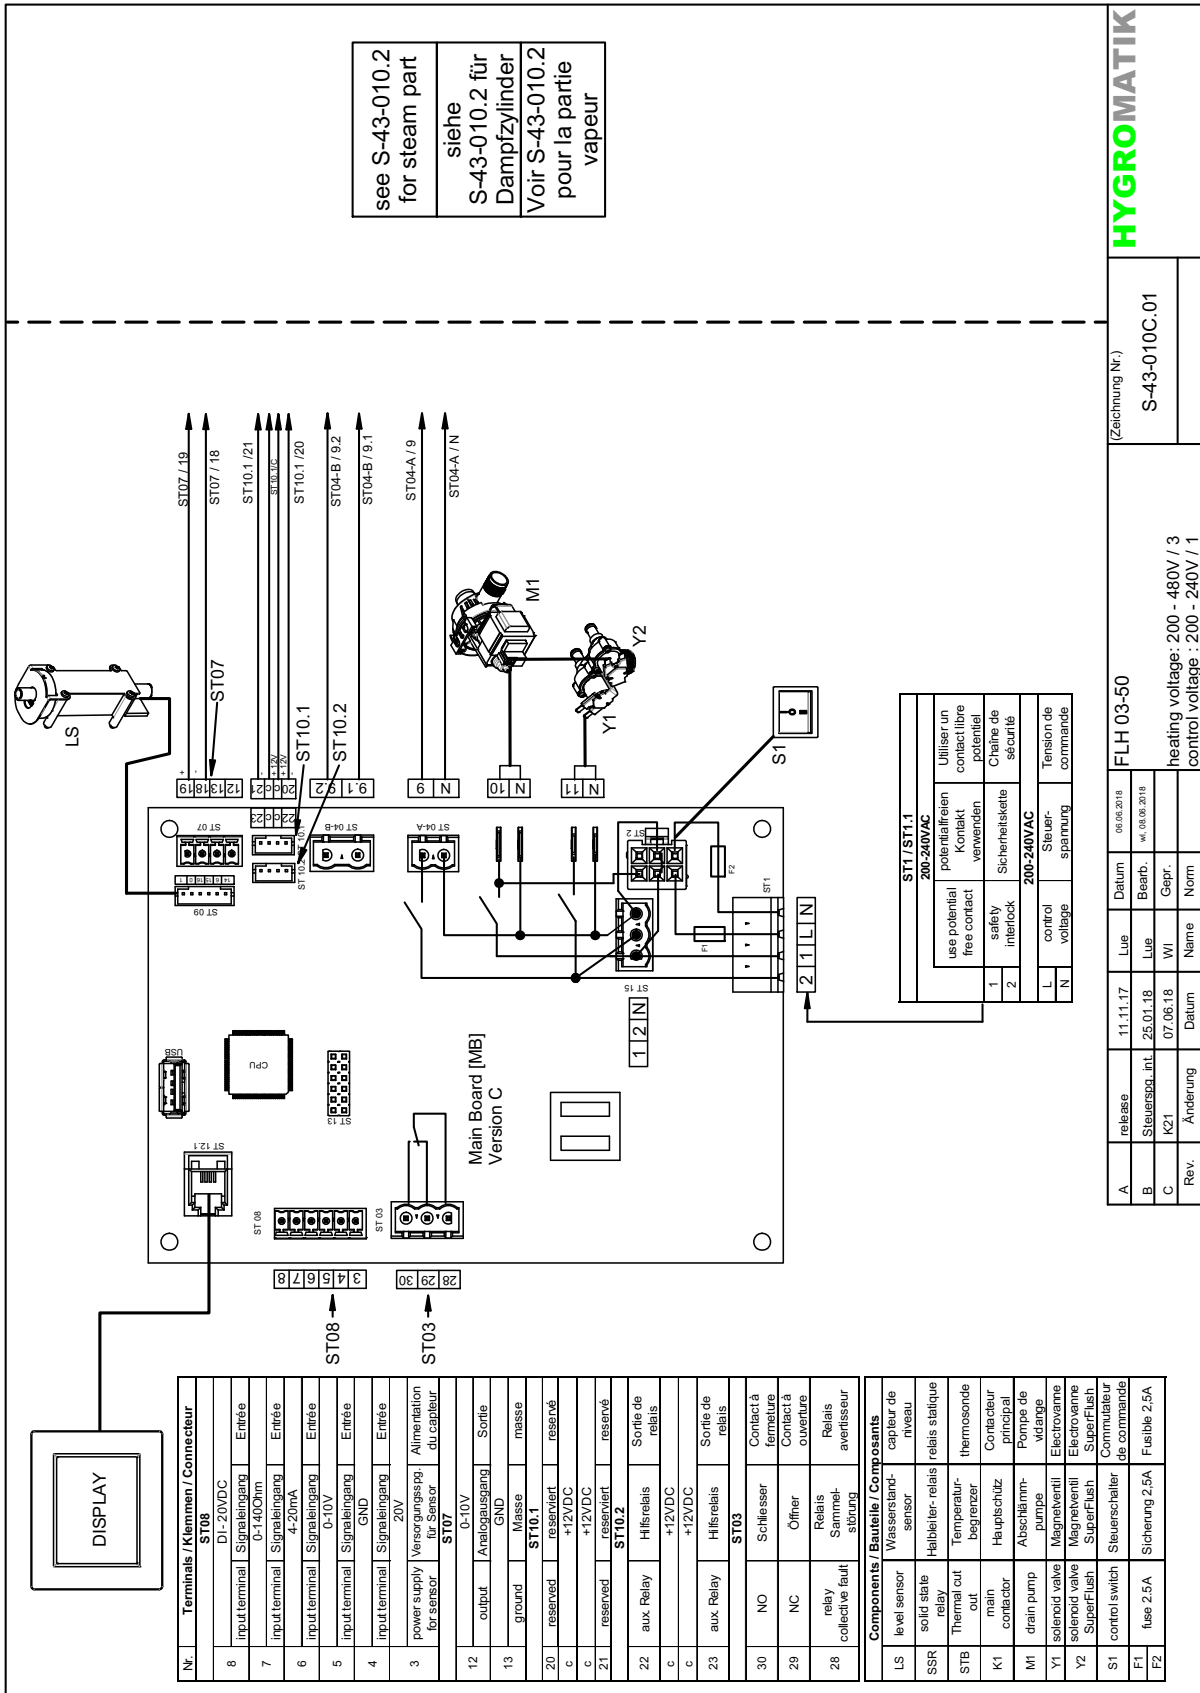


(Zeichnung Nr.)	
S-43-010C.01	
A	release 11.11.17 Lue
B	Steuerung, int. 07.06.18 Lue
C	K21 07.06.18 WI
Rev.	Änderung Datum Name
	Gepr. Norm
FLH 03-50	
heating voltage : 200 - 480V / 3 control voltage : 200 - 240V / 1	

HYGROMATIK

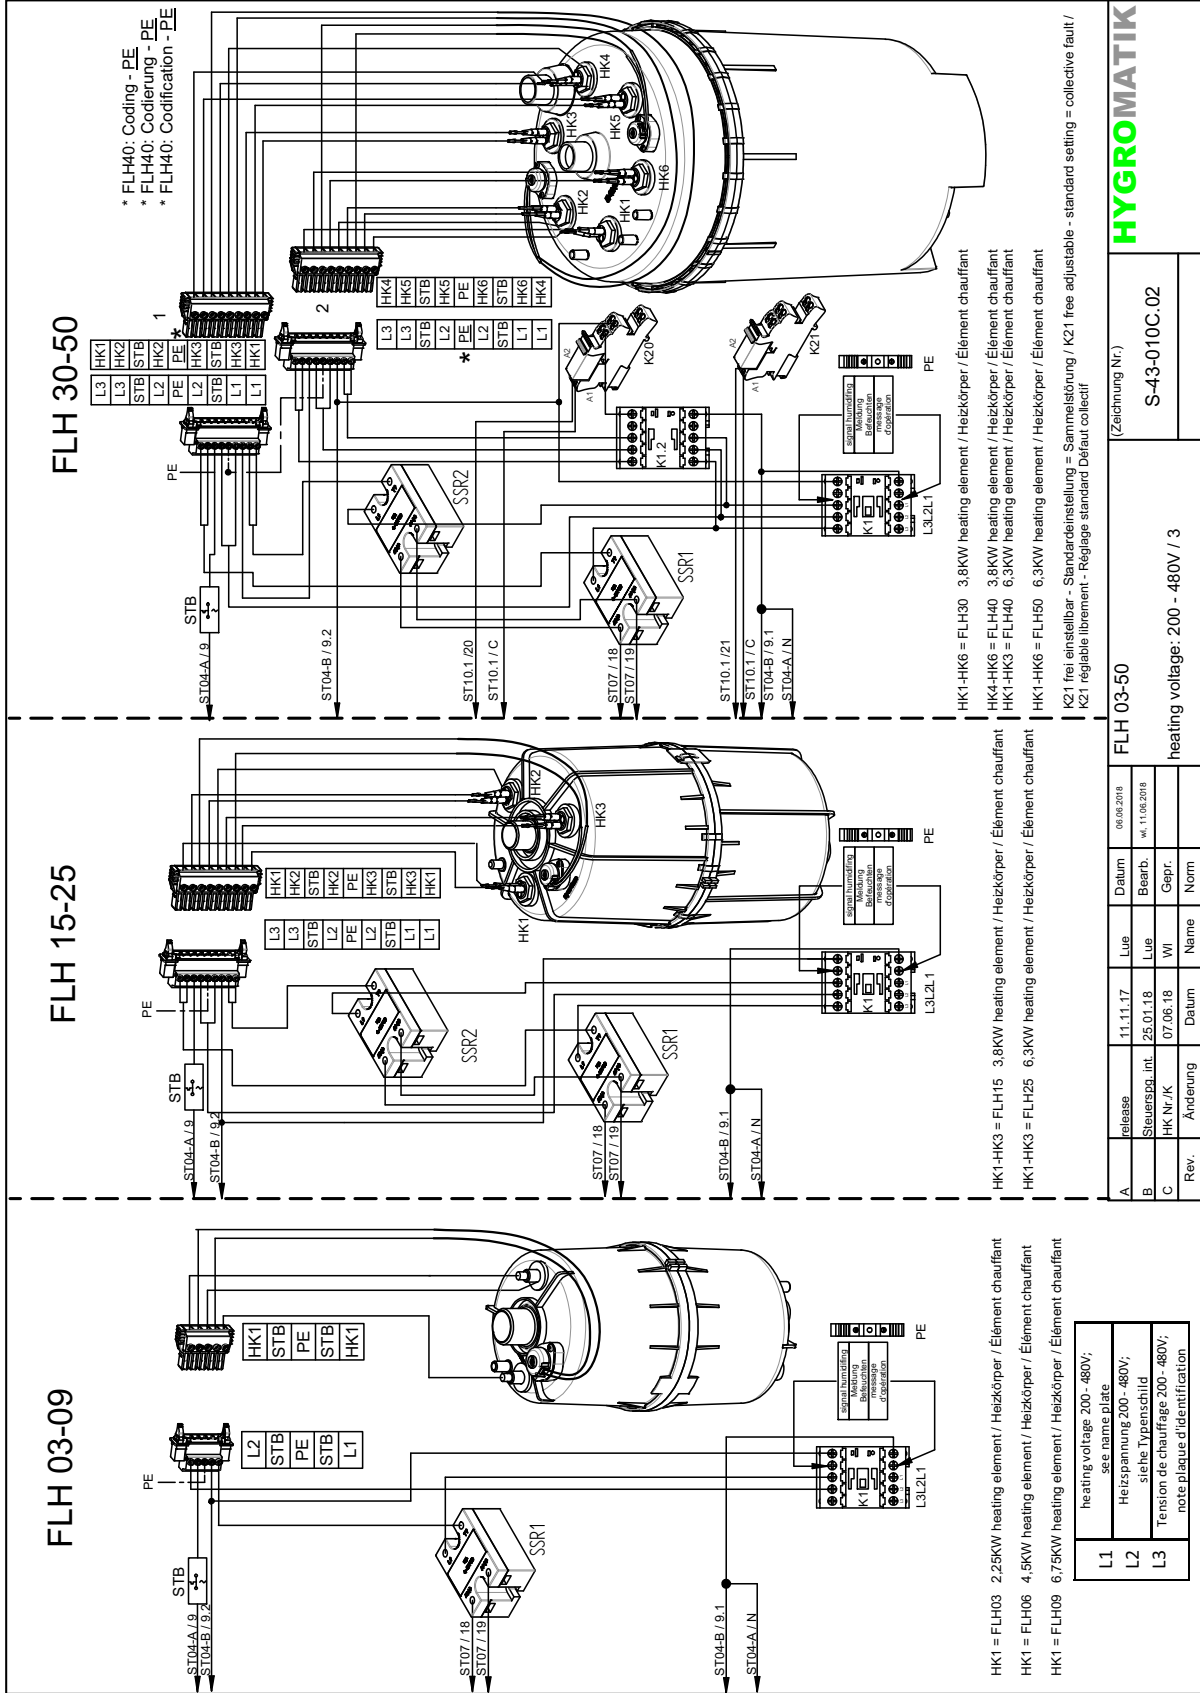

<p>HYGROMATIK (Zeichnung Nr.)</p> <p>S-43-010C-02</p>		<p>FLH 03-50</p>			
		<p>heating voltage: 200 - 480V / 3</p>			
A	release	11.11.17	Lue	Datum	06.06.2018
B	Steuerspd. inl.	25.01.18	Lue	Bearb.	w. 11.06.2018
C	HK Nr./K	07.06.18	Wl	Gepr.	
Rev.	Änderung	Datum	Name	Norm	

7.4 FLH Double cylinder units

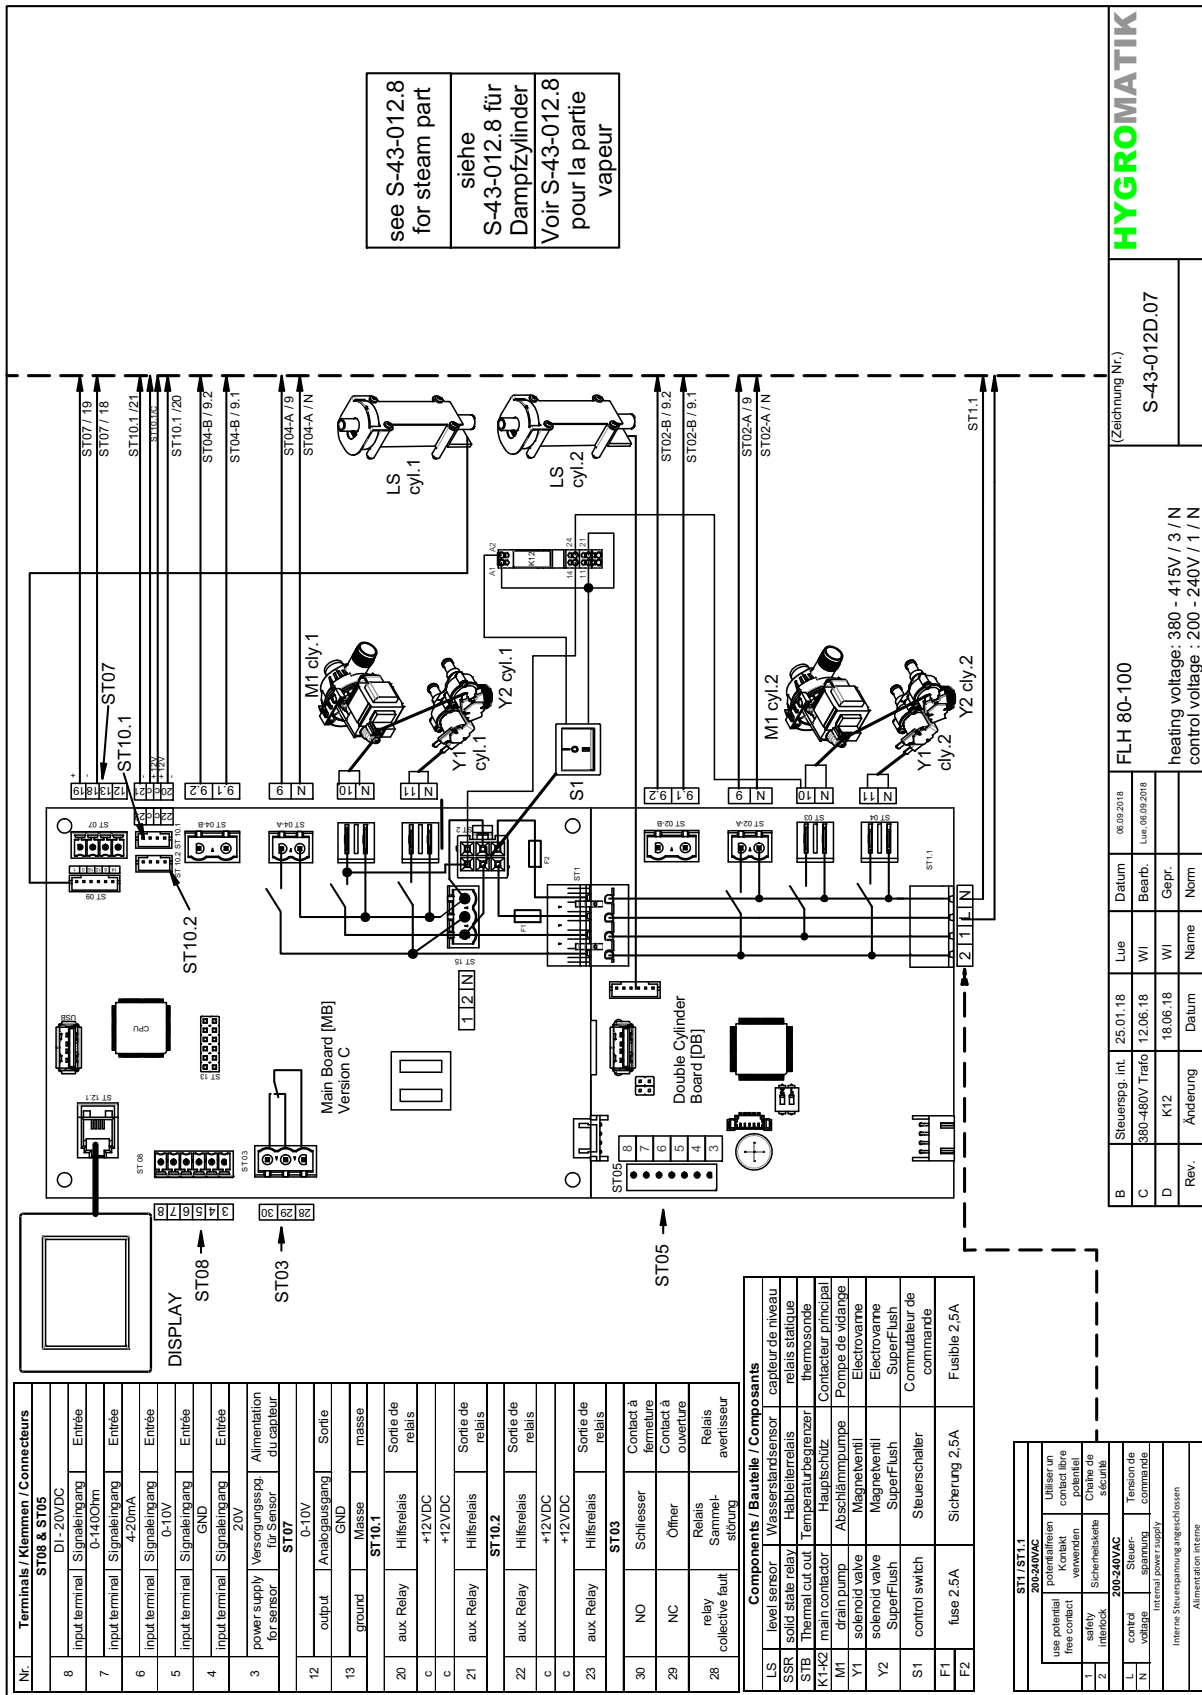

HYGROMATIK

(Zeichnung Nr.)


FLH 80-100

S-43-012D.07

heating voltage: 380 - 415V / 3 / N
control voltage: 200 - 240V / 1 / N

Rev.	Änderung	Datum	Name	Norm
B	Steuerung int.	25.01.18	WI	
C	380-480V Trafo	12.06.18	WI	
D	K12	18.06.18	WI	

Datum: 08.09.2018
Bearb.: Liu, 08.09.2018

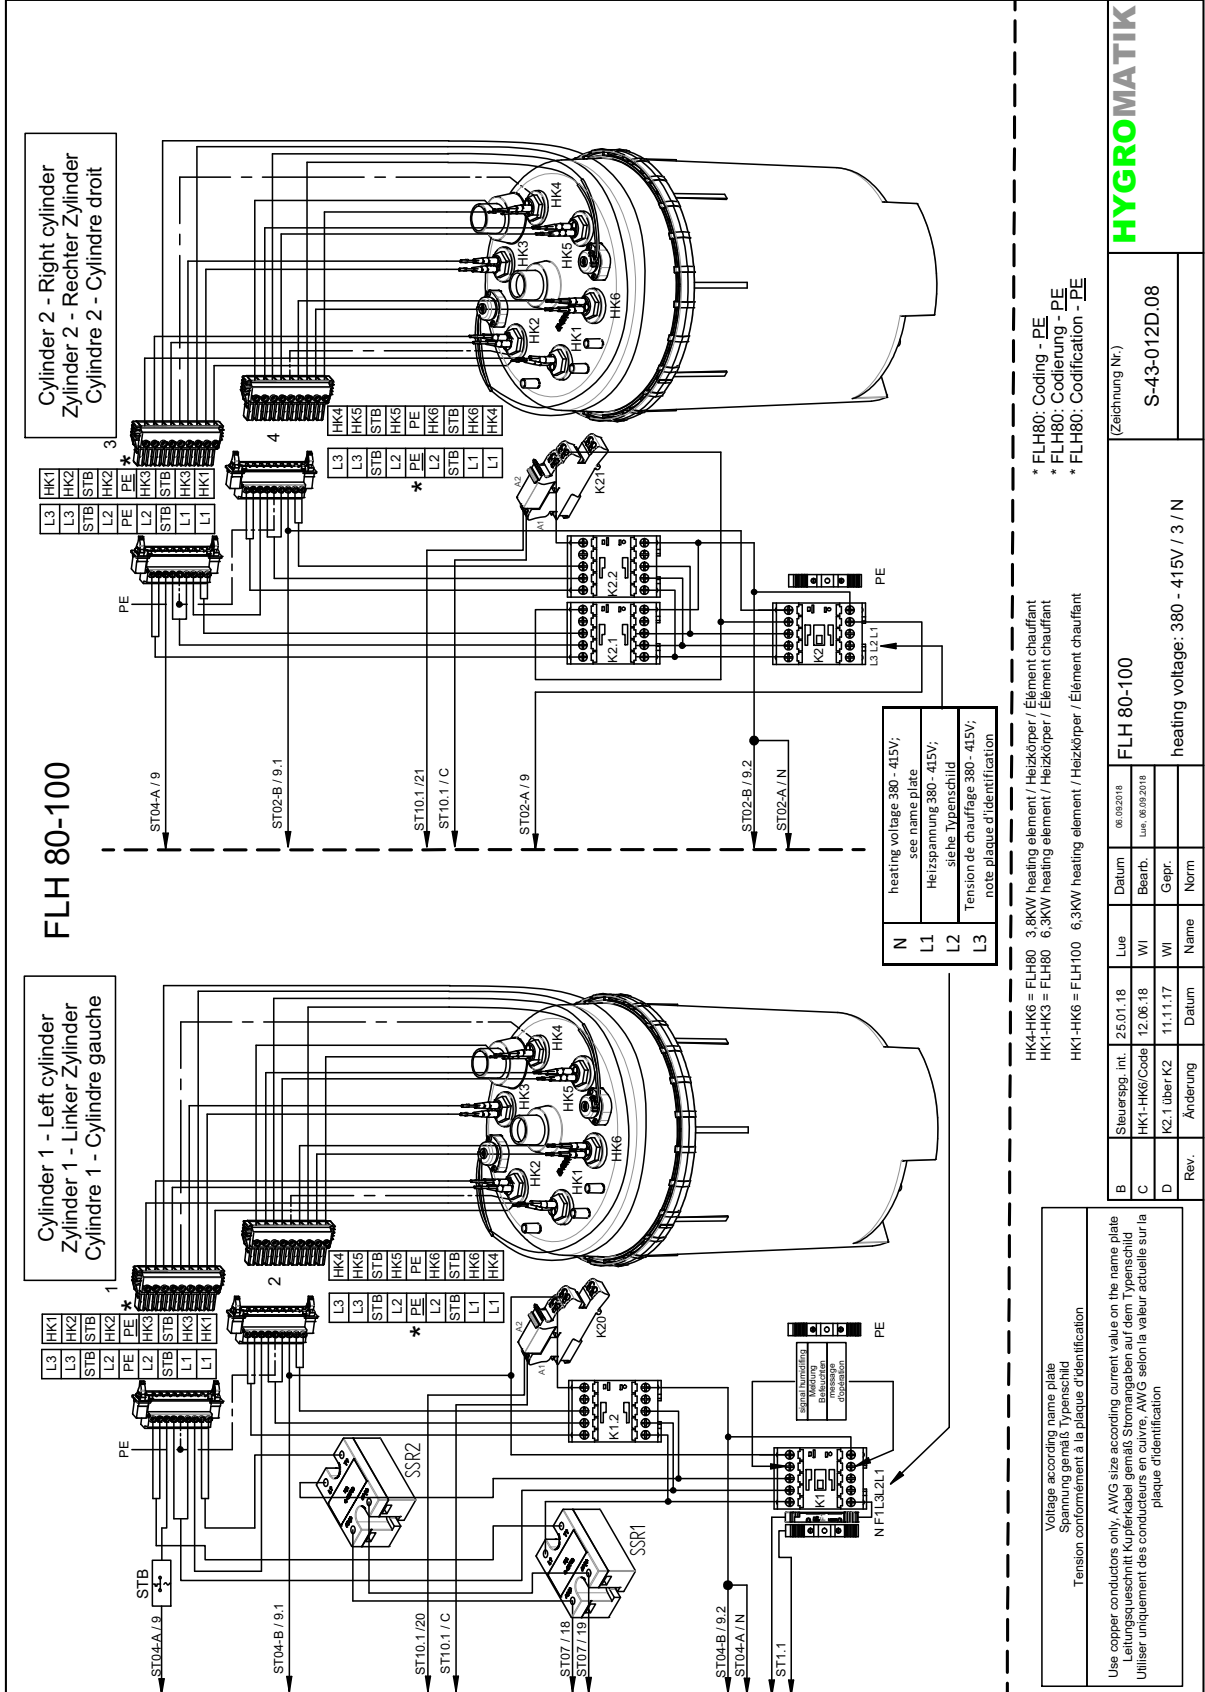


HYGROMATIK

(Zeichnung Nr.)
S-43-012D.08

* FLH80: Coding - PE
* FLH80: Codierung - PE
* FLH80: Codification - PE

HK4-HK6 = FLH80 3.9KW heating element / Heizkörper / Élément chauffant
HK1-HK3 = FLH80 6.3KW heating element / Heizkörper / Élément chauffant
HK1-HK6 = FLH100 6.3KW heating element / Heizkörper / Élément chauffant

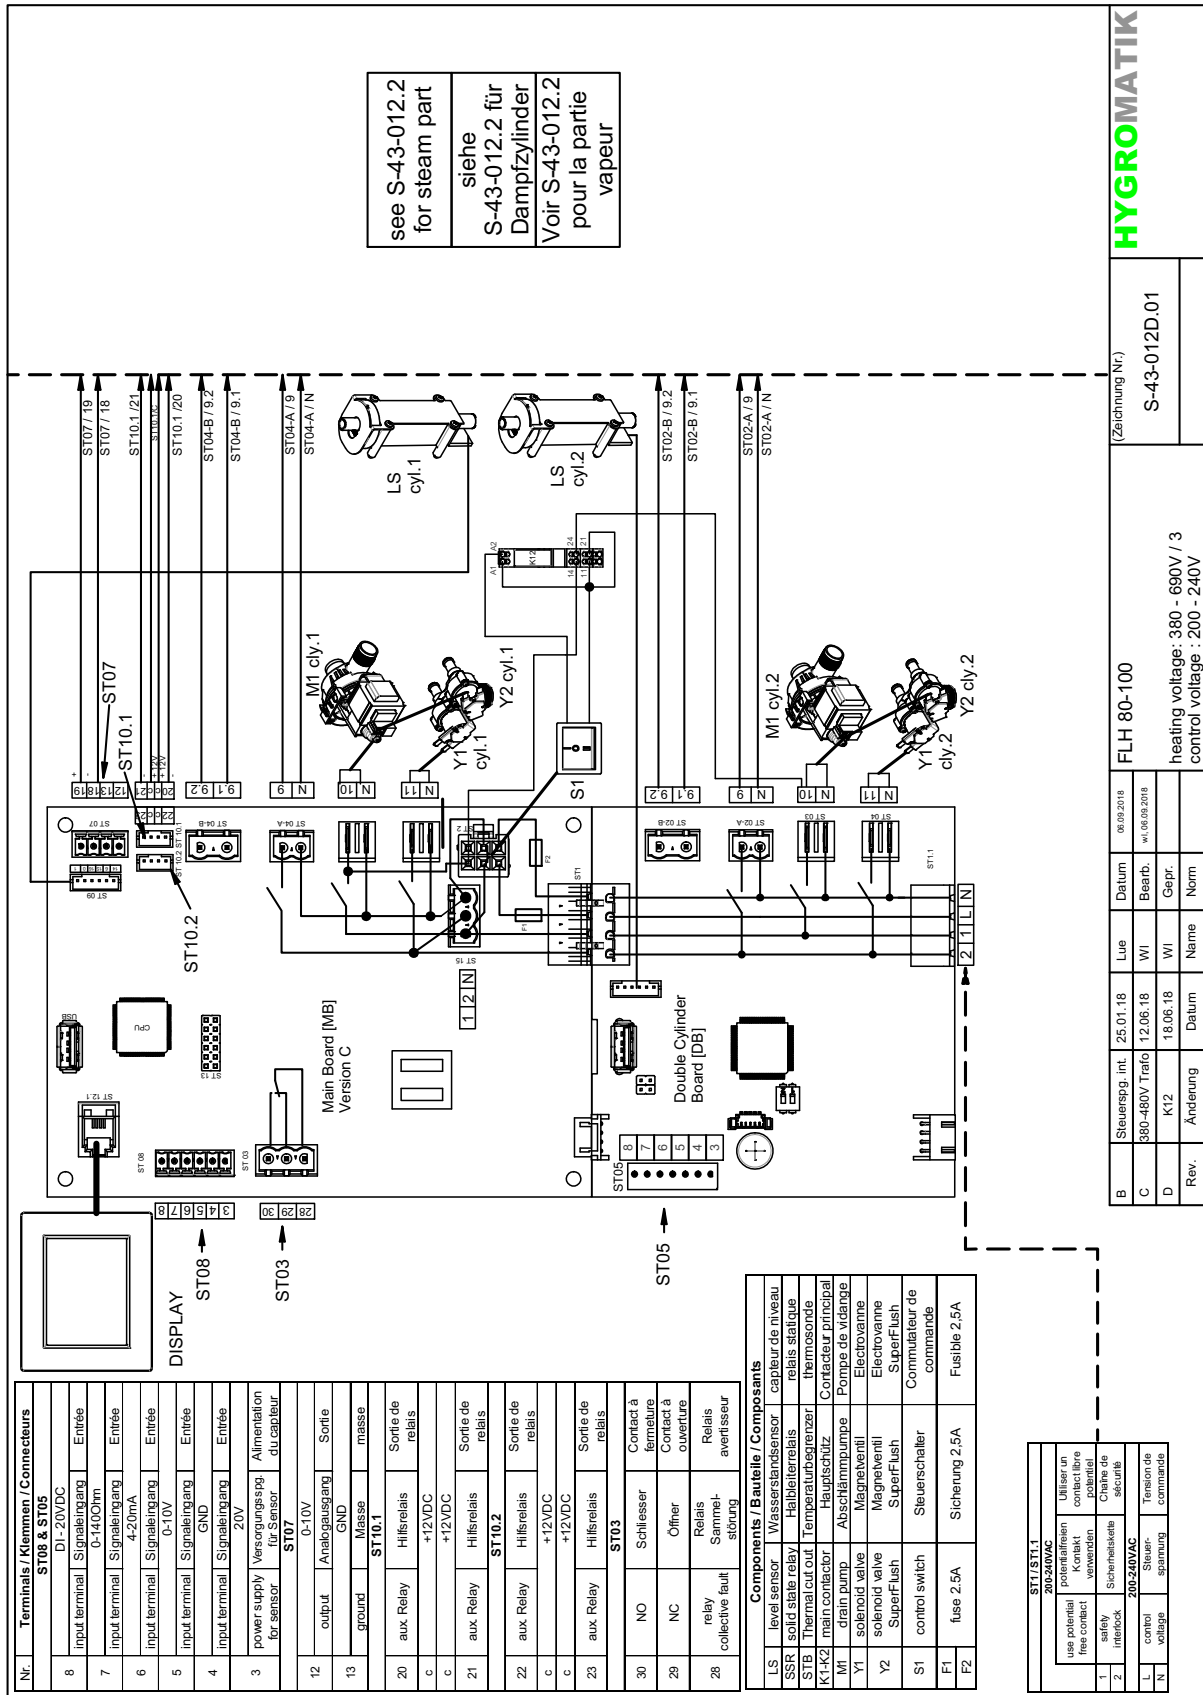


Nr.		Terminals / Klemmen / Connecteurs
ST08 & ST05		
6	DI - 20VDC	
7	input terminal	Signaleingang
7	0-1400hm	Entrée
6	input terminal	Signaleingang
6	4-20mA	Entrée
5	input terminal	Signaleingang
5	0-10V	Entrée
4	input terminal	Signaleingang
4	GND	Entrée
3	power supply	Alimentation
3	for sensor	du capteur
ST07		
12	output	Analogausgang
12	GND	Sortie
13	ground	masse
ST10.1		
20	aux. Relay	Hilfrelais
20	+12VDC	Sortie de relais
21	aux. Relay	Hilfrelais
21	+12VDC	Sortie de relais
ST10.2		
22	aux. Relay	Hilfrelais
22	+12VDC	Sortie de relais
23	aux. Relay	Hilfrelais
23	+12VDC	Sortie de relais
ST03		
30	NO	Contact à fermeture
29	NC	Contact à ouverture
28	relay collective fault	Relais avertisseur

Components / Bauteile / Composants	
LS	level sensor / Wasserstandsensor
SSR	solid state relay / Halbleiterrelais
STB	Thermal cut out / Temperaturbegrenzer
K1-K2	main contactor / Hauptschütz
M1	drain pump / Abschlämpumpe
Y1	solenoid valve / Magnetventil
Y2	solenoid valve / Magnetventil
S1	SuperFlush / SuperFlush
F1	control switch / Steuerschalter
F2	fuse 2.5A / Sicherung 2.5A

ST1/ST1.1	
use potential free contact	Utiliser un contact libre potentiel
1	potentialfree contact
2	interlock
L	control voltage
N	ground

HYGROMATIK	
Rev.	Änderung
D	K12
C	380-480V Trato
B	Steuerspg. int.
FLH 80-100	
heating voltage: 380 - 690V / 3	
control voltage: 200 - 240V	
(Zeichnung Nr.) S-43-012D.01	
Datum	06.09.2018
Lue	25.01.18
WI	12.06.18
WI	16.06.18
Name	
Gepr.	
Norm	

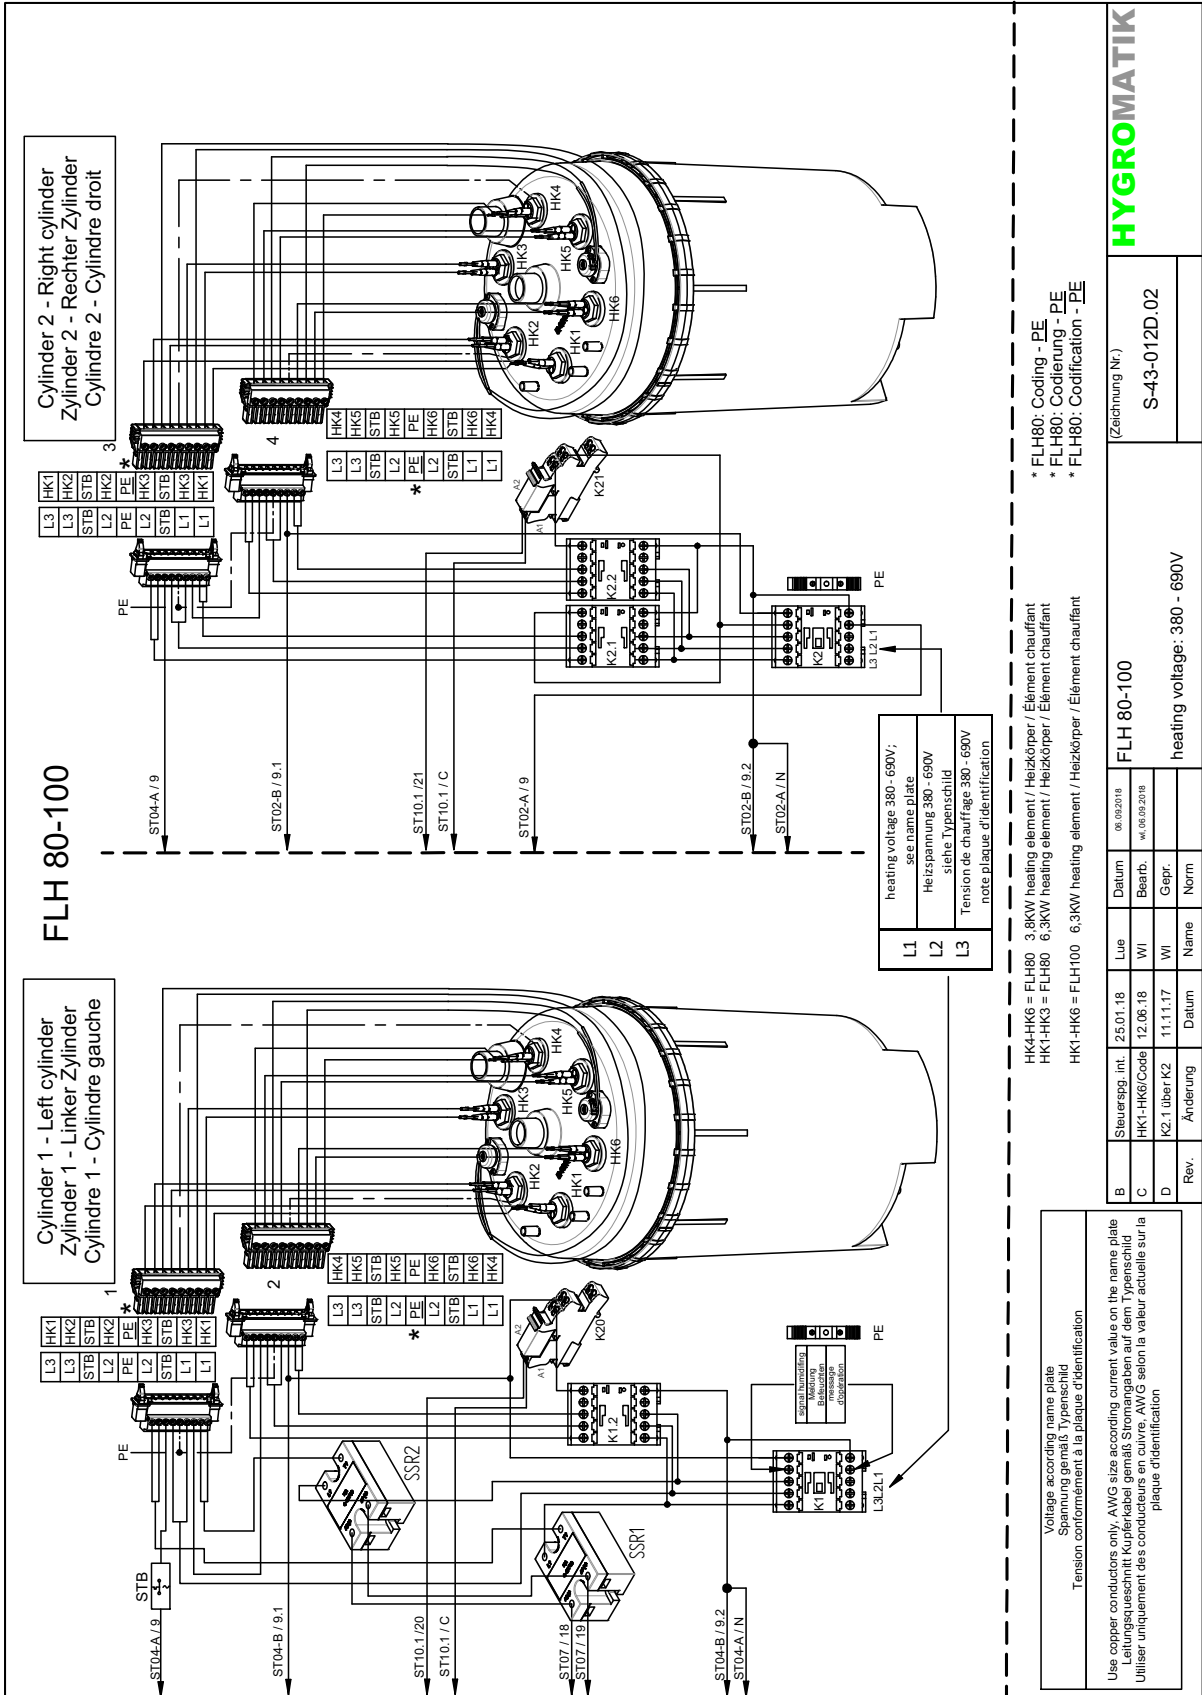

HYGROMATIK

(Zeichnung Nr.)

S-43-012D.02


FLH 80-100

B	Steuerspp. int.	25.01.18	Lue	Datum	08.09.2018
C	HK1-HK6/Code	12.06.18	WI	Bearb.	04.09.2018
D	K2.1 über K2	11.11.17	WI	Gepr.	


Rev.	Änderung	Datum	Name	Norm
------	----------	-------	------	------

heating voltage: 380 - 690V

7.5 FLP Single cylinder units

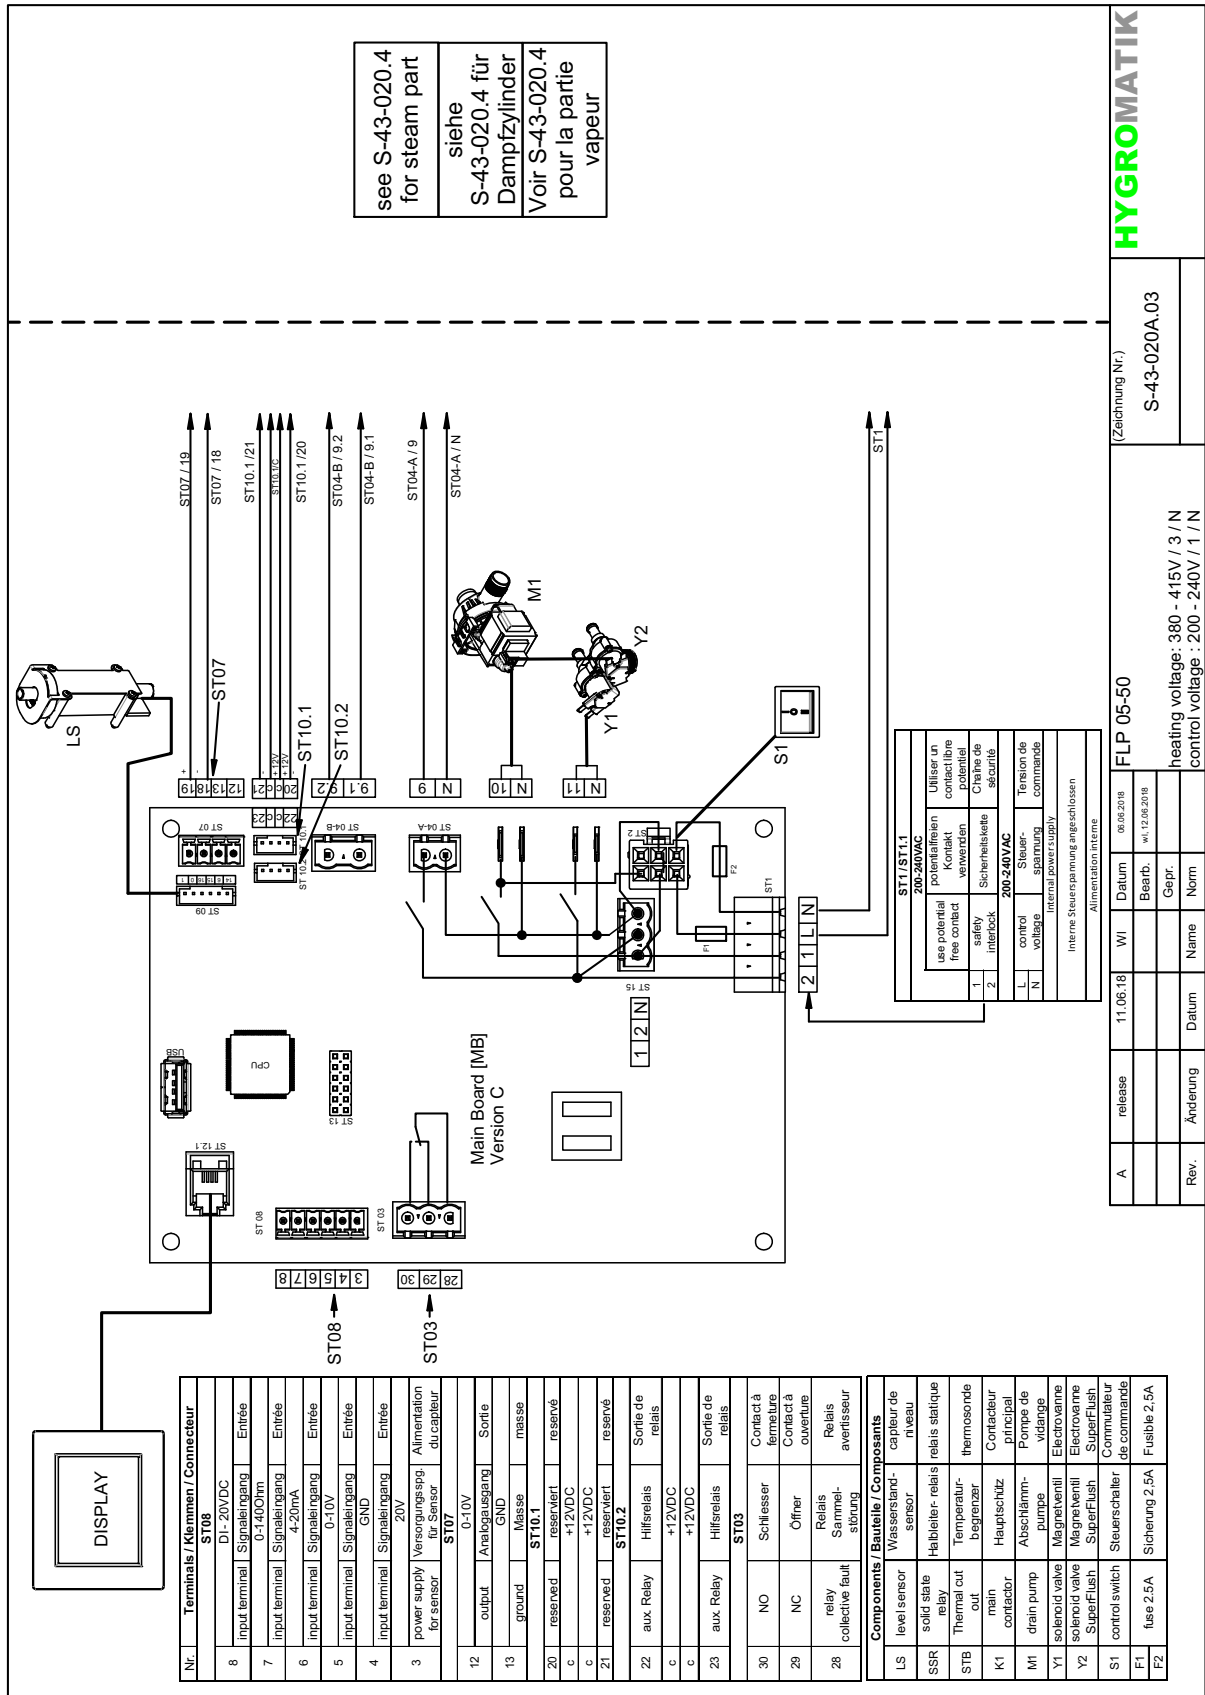


HYGROMATIK	
(Zeichnung Nr.)	S-43-020A.03
FLP 05-50	heating voltage: 380 - 415V / 3 / N control voltage: 200 - 240V / 1 / N
release	11.06.18
WI	06.06.2018
Bearb.	WI 12.06.2018
Gepr.	
Rev.	
Änderung	Datum
Name	Norm

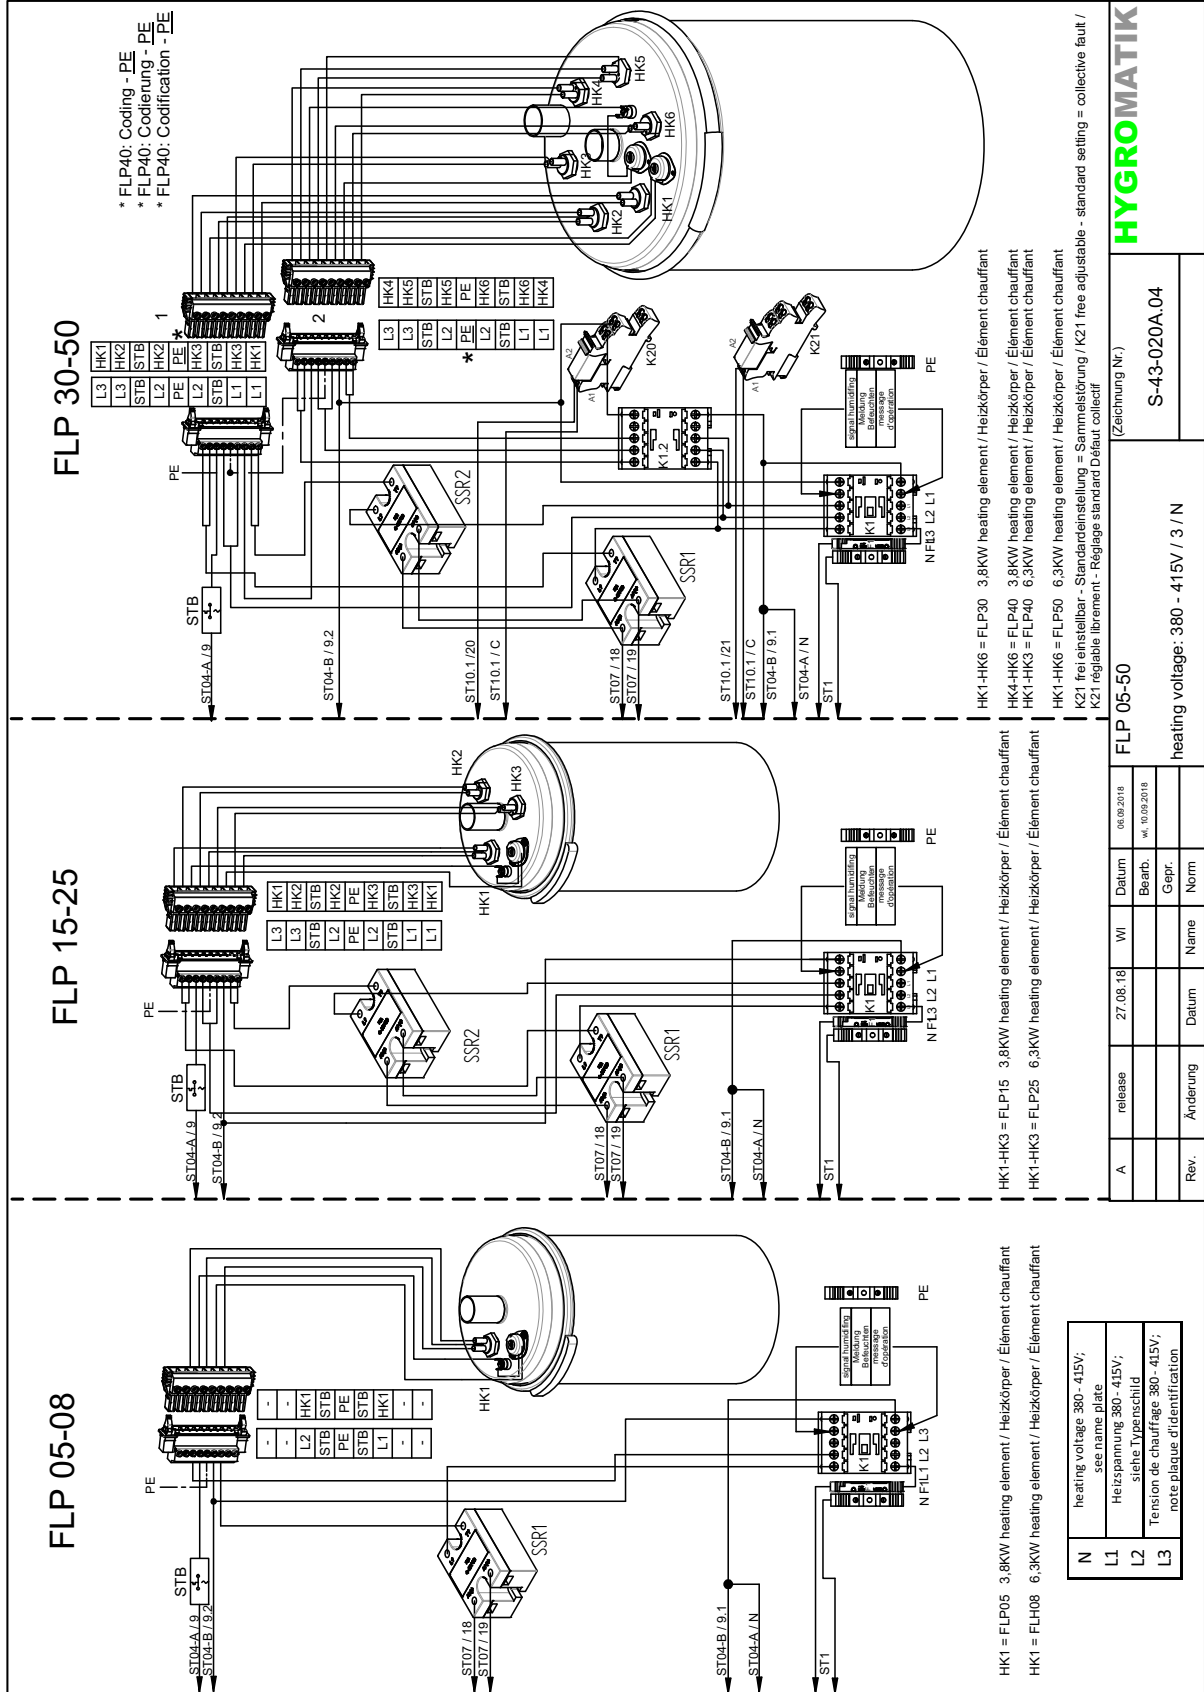

HYGROMATIK
 (Zeichnung Nr.)
 S-43-020A.04

FLP 05-50

Rev.	Änderung	Datum	Name	Norm
A	release	27.08.18	WI	Datum
		06.09.2018		Bearb.
		04.10.2018		Gepr.

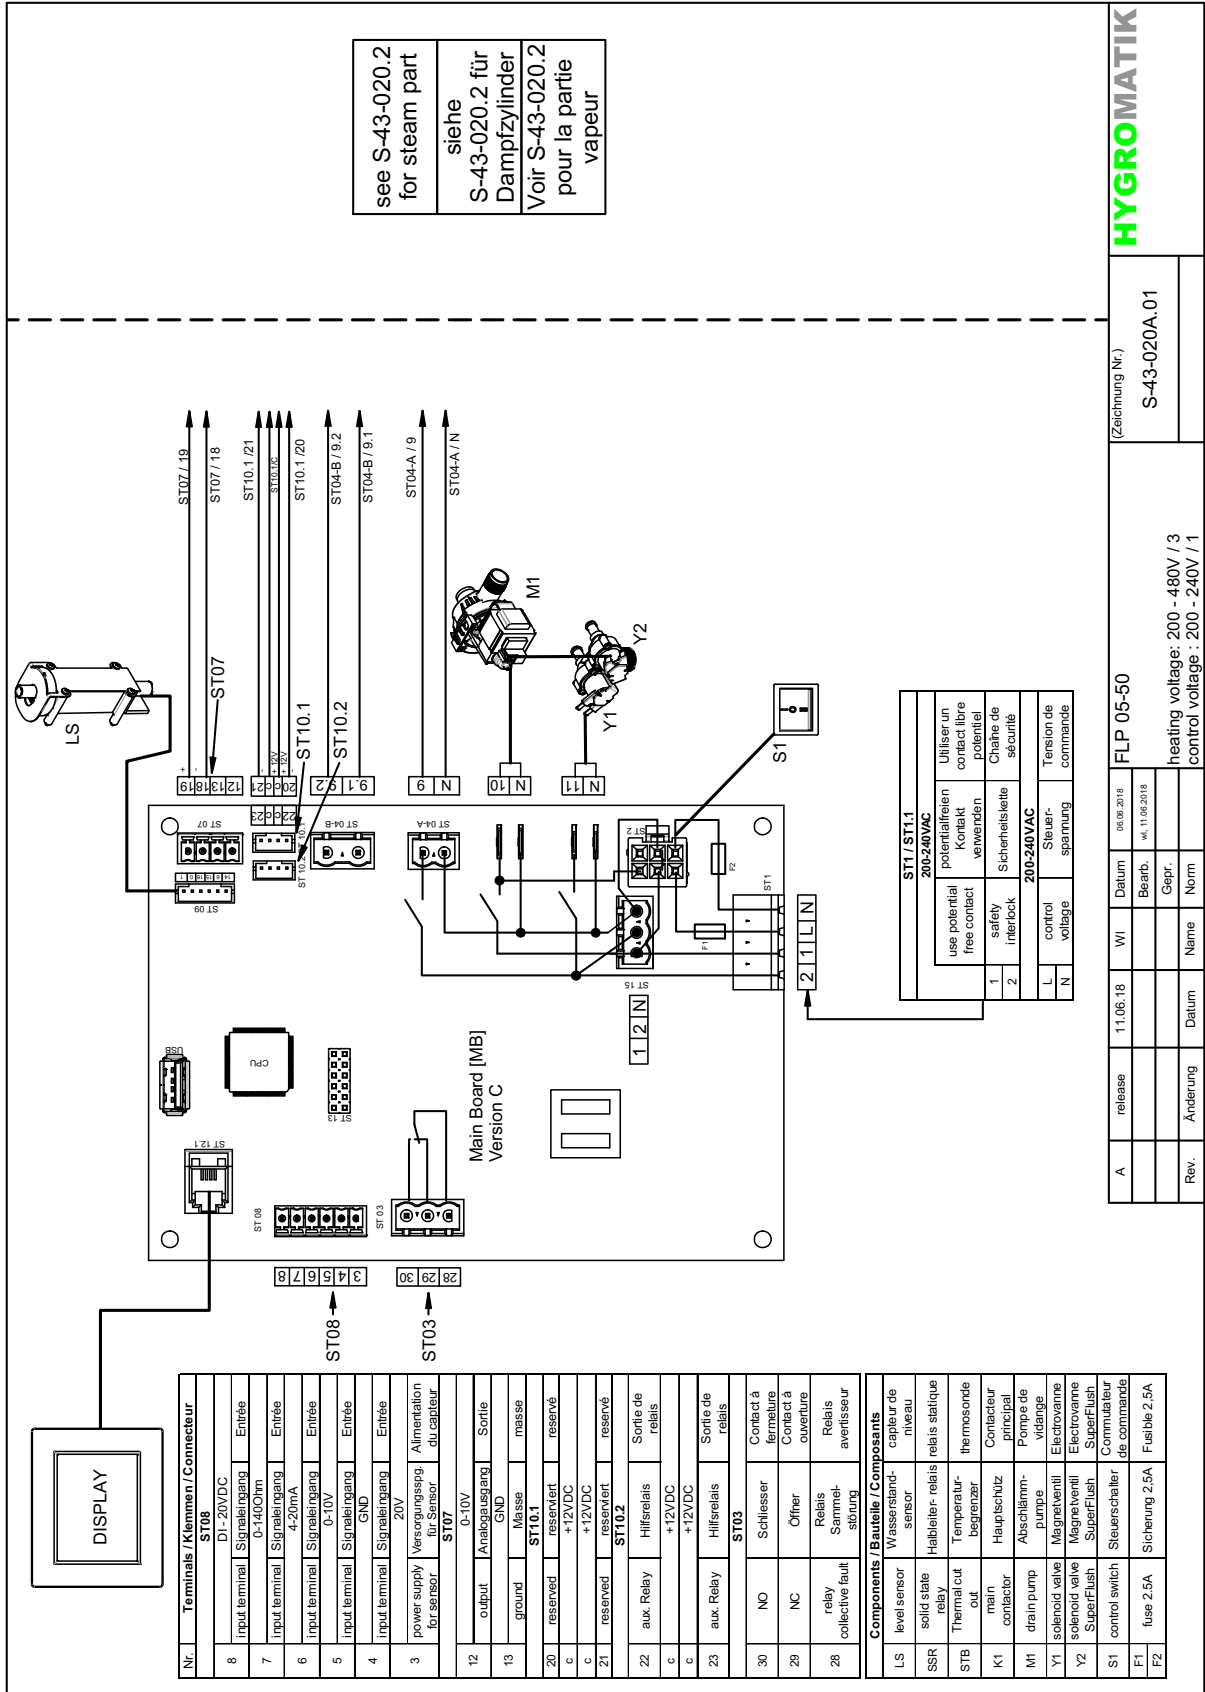

(Zeichnung Nr.)

S-43-020A.01

HYGROMATIK

Rev.	Änderung	Datum	Name	Norm
A	release	11.06.18	WI	Datum


FLP 05-50

heating voltage: 200 - 480V / 3

control voltage: 200 - 240V / 1

06.09.2018

14.11.2016

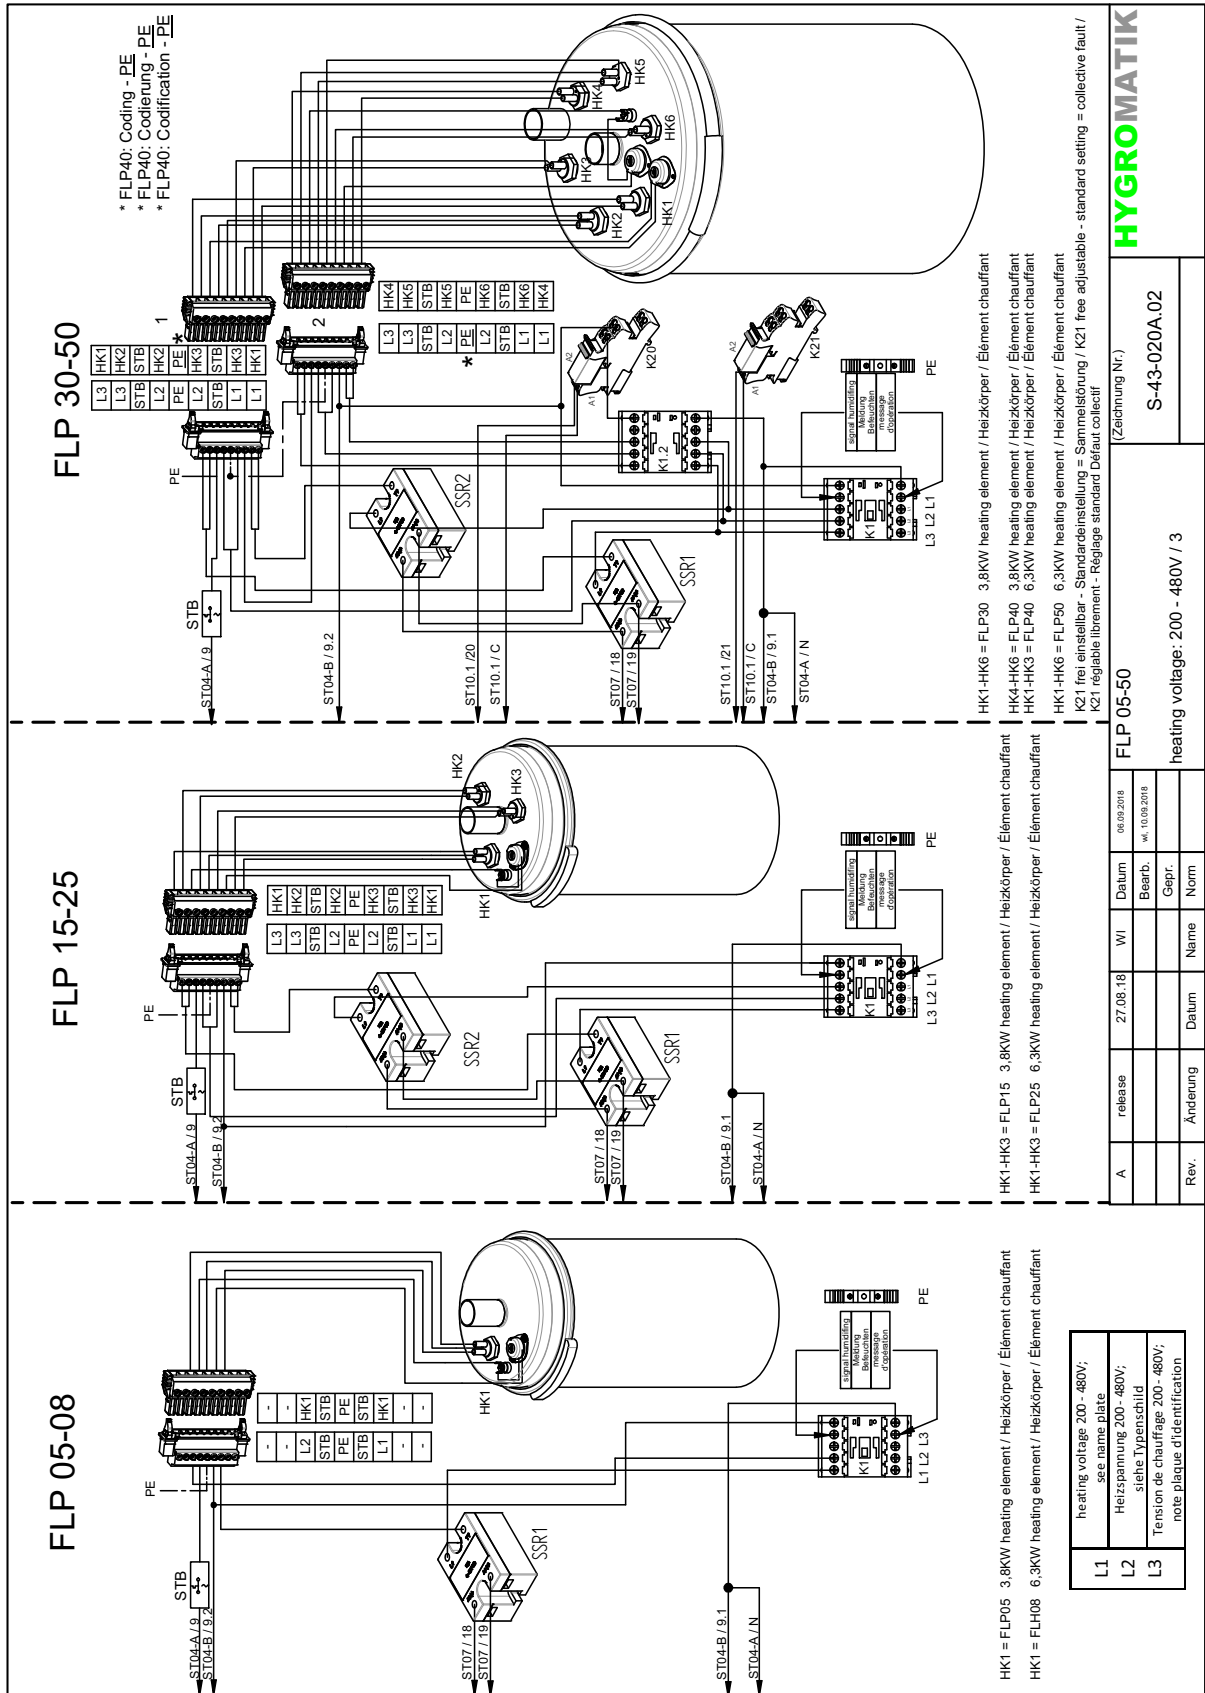


L1	heating voltage 200 - 480V; see name plate
L2	Heizspannung 200 - 480V; siehe Typenschild
L3	Tension de chauffage 200 - 480V; note plaque d'identification

FLP 05-50 heating voltage: 200 - 480V / 3		S-43-020A.02	
release	27.08.18	WI	09.09.2018
Änderung		Name	
Rev.		Datum	
		Bearb.	w. 10.09.2018
		Gepr.	
		Norm	

HYGROMATIK
(Zeichnung Nr.)

7.6 FLP Process

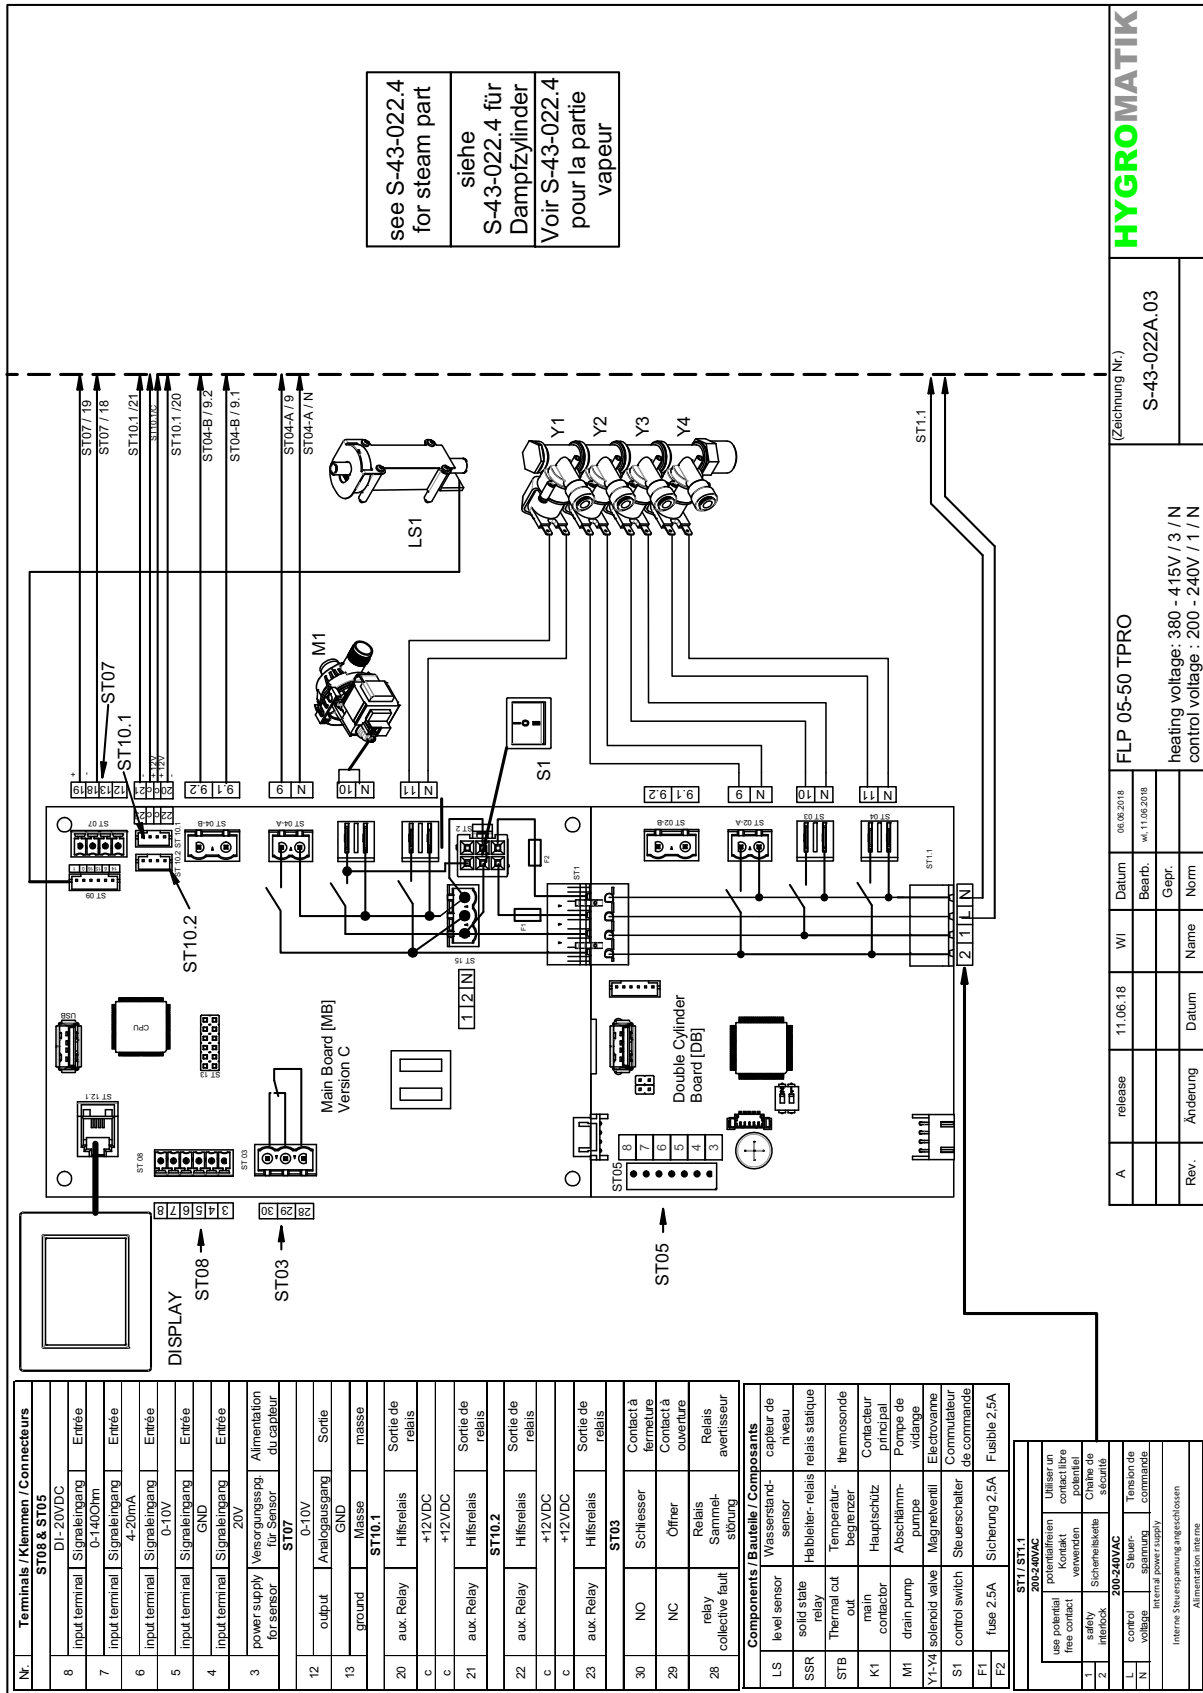


Terminals / Klemmen / Connecteurs	
ST08 & ST05	
8	DI-20VDC
7	Input terminal Signaleingang Entrée
6	Input terminal Signaleingang Entrée
5	Input terminal Signaleingang Entrée
4	Input terminal Signaleingang Entrée
3	Input terminal Signaleingang Entrée
3 power supply Versorgungspegel für Sensor Alimentation du capteur	
ST07	
12	output Analogausgang Sortie
13	ground Masse masse
ST10.1	
20	aux. Relay Hilfsrelais relais
c	+12VDC
c	+12VDC
ST10.2	
21	aux. Relay Hilfsrelais relais
22	aux. Relay Hilfsrelais relais
c	+12VDC
c	+12VDC
ST03	
30	NO Schliesser Contact à fermeture
29	NC Öffner Contact à ouverture
28	relay collective fault Relais Sammel- störung Relais avertisseur

Components / Bauteile / Composants	
LS	level sensor Wasserstand- sensor capteur de niveau
SSR	solid state relay Halbleiter- relais relais statique
STB	Thermal out begrenzter Temperatur- ausgang thermosonde
K1	main contactor Hauptschutz- kontakt Contacteur principal
M1	drain pump Abschläm- pompe Pompe de vidange
Y1-Y4	solenoid valve Magnetventil Electrovanne
S1	control switch Steuerschalter Commutateur de commande
F1	fuse 2.5A Sicherung 2.5A Fusible 2.5A
F2	fuse 2.5A Sicherung 2.5A Fusible 2.5A

ST11	
1	use potential free contact Utiliser un contact libre contact libre
2	safety interlock Sicherheits- sperre Chaine de sécurité
L	control voltage Steuerspannung Tension de commande
N	internal power supply Interne Steuerspannung Alimentation interne


HYGROMATIK

A	release	11.06.18	WI	Datum	FLP 05-50 TPPO	(Zeichnung Nr.)
						S-43-022A.03
					heating voltage: 380 - 415V / 3 / N	
					control voltage: 200 - 240V / 1 / N	
Rev.	Änderung	Datum	Name	Gepr.	Bearb.	Datum

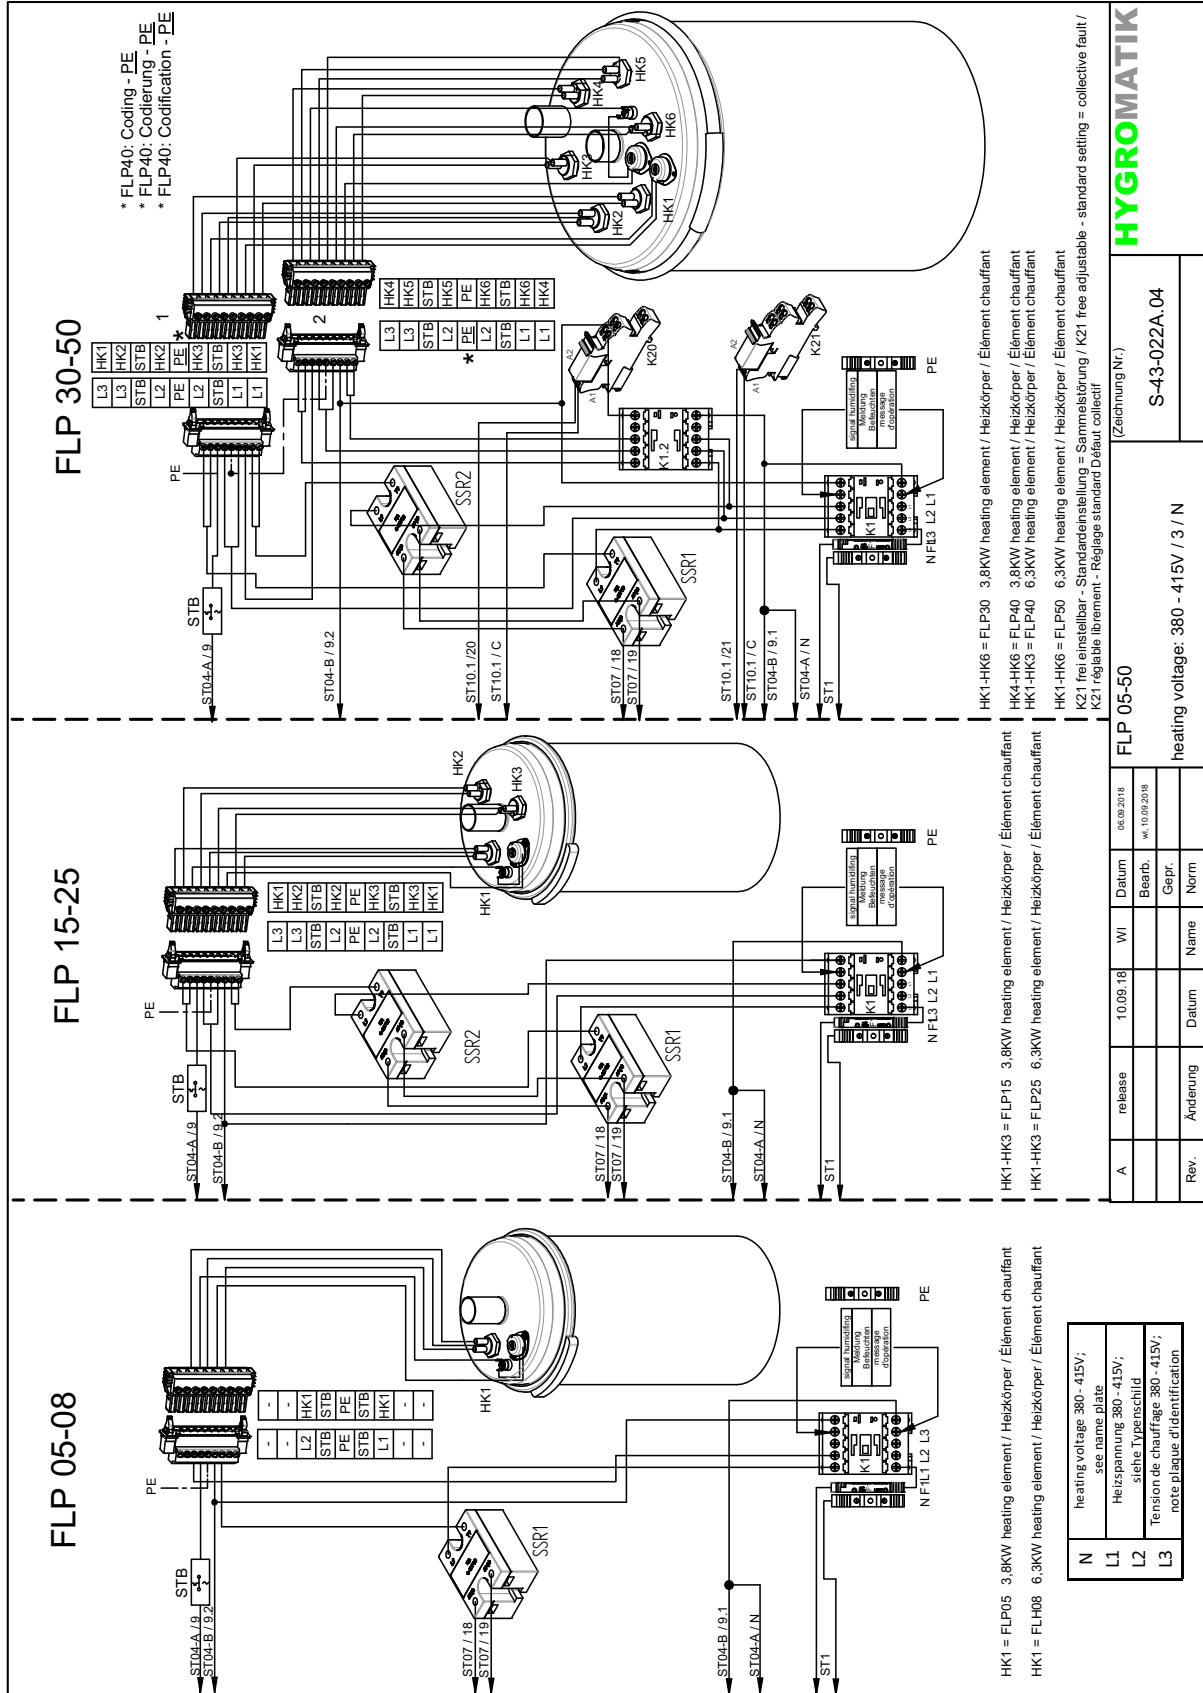

N	heating voltage 380 - 415V; see name plate
L1	Heizspannung 380 - 415V;
L2	siehe Typenschild
L3	Tension de chauffage 380 - 415V; note plaque d'identification

<p>FLP 05-50 heating voltage: 380 - 415V / 3 / N</p>		<p>(Zeichnung Nr.) S-43-022A.04</p>	
		<p>HYGROMATIK</p>	

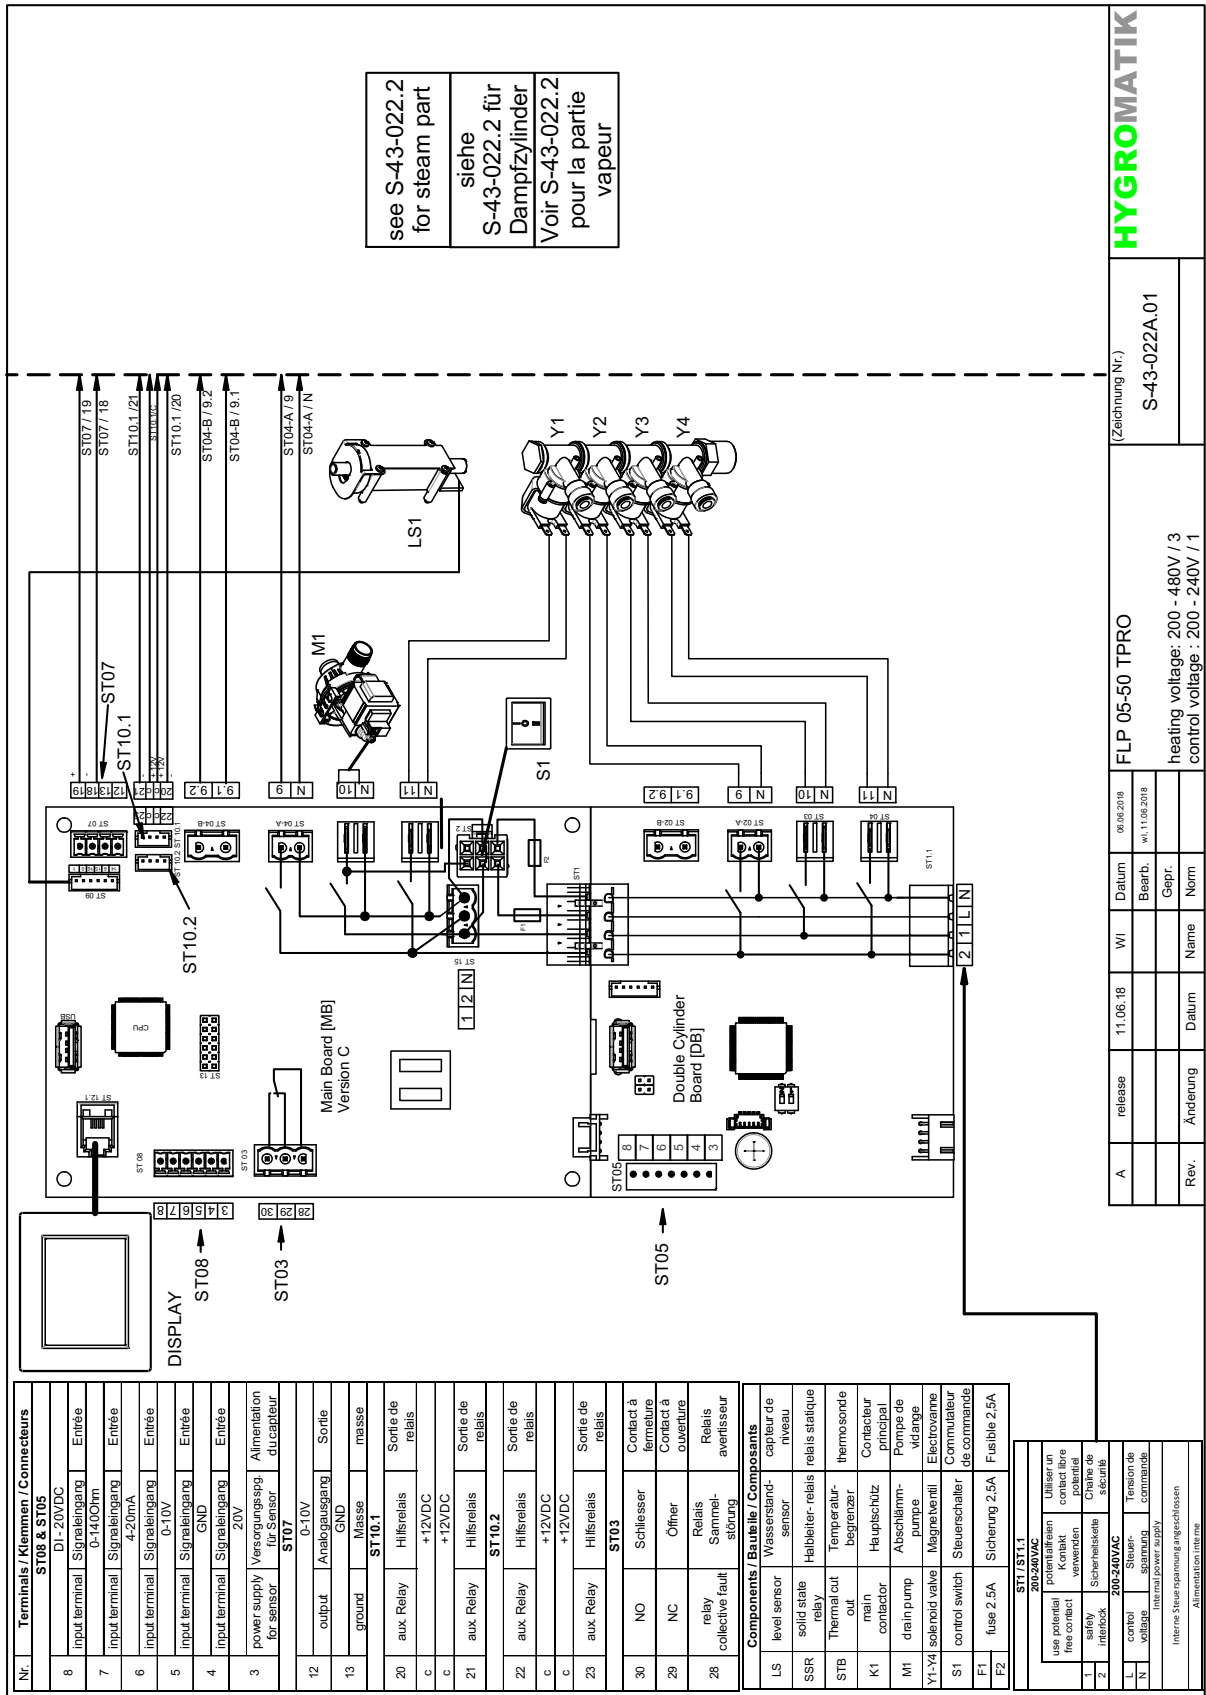

HYGROMATIK

(Zeichnung Nr.)
S-43-022A.01

FLP 05-50 TPRO


heating voltage: 200 - 480V / 3
control voltage: 200 - 240V / 1

release 11.06.18

06.09.2018
Datum
11.06.2018
Bearb.
11.06.2018
Gepr.

Rev. Änderung Datum Name Norm

Interne Steuerspannung angehöhen
Alimentation interne

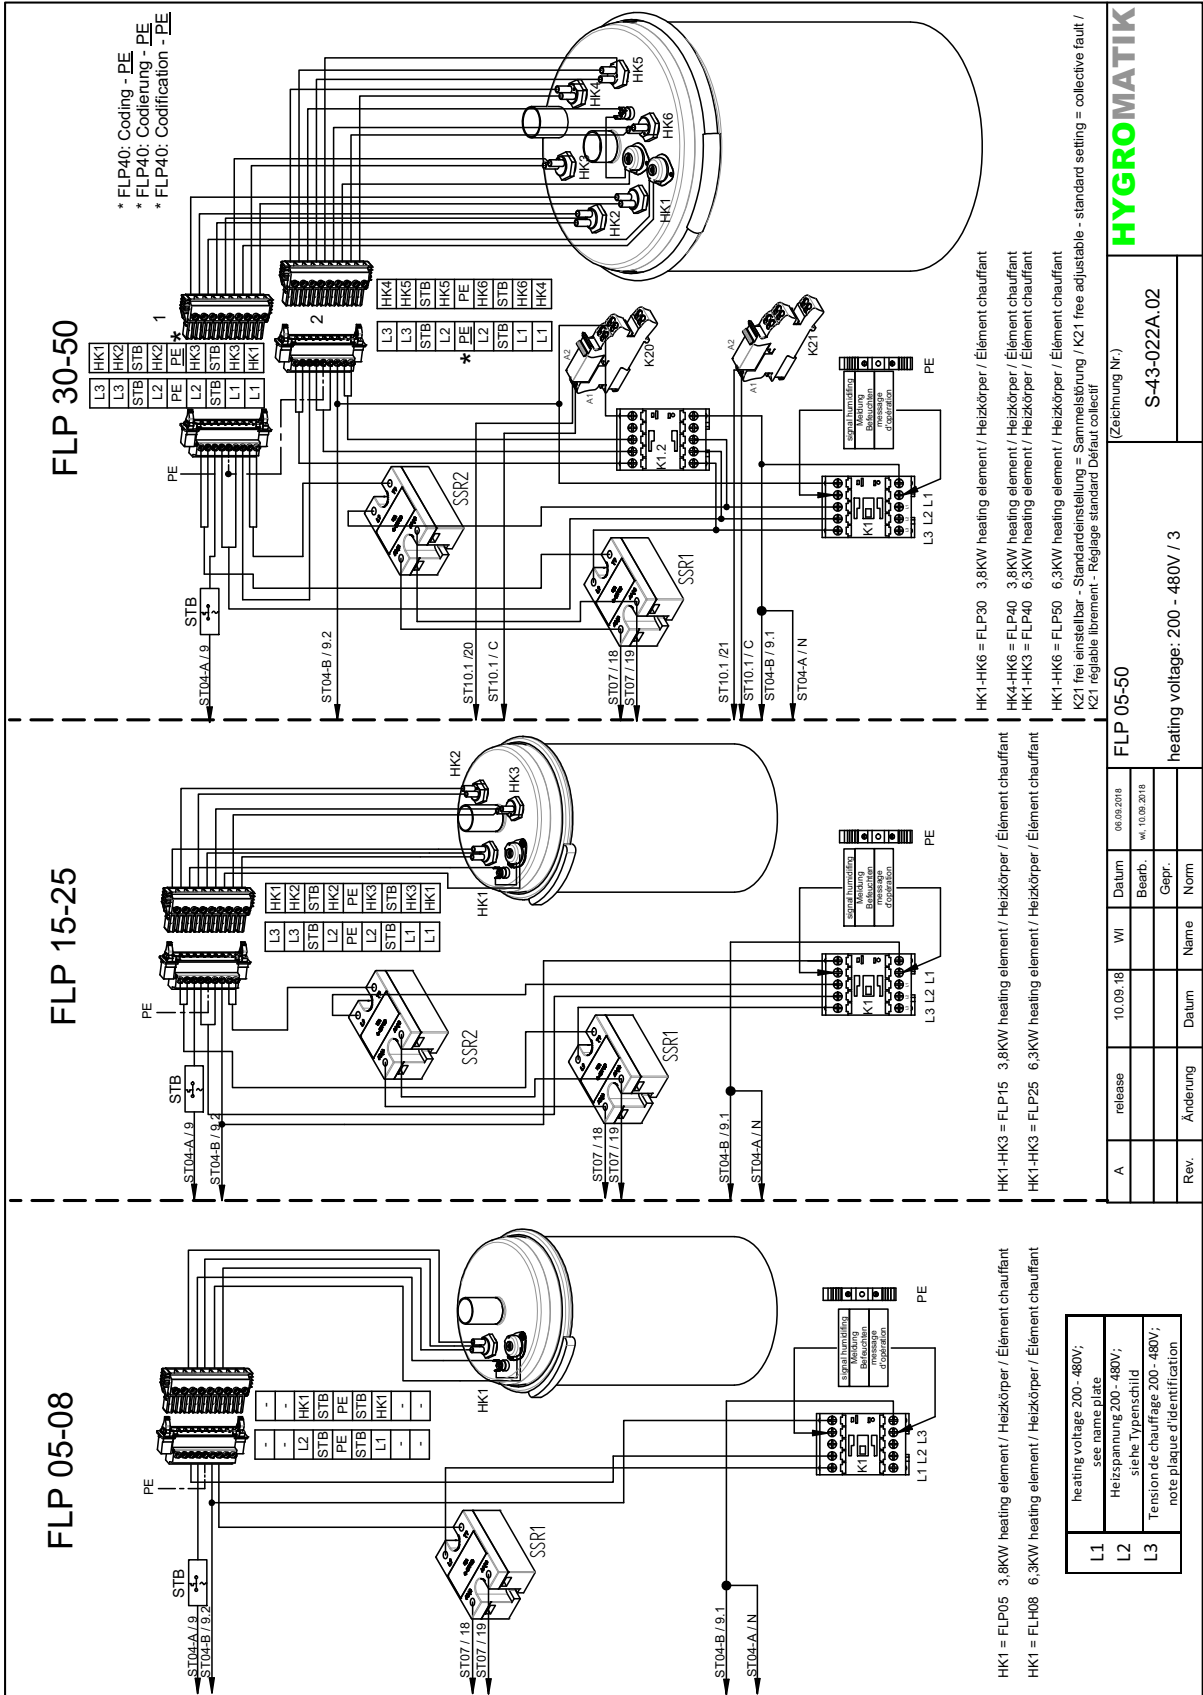

* FLP40: Coding - PE
 * FLP40: Codierung - PE
 * FLP40: Codification - PE

HK1-HK6 = FLP30 3.8KW heating element / Heizkörper / Élément chauffant
 HK4-HK6 = FLP40 3.8KW heating element / Heizkörper / Élément chauffant
 HK1-HK3 = FLP40 6.3KW heating element / Heizkörper / Élément chauffant
 HK1-HK6 = FLP50 6.3KW heating element / Heizkörper / Élément chauffant
 K21 frei einstellbar - Standardstellung = Sammelaböhrung / K21 free adjustable - standard setting = collective fault / K21 réglable librement - Réglage standard Défaut collectif

HYGROMATIK
 (Zeichnung Nr.)
 S-43-022A.02

FLP 05-50
 heating voltage: 200 - 480V / 3

HK1-HK3 = FLP15 3.8KW heating element / Heizkörper / Élément chauffant
 HK1-HK3 = FLP25 6.3KW heating element / Heizkörper / Élément chauffant

Rev.	Änderung	Datum	Name	Norm
A	release	10.09.18	Wi	Datum
			Bearb.	06.09.2018
			Gepr.	Wi, 10.09.2018

HK1 = FLP05 3.8KW heating element / Heizkörper / Élément chauffant
 HK1 = FLH08 6.3KW heating element / Heizkörper / Élément chauffant

L1	heating voltage 200 - 480V; see name plate
L2	Heizspannung 200 - 480V; siehe Typenschild
L3	Tension de chauffage 200 - 480V; note plaque d'identification

8. Glossary

Term	[Index]	Explanation
Actual value	1	The actual value is the measured value of a physical quantity, which is compared with the → <i>Set value</i> [3] during the control process and may give rise to a readjustment, if required.
Relative humidity (r.h.)	2	The relative humidity (r.h.) describes the maximum percentage of moisture which the ambient air can hold at a certain temperature.
Set value	3	The set value of a physical quantity (e.g. the → <i>r. h.</i> [2]) is the set target for a control process.
Steam output	4	The steam output calculated from the electrical power consumption in kg/h.
Demand	5	The demand describes the dimensionless control signal processed by the control system which is converted into a proportional → <i>Internal actuator signal</i> [42] for the power control for steam generation.
Hygrostat	6	Sensor with switching function for the → <i>Relative humidity (r.h.)</i> [2] in rooms. The trigger point for the switching function with potential free contacts can be set mechanically. The hygrostat can be used to control → <i>1 step operation</i> [44] or in the → <i>Interlock (safety) system</i> [11] to protect against excess humidity.
Update function	7	The update function provides the control with an update of parameter settings which is stored on an external USB memory stick. The "Update function" parameter is a read-only value which can be used to read out the status of the update.
SI system of units	8	The system of units with the temperature specified in °C and the quantity specified in kg.
Imperial system of units	9	The system of units used in the USA with the temperature specified in °F (Fahrenheit) and the quantity specified in lbs.
Initialisation	10	The control performs a self-test, during which the welcome screen with the software version is displayed. After the parameter settings and measured values have been read in, the → <i>Main screen</i> [14] is shown on the display. During the subsequent start blow-down, the read values can be used to query the device status, which is "Initialisation" in this phase.
Interlock (safety) system	11	The hardware interlock (safety) system makes it possible to immediately interrupt steam production, e.g. using an emergency stop button. The interlock (safety) system must be closed to operate the unit. The interlock (safety) system must be implemented on-site with one or several potential free contacts (switched in series). It is connected to the control at terminals 1 and 2, with terminal 1 carrying 230 VAC as standard. In a special design (e.g. for the U.S. market), the interlock (safety) system is converted to low voltage through the additional use of a relay to meet local safety requirements. Instead of terminals 1 and 2 on the control, a potential free connection of the relevant DIN rail terminals must then be implemented on-site. If the interlock (safety) system is opened, the status of the unit changes to "Interlock (safety) system open".
Software control command	12	Coded command, which is, for example, sent from the building control system or a PLC via the → <i>Communication interface</i> [13] to the control. The command set available is listed in separate documentation, which is available from HygroMatik on request.
Communication interface	13	Serial computer interface for remote control of the unit using, for example, the → <i>Modbus</i> [17] RTU protocol.
Main screen	14	Screen content during the normal operation of the unit. The main screen includes the main display (in the middle of the screen) and the status icons (left and right of the main display).
Standby heating	16	So that steam production can be started more quickly, the standby heating keeps the water in the cylinder warm, if no → <i>Demand</i> [5] is present. The → <i>Interlock (safety) system</i> [11] must be closed. Heating and pause times are adjustable.
Modbus	17	Modbus is a communications protocol for serial data transmission for the remote control of units, which is widely used in industry. HygroMatik controls use the MODBUS - RTU (remote terminal unit) variant. Separate documentation is available upon request from HygroMatik.
Timer function	18	The timer makes it possible to limit the duration of steam production in the short-time range, starting when steam production is halted (if no demand exists in normal operation), or ECO mode. The timer is triggered by pressing a button, which must be connected to the <i>digital input</i> [97] of the mainboard. In addition, the → <i>Digital function</i> [98] parameter must be set to "Timer_start". The "0" setting deactivates the timer. "1" or "2" is used to specify whether the steam is turned off or if there is a return to ECO mode after the timer has elapsed.
Solenoid valve (SV)	19	The solenoid valves for the water supply to the steam cylinder(s) are labelled with Y1, Y2, Y3 and Y4 in the circuit diagrams.
Start blow-down	20	The unit performs a → <i>Blow-down</i> [58] after it was switched off and has been switched on again. The process varies depending on the unit type. For the → <i>ELDB</i> [77] it is important that, when the main contactor is first switched, overcurrent due to excessive conductivity of the cylinder water does not occur while simultaneously water level is high. A → <i>Partial blow-down</i> [21] is therefore used to ensure that the current does not reach an impermissible value. This procedure is not required for the → <i>HKDB</i> [78]. The only checks carried out here are on the functioning of the level control and the blow-down pump, by carrying out a plausibility check of the measured value of the water level sensor which is transferred in the context of a → <i>partial blow-down</i> [21].
Partial blow-down	21	Only part of the cylinder water is pumped off during the → <i>Blow-down</i> [58]. For the → <i>ELDB</i> [77], a partial blow-down is carried out periodically after 40 solenoid valve operating cycles (fillings), when the standard setting is left untouched. For the → <i>HKDB</i> [78], the frequency of the partial blow-down is determined by the steam volume.
Full blow-down	22	All of the cylinder water is pumped off during the → <i>Blow-down</i> [58].
Dilution	23	A dilution is a → <i>Partial blow-down</i> [21], which is caused by excessive conductivity of the cylinder water. For deconcentration, fresh water is used to top up the cylinder after the partial blow-down.

Glossary ctd. (1)

Term	[Index]	Explanation
Overcurrent blow-down	24	Depending on the selection of the → <i>Control curve</i> , the current is increased to 128% or 113% of the nominal current during a cold start, in order to achieve a quick start characteristic. When the respective current value has been reached, the overcurrent blow-down is started causing the nominal current to revert to the normal value (only for → <i>ELDB [77]</i>).
Max. level blow-down	25	When the water level sensor signals the maximum level, a → <i>Partial blow-down [21]</i> is carried out to reduce the water level (only for → <i>HKDB [78]</i>).
Stand-by blow-down	26	If the unit was switched on for an extended period without a → <i>Demand [5]</i> arising, or if the → <i>Interlock (safety) system [11]</i> was opened for an extended period, a (→ <i>Blow-down [58]</i>) of the cylinder water is performed to prevent germ formation. The interval for triggering the blow-down is defined with the "Standby_blow-down_interval" parameter.
Flushing of dead-end line	27	When this function is activated, the feed water line is flushed during operation phases in which there are no requests in order to prevent germ formation. For this purpose, the inlet solenoid valve and the blow-down pump are activated at the same time. The "Flushing_of_dead-end_line_interval" parameter determines when flushing starts after a request was not received, the "Flushing_of_dead-end_line_duration" parameter determines how long flushing takes. The interlock (safety) system must be closed so that the inlet solenoid valve can be controlled ("partially automatic flushing of dead-end line").
Manual blow-down	28	Pumping out of the cylinder water by touching the "Blow-down" icon on the screen or by a → <i>Software control command [12]</i> via the → <i>Communication interface [13]</i> . Repeated actuation or a corresponding → <i>Software command [12]</i> switches the → <i>Blow-down function [58]</i> off again). The cylinder water may also be pumped by setting the control switch on the device front panel in the "II" position while the control remains switched off.
Thermo sensor	31	With the → <i>HKDB [78]</i> , a thermo sensor is located on the cylinder cover, connected to the heater(s) via a capillary tube. A thermal switch is also arranged on every → <i>Solid state relay [46]</i> . All thermo sensors/thermal switches are connected in series. If one of the thermo sensors/thermal switches is triggered, the power supply to the steam humidifier is interrupted. The thermo sensor(s) on the cylinder(s) have to be reset mechanically after cooling down. The thermal switches are automatically reset after cooling down.
Limitation of operating time	32	The unit stops the steam production according to the number of minutes specified. The time is counted from the point when the interlock (safety) system was closed. To put the unit back into operation, the interlock (safety) system must be opened and closed again, or the → <i>Communication interface [13]</i> must be used to transmit → <i>Software control commands [12]</i> to open and close the virtual interlock (safety) system again. Alternatively, the control switch can also be opened and closed again. This does, however, cause the unit to be restarted. Setting the parameter to a value of "0" deactivates the limitation of operating time.
Steam_amount_service	33	The steam volume produced [kg] is compared to the default value set in the "Steam_amount_service" parameter to obtain a criterion for maintenance requirements. Once the default value has been reached, the message "Steam_amount_counter" is displayed. Once the service has been performed, the steam volume counter has to be reset with "Service_reset_cyl. x". The remaining steam volume can be viewed using the "Steam_until_msg_cyl. x" read value.
Service_main_contactor	34	The operating cycles of the main contactor(s) are recorded by counters and compared to factory-set default values by the software. When a default value is reached, the "Service_main_contactor x" message is displayed on the screen. After a main contactor has been replaced, the respective counter must be reset with the parameter "Main_contactor_x_Reset" (x = number of the main contactor, 1...5).
Floating max. limiter	35	<p>The floating max. limiter serves for protection against excessive humidification of the channel. In case of the room sensor sending a demand while the channel has already reached its maximum humidity capacity, a floating max. limiter allows for a much more sensitive limitation of the steam supply when compared to a max. hygrostat. While the max- hygrostat switches off only when the maximum humidity is reached, the floating max. limiter tracks the humidity progress and turns down the steam production based on a settable control curve until a defined max. humidity is reached. This aims to ensure that no excessive humidification may occur in the channel.</p> <p>To use this function, a 2nd humidity sensor must be mounted in the channel (typical mounting position is the range where the steam is introduced into the channel by the humidifier).</p> <p>Connecting the 2nd humidity sensor</p> <p>If the unit only features a mainboard, the 1st humidity sensor must be of the "Humidity sensor with 0...10 V output voltage" type to allow for the implementation of the floating max. limiter function. The second humidity sensor is then wired to the current input of the mainboard. To allow for this, the sensor must feature a 4...20 mA current output signal. In case of an additional board built into the unit, however, the 2nd humidity sensor is to be wired to this board making use of the 0...10 V voltage input, just as is the case with the mainboard. Consequently, the humidity sensor must be of the 0...10 V voltage type.</p> <p>Activating the floating max. limiter</p> <p>Activating is accomplished by setting the "Control settings" parameter in submenu "Control" to "11" or "12". The setting must be in accordance with the wiring chosen for the 2nd humidity sensor. If no 2nd humidity sensor is connected, the parameter setting is not saved.</p> <p>Example: The 2nd humidity sensor was connected to the current input of the mainboard. For the "Control settings" parameter, the "11" is to be chosen as the setting value.</p> <p>Parameter settings for the floating max. limiter</p> <p>For the floating turning-down of the humidity set value, the control curve steepness may be set with the "PI-controller_max_gain" parameter. Factory pre-setting (FP) is "5". The humidity set value for the shut-down point is defined by the "Humidity_set_max" parameter (FP = 80%).</p>

Glossary ctd. (2)

Term	[Index]	Explanation
Cylinder full status	38	When the unit measures a voltage at the sensor electrode, it reports a cylinder full status. In this case, the cylinder water level is so high that it creates an electrical bridge between one of the power electrodes and the sensor electrode. If the cylinder full status continues for an hour, steam production is shut down and a fault message is generated.
Level control	39	With the → <i>HKDB [78]</i> , communicating tubes are used for the contact-free measurement of the water level in the cylinder.
Max. level	40	The maximum water level value supplied by the → <i>Level control</i> is reached. If this state is reached 5x in succession within a predefined time interval, the control issues a "Error_max.level" message (only → <i>HKDB [78]</i>).
Internal actuator signal	42	Actuator signal for the control of the power element of the unit concerned.
Max. steam output	43	Reduction of output power to 25... 100% of the nominal output. Can lead to improved control behaviour at lower output requirements.
1 step operation	44	On/off operation of the steam humidifier without control function through a potential free contact suitable for low voltage, to be supplied on-site. The control can, for example, be implemented using a → <i>Hygrostat [6]</i> , which has to be connected to a potential free make contact between terminals 3 and 5 of the control.
Solid state relay (SSR)	46	Electronical power switch mounted on a thermally monitored heat sink (only → <i>HKDB [78]</i>).
Humidification	47	The unit produces steam, if a → <i>Hygrostat [6]</i> , an → <i>External control [73]</i> , a Humidity sensor or a → <i>Software control command [12]</i> has issued a → <i>Demand [5]</i> and the → <i>Interlock (safety) system [11]</i> is closed.
PWM	48	Pulse width modulation with variable frequency and variable duty cycle for the control of the heater current via the → <i>Solid state relay [46]</i> . Because the heater current determines the steam output, it is possible to control the steam output in this way (only for → <i>HKDB [78]</i>).
Correction_x_signal	49	Used for the calibration of a humidity sensor output signal as the → <i>Input signal [72]</i> of the control (x = "V", "mA", "Ω").
Δ Dehumidifying	50	Specifies the percentage by which the → <i>Set value [3]</i> of the → <i>r.h. [2]</i> has to be exceeded until the "Dehumidify" signal becomes available at the selected relay, if this relay is set to "210".
Δ Humidity_ECO	51	To conserve energy, the → <i>set value [3]</i> of the → <i>r.h. [2]</i> can be lowered by the value stored in "Δ Humidity_ECO". For this purpose, a → <i>pushbutton [106]</i> has to be wired to the → <i>Digital input</i> and the function of the digital input has to be programmed to "ECO". This function is available only in connection with the "PI controller" control type.
Steam_down_time_to_fault	53	If the level of the cylinder water has not changed within the time defined in this parameter, this indicates that a malfunction is present. The steam production is then suspended and the "Steam_down_time" fault message is output (only → <i>HKDB [78]</i>).
Filling_cycled	54	The fill operation does not take place continuously, but with breaks, in order to prevent the overflowing of the filling cup (HyFlow). Filling and pause intervals can be adjusted separately.
Blow-down correction	55	If the water has high electrical conductivity or if there is a very high level of maintenance, it may be useful to increase the blow-down frequency. At low electrical conductivity, however, a reduction in the frequency of the blow-down may be useful. Depending on the water quality, the blow-down rate can be adjusted in 10 steps ("0" is the default). More frequent blow-down: Values up to max. +5, less frequent blow-down values down to -5, whereby "-5" means that blow-down is completely switched off.
Pumps_without_main_contactor	56	In rare cases, leakage currents may flow through the water to the earth during the blow-down process. To prevent a sensitive fault current circuit breaker from tripping, the main contactor can be switched off during the pumping process (only → <i>ELDB [77]</i>).
HyFlush (option)	57	When open, an additional solenoid valve produces a rotating turbulence for an improved discharge of scale deposits during blow-down. The solenoid valve is controlled by the software with a fixed ratio of active and pause times.
Blow-down	58	Pumping off the water in the cylinder for the following reasons: Elimination of scale deposits, replacement of water to prevent germ formation and reduction of conductivity (only → <i>ELDB [77]</i>), which increases due to evaporation and leads to increased power consumption. A distinction is made between → <i>Full blow-down [22]</i> and → <i>Partial blow-down [21]</i> .
HyCool (option)	59	Waste water cooling system for the protection of temperature-sensitive plastic waste water pipes. A solenoid valve is used to mix fresh water with the waste water so that the water temperature does not exceed 60 °C.
ECO mode	61	Lowering of → <i>Humidity set value [3]</i> to conserve energy.
Power level	63	If the → <i>HKDB [78]</i> is equipped with more than 3 heaters, the power is provided in 2 levels from a certain performance class onwards. As long as a certain threshold value has not been reached, the heating performance required is exclusively controlled via the → <i>Solid state relay [46]</i> and 3 heater elements by means of proportional control (stage 1). If the output power demand exceeds the power available in stage 1, 3 more heater elements are additionally switched on in a 1-step mode (stage 2). The power demand beyond what is available in stage 2 is then covered in stage 1 by the solid state relay driven in proportional mode.
Relay assignment	65	If the basic relay or additional relays which may be present are not used for signalling but for direct load switching, the maximum contact load 250 VAC/8 A must be taken into account
Control curves	68	In the "Load optimised" factory setting, the power control of an → <i>ELDB [77]</i> is set so that a current of 113% of the nominal current is permitted during a cold start to avoid overloading the power supply. In the "Energy optimised" setting, the current is increased to 128% of the nominal current during a cold start for achievement of a preferably short heat-up period. In the "Process optimised" setting, control is particularly fine.

Glossary ctd. (3)

Term	[Index]	Explanation
Output signal	69	Signal 0... 10 V on terminals 12 and 13 (GND), which is proportional to the input signal. Can be used to control downstream units.
Input signal	72	The electrical signal fed to the control at the ST08 plug of the mainboard or the ST05 plug of the relay board. Depending on the signal characteristic (Voltage, current or resistivity progress), a certain pin of the corresponding plug is used. The signal range of the input signal (e.g. 0...10V) is to be adapted by setting of the related parameter. Using the <i>Correction_x_signal</i> [49] parameters, the output signal of a humidity sensor may be calibrated.
External controller	73	The control uses the output signal of an external controller to control the power element for steam generation. The input level of the control can be adapted to different signal types and value ranges. Other possible input signals are the output signal of a humidity sensor (in connection with the internal PI controller), the switching contact of a <i>Hygrostat</i> [6] (for <i>1 step operation</i> [44]) and a <i>Software command</i> [12] via the <i>Communication interface</i> [13].
Dropout delay	74	By assigning the "8" value to one of the relay contacts, a control signal for the delayed closing of a steam valve is made available for pressure reduction. The dropout delay is set with the "Humidification_off_delay" parameter. Factory default is 60 s.
Main contactor	75	The installed main contactors are labelled K1...K4. The operating cycles of the main contactor(s) are monitored and compared with the value specified by the manufacturer for the expected service life. When the stored value is reached, the message "Service_main_contactor" is generated. After the main contactor has been replaced, the status message must be deleted, for example using the <i>Main_contactor_K1_Reset</i> = "1" parameter.
ELDB	77	Electrode steam humidifier.
HKDB	78	Heater steam humidifier.
HVAC	79	Heating, Ventilation, Air Condition: Generic term in the English language area for air conditioning equipment.
Virtual interlock (safety) system	86	If control via <i>Communication interface</i> [13] was selected, software is used to place a logical switch in series with the hardware interlock (safety) system. This switch can be opened and closed via <i>Software commands</i> [12]. If the hardware interlock (safety) system is closed and the switch is opened via software control command, steam production is stopped and the unit is placed in "Remote switch-off" status.
Supply voltage	89	The units are designed for connection to supply voltage ranges (e.g. 380 to 415 VAC in case of a 400 VAC unit, s. name plate)
Unit name	90	Here, "Plant 1" is entered by default.
Weekly timer	91	The timer makes it possible to program 2 periods per day of the week, each defined by a start time and an end time. The humidity set-value can be preset for each time period.
Recording	93	The control can record 10 data sets internally on a rolling basis. Snapshots of the unit status are carried out at intervals of 10 s, which can be helpful for troubleshooting. When the storage space is filled, a new set of data overrides the oldest entry. The complete record can be saved to a USB stick with NTFS formatting.
Slave	94	The unit functions as a slave in a master/slave arrangement, where a control unit (master) can control up to 3 slaves for the purpose of improving the output performance of the entire system. The slaves are switched sequentially. The output signal of the master on terminals 12, 13 is connected to the input terminals of the 1. slave. The input signal assignment of the 1st slave (and all subsequent ones) must be set to "Slave", this also applies to the output signal assignment for the master and all slaves.
Warning message	95	The electrodes (for the <i>ELDB</i> [77]), the blow-down pump and the solenoid valves are items with limited service life due to wear and tear. They must be checked during maintenance works and replaced if required. To avoid unplanned maintenance requirements, alerts can be set up for the respective items, which are activated when a defined state of wear is reached. The criteria for the alerts to be triggered can be defined in three stages each through the sensitivity setting.
PI controller	96	Internal controller with control characteristics which contain a Proportional part and an Intergal part. Both parts can be changed as parameters.
Digital input	97	Digital input on the mainboard and on the relay boards for switching functions. A logical meaning (e.g. timer start) is assigned to the digital input via the <i>Digital_input_function</i> [98] parameter. The digital input must be wired on-site in accordance with its use, e.g. with a <i>Pushbutton</i> [106] or a <i>Switch (NO)</i> [102] against the 20 VDC on terminal 8 on the mainboard terminal strip ST08 or the terminal strip ST05 on the other available boards. When the 20 VDC voltage is applied (short-term via a <i>Pushbutton</i> [106] or permanent via a <i>Switch (NO)</i> [102]), as required in accordance with <i>Digital_input_function</i> [98] parameter setting), the switching function is carried out.
Digital_input_function	98	Determines which function will be executed if the <i>Digital input</i> [97] on the mainboard or one of the relay boards is loaded externally with level "1" (= 12 V).
Nominal power output	99	The steam output range given on the name plate derived from the allowable range of supply voltages

Glossary ctd. (4)

Term	[Index]	Explanation
Power section	100	That part of the unit that makes the energy conversion from the current supplied into steam output
Load shedding	101	Load shedding can be set up by assigning the →Function_digital_input [98] "Power limitation" to the →Digital_input [97]. When the →Digital_input [97] is then connected to an →Auxiliary_voltage [105] by means of a →Switch (NO) [102], →Max. steam output [43] is reduced by the percentage set up in the "Δ power limitation" parameter. After withdrawal of the voltage normal operation is reestablished.
Switch (NO)	102	Electrical switch with Normally Open contacts
Steam_down_time_min.	103	Steam-down time between fillings is continuously monitored. If the minimum steam-down time set falls below the value set up several times in a row, an indication exits that the cylinder water conductivity has risen to an extend non tolerable. For conductivity reduction, →Dilution [23] is triggered (only →ELDB [77]).
Slave_hysteresis	104	In order to avoid unnecessary frequent switching on and off of →Slave [94] units (as required by the output demand) or an oscillating tendency, switching is made with a hysteresis. Example: One Master controls one Slave. Switching on the slave without hysteresis would occur at 50% output demand, same situation for switching the slave off. With a 1% hysteresis, switching on the slave is at 51% output demand whereas switching off is at 49%. By this, instability of the switch-off point is accomplished.
Auxiliary voltage	105	DC voltage in the range of 5...20V for activating the →Digital_input [97] via a →Pushbutton switch [106] or a →Switch [102]. +20 VDC is available on Pin 3 of ST08 (mainboard) or ST05 (relay board). The auxiliary voltage is required to switch the →Digital_input [97] on the mainboard or a relay board in order to trigger the function defined by setting the →Function_digital_input [98] (e.g. switch on ECO mode).
Push button	106	Electrical switch for momentary action
Fully automatic deadleg flushing	107	For "fully automatic" →Deadleg flushing [27], an additional relay must be implemented that allows for switching the intake solenoid valve even when the →Interlock (safety) system [11] is open. Control of this additional relay is either by the base relay on the mainboard or a coupling relay. The relay used for this function must have "68" as the assignment.

9. Technical Data

Steam humidifier FLE

	Technical specifications FlexLine electrodes						
Unit type	FLE05	FLE10	FLE15	FLE20	FLE25	FLE30	FLE40
Steam output [kg/h]	4,8-5,2	9,5-10,4	14,3-15,6	19,0-20,8	24,0-26,0	28,5-31,2	38,2-41,7
Electrical connection ⁽¹⁾	380-415V /3Ph /50-60Hz						
Rated power [kW]	3,6-3,9	7,1-7,8	10,7-11,7	14,3-15,6	18-19,5	21,4-23,4	28,6-31,3
Nominal current [A]	5,4	10,8	16,3	21,7	27,2	32,5	43,5
Fuse [A] ⁽³⁾	3 x 10	3 x 16	3 x 20	3 x 32		3 x 40	3 x 50
Number of steam cylinder	1						
Control	FlexLine mainboard with capacitive 3.5" touch colour display						
Separate control voltage ⁽⁴⁾	220-240V /N /2,5A						
Steam hose connection [mm]	1 x 25			1 x 40			2 x 40 ⁽⁵⁾
Empty weight [kg]	16		22		23	26	27
Max. filling capacity [l]	5		13			21	
Operation weight [kg]	21		36		37	47	48
Width ⁽⁶⁾ [mm]	540					580	
Height ⁽⁶⁾ [mm]	535		695			750	
Depth ⁽⁶⁾ [mm]	320					355	
Water connection	tap water of varying qualities 1 to 10bar, 1 to 10 bar, for 3/4" external thread						
Drain water connection	Connection Ø 1 1/4"						

	Technical specifications FlexLine electrodes				
Unit type	FLE50	FLE65	FLE80	FLE100	FLE130
Steam output [kg/h]	47,8-52,2	62,0-67,5	76,4-83,4	95,5-104,4	124,0-135,0
Electrical connection ⁽¹⁾	380-415V /3Ph /50-60Hz				
Rated power [kW]	35,9-39,2	46,3-50,6	2 x 28,6-31,3	2 x 35,8-39,1	2 x 46,3-50,6
Nominal current [A]	54,5	70,4	2 x 43,5	2 x 54,5	2 x 70,4
Fuse [A] ⁽³⁾	3 x 63	3 x 80	2 x 3 x 50	2 x 3 x 63	2 x 3 x 80
Number of steam cylinder	1		2		
Control	FlexLine mainboard with capacitive 3.5" touch colour display				
Separate control voltage ⁽⁴⁾	220-240V /N /2,5A				
Steam hose connection [mm]	2 x 40		4 x 40 ⁽⁵⁾	4 x 40	
Empty weight [kg]	33	34	66	75	
Max. filling capacity [l]	36		42	71	
Operation weight [kg]	69	70	108	147	
Width ⁽⁶⁾ [mm]	640		1130	1170	
Height ⁽⁶⁾ [mm]	785		750	785	
Depth ⁽⁶⁾ [mm]	420				
Water connection	tap water of varying qualities 1 to 10bar, 1 to 10 bar, for 3/4" external thread				
Drain water connection	Connection Ø 1 1/4"		2x Connection Ø 1 1/4"		

⁽¹⁾ Other voltages upon request.

⁽³⁾ 13/28% above nominal power consumption after full blowdown. Observe actuation characteristics of automatic circuit-breakers. If necessary, select the next highest circuit-breaker level.

⁽⁴⁾ Internal control voltage upon request.

⁽⁵⁾ Incl. Y-piece DN40.

⁽⁶⁾ Outer dimensions of width and depth. Height incl. drain connection.

Steam humidifier FLH

Unit type	Technical specifications FlexLine Heater					
	FLH06	FLH09	FLH15	FLH25	FLH30	FLH40
Steam output [kg/h]	5,5-6,5	8,2-9,8	13,7-16,4	22,7-27,1	27,4-32,7	36,5-43,5
Electrical connection ⁽¹⁾	380-415V /3Ph /50-60Hz					
Rated power [kW]	4,1-4,9	6,2-7,3	10,3-12,3	17,1-20,3	20,6-24,5	27,3-32,6
Nominal current [A]	10,7-11,7	16-17,5	15,6-17,1	25,9-28,3	31,2-34,1	41,5-45,4
Fuse [A]	3 x 16	3 x 20		3 x 32	3 x 35	3 x 50
Number of steam cylinder	1					
Control	FlexLine mainboard with capacitive 3.5" touch colour display					
Separate control voltage ⁽⁴⁾	220-240V /N /2,5A					
Steam hose connection [mm]	1 x 25			1 x 40	1 x 40 ⁽⁵⁾	2 x 40
Empty weight [kg]	19		25		36	37
Max. filling capacity [l]	5		14		36	
Operation weight [kg]	24		40		72	74
Width ⁽⁶⁾ [mm]	540				640	
Height ⁽⁶⁾ [mm]	535		695		785	
Depth ⁽⁶⁾ [mm]	320				420	
Water connection	fully demineralized water / cleaned condensate / partially softened tap water of varying qualities 1 to 10bar, 1 to 10 bar, for 3/4" external thread					
Drain water connection	Connection Ø 1 1/4"					

Unit type	Technical specifications FlexLine Heater		
	FLH50	FLH80	FLH100
Steam output [kg/h]	45,5-54,3	73,0-87,0	91,0-108,5
Electrical connection ⁽¹⁾	380-415V /3Ph /50-60Hz		
Rated power [kW]	34,1-40,7	2 x 27,3-32,6	2 x 34,1-40,7
Nominal current [A]	51,8-56,6	2 x 41,5-45,4	2 x 51,8-56,6
Fuse [A]	3 x 63	2 x 3 x 50	2 x 3 x 63
Number of steam cylinder	1	2	
Control	FlexLine mainboard with capacitive 3.5" touch colour display		
Separate control voltage ⁽⁴⁾	220-240V /N /2,5A		
Steam hose connection [mm]	2 x 40	4 x 40	
Empty weight [kg]	37	75	80
Max. filling capacity [l]	36	71	
Operation weight [kg]	74	147	152
Width ⁽⁶⁾ [mm]	640	1170	
Height ⁽⁶⁾ [mm]	785		
Depth ⁽⁶⁾ [mm]	420		
Water connection	fully demineralized water / cleaned condensate / partially softened tap water of varying qualities 1 to 10bar, 1 to 10 bar, for 3/4" external thread		
Drain water connection	Connection Ø 1 1/4"	2x Connection Ø 1 1/4"	

⁽¹⁾ Other voltages upon request.

⁽⁴⁾ Internal control voltage upon request.

⁽⁵⁾ Incl. Y-piece DN40.

⁽⁶⁾ Outer dimensions of width and depth. Height incl. drain connection.

Steam humidifier FLP

Technical specifications FlexLinePlus Heater (FLPxx-T)

Technical specification FlexLine Process Heater (FLPxx-TPRO)

Unit type	FLP05	FLP08	FLP15	FLP25	FLP30	FLP40	FLP50
Steam output [kg/h]	4,6-5,5	7,6-9,0	13,7-16,4	22,7-27,1	27,4-32,7	36,5-43,5	45,5-54,3
Electrical supply ⁽¹⁾	380-415V /3Ph /50-60Hz						
Power rating [kW]	3,4-4,1	5,7-6,8	10,3-12,3	17,1-20,3	20,6-24,5	27,3-32,6	34,1-40,7
Nominal current [A]	9-9,9	15-16,3	15,6-17,1	25,9-28,3	31,2-34,1	41,5-45,4	51,8-56,6
Circuit Protection [A]	3 x 16	3 x 20		3 x 32	3 x 35	3 x 50	3 x 63
Number of steam cylinder	1						
Control	FlexLine-mainboard with capacitive 3.5 inch touch colour display						
Separate control voltage ⁽⁴⁾	220-240V /N /2,5A						
Steam hose connection [mm]	1 x 25		1 x 40		2 x 40 ⁽⁵⁾	2 x 40	
Empty weight [kg]	32		35		41		
Max. filling volume [l]	15				30		
Operation weight [kg]	47		50		71		
Width ⁽⁶⁾ [mm]	650						
Height ⁽⁶⁾ [mm]	855						
Depth ⁽⁶⁾ [mm]	380						
Water connection	FlexLinePlus: Fully demineralized water / cleaned condensate / partially softened Water / tap water (different qualities) 1 to 10bar, with 3/4" connection for external thread						
	FlexLinePlus Professional: Fully demineralized water / cleaned condensate 1 to 10bar, with 3/4" connection for external thread						
Drain water connection	Connection Ø 1 1/4"						


⁽¹⁾ Other voltages upon request.


 

⁽⁴⁾ Internal control voltage upon request






⁽⁵⁾ Inclusive Y-piece DN40

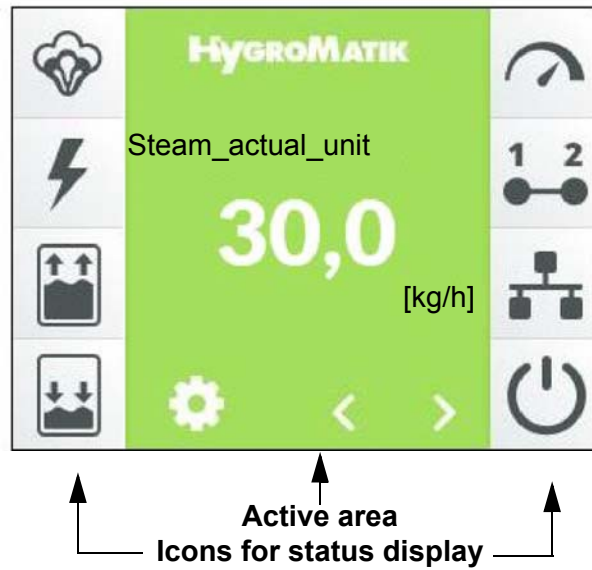




 


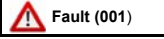⁽⁶⁾ Outer dimensions of width and depth. Height incl. drain connection.

Screen



Active screen area	Use
	<p>Main display for operating values, navigation using the scroll keys^{*)}.</p>
 <p>^{*)}</p>	<p>Scroll buttons can be used to display the following operating values:</p> <ul style="list-style-type: none"> • Humidity_actual_value [%] • Humidity_set-value [%] ^{1),2)}; touching it opens a screen keyboard ^{**)} that allows for changing the set value • Steam_actual_unit [kg/h] • Steam_output_max. [%] • Demand [%] • Control_signal_internal [%] • Output_signal • Current_actual_cyl. 1 [A] (Electrode steam humidifiers only) • Current_actual_cyl. 2 [A] (Electrode steam humidifier double cyl. units only) • Waterlevel_cyl. 1 [mm] (Heater steam humidifiers only) • Waterlevel_cyl. 2 [mm] (Heater steam humidifier double cylinder units only) <p>¹⁾only when „PI controller“ is set ²⁾ not in „Weekly timer“ mode; exemption: when „ECO“ is selected as the steam production mode, the humidity set-value is output in „Weekly timer“ mode as well.</p>
<p>^{**)}</p> 	<p>Screen keyboard for changing the humidity set value; is displayed when the humidity set value display is touched; allows direct changing of the set value.</p> <p>Saving of the input by touching the confirmation tick in the upper right corner, exit without saving by touching the „X“ in the upper left corner.</p>

Active screen area	Use
	Button to call up set-up mode (via password). Password „000“ -> operating functions of user level (see Section 5.5) Password „010“ -> operating functions of operator level (see Section 5.7)
  	In the event of a fault or a service message, the relevant display field is shown instead of the HygroMatik logo. Touching it opens the unit info screen (see Section 5.9).
	Unit info screen (see Section 5.9) for the display of error and service messages in plain text. Is displayed by touching the error or service message.

Icon	Status	Meaning
	dark bright flashes	Steam generation active No steam generation Cylinder full; when fault display is additionally shown: Fault steam generation
	dark bright flashes	Main contactor switched Main contactor not switched Fault main contactor
	dark bright flashes	Filling active No filling Fault filling
	dark bright flashes	Blow-down active No blow-down Fault blow-down <u>Manual blow-down</u> A manual blow-down can be triggered by touching the icon. Touching the icon again stops the manual blow-down. Max. blow-down time corresponds to the parameter setting for full blow-down
	dark bright flashes	Demand has been made No demand has been made Fault demand
	dark bright	Interlock (safety) system closed Interlock (safety) system open
	dark bright	Virtual interlock (safety) system closed (via communication interface) Virtual interlock (safety) system open
	dark bright flashes	Operating mode display No humidity control enabling due to e.g. an open safety interlock (details can be found in Read_values/Status_unit). Unit is in the initialisation phase

HYGROMATIK[®]

AIRTREND Limited

Predstavništvo u Beogradu
Kumanovska 14, 11000 Beograd
Tel: 011 383 68 86, 308 57 40
Faks: 011 344 41 13
e-mail: gobrid@eunet.rs
web: www.airtrend.rs

